










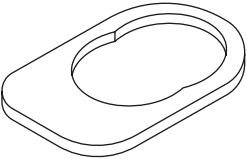
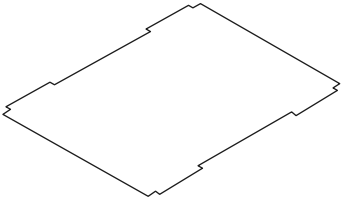
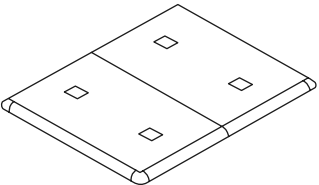
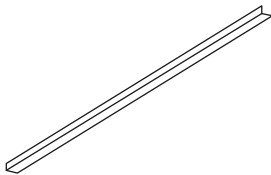





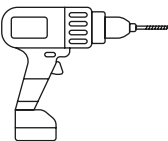
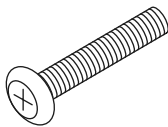



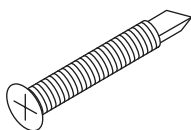


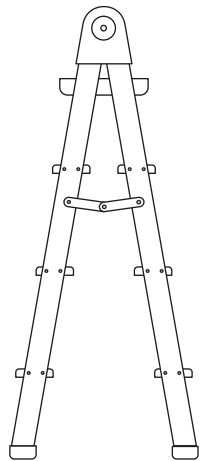

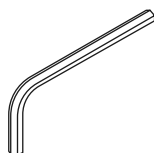


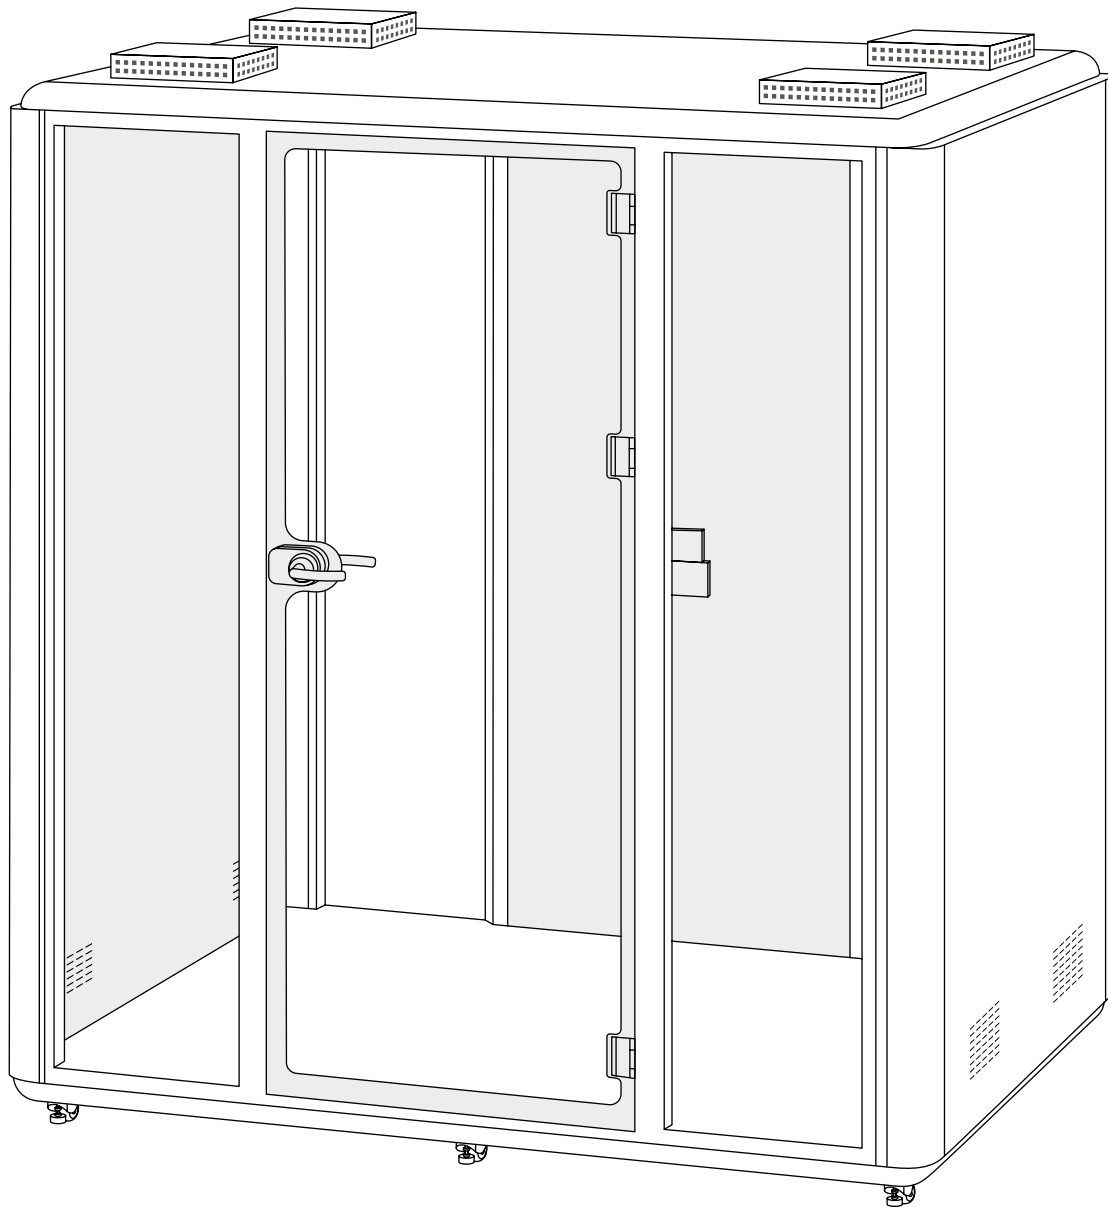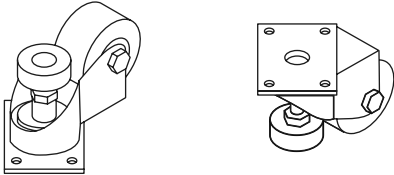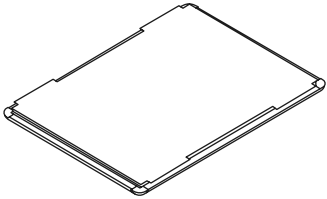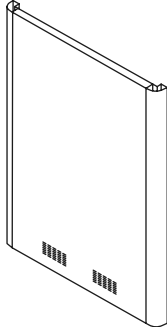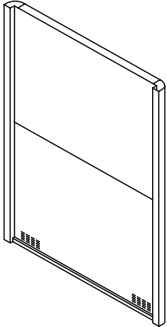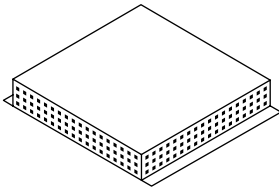

## ASSEMBLY INSTRUCTIONS

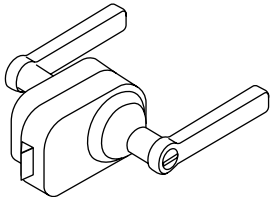


### PARTS LISTING


A-01 x6			A-08 x1		A-09 
A-02 x1			A-09 x16		
A-03 x1	A-03 	A-04 	A-10 x4		
A-04 x1			A-11 x1		
A-05 x4	A-05 	A-06 	A-12 x1		
A-06 x1			A-13 x1		
A-07 x1			A-14 x1		

ACCESSORIES		SELF-SUPPLIED TOOLS	
B-01 x4		C-01 x2	GLASS SUCTION CUPS 
B-02 x34	M6x10 	C-02 x1	SCREWDRIVER 
B-03 x30	M6x16 	C-03 x1	ELECTRIC SCREWDRIVER 
B-04 x30	M6x35 	C-04 x1	RUBBER Mallet 
B-05 x4	M4x16 	C-05 x1	SPIRIT LEVEL 
B-06 x4	M4x30 	C-06 x1	ADJUSTABLE WRENCH 
B-07 x30		C-07 x2	LADDER 
B-08 x1	3 mm 		
B-09 x1	5 mm 		
B-10 x1		<div><b>Recommendation:</b> Minimum 4 people required for assembly</div>	


### 01. Assemble castors. A-01 / A-02

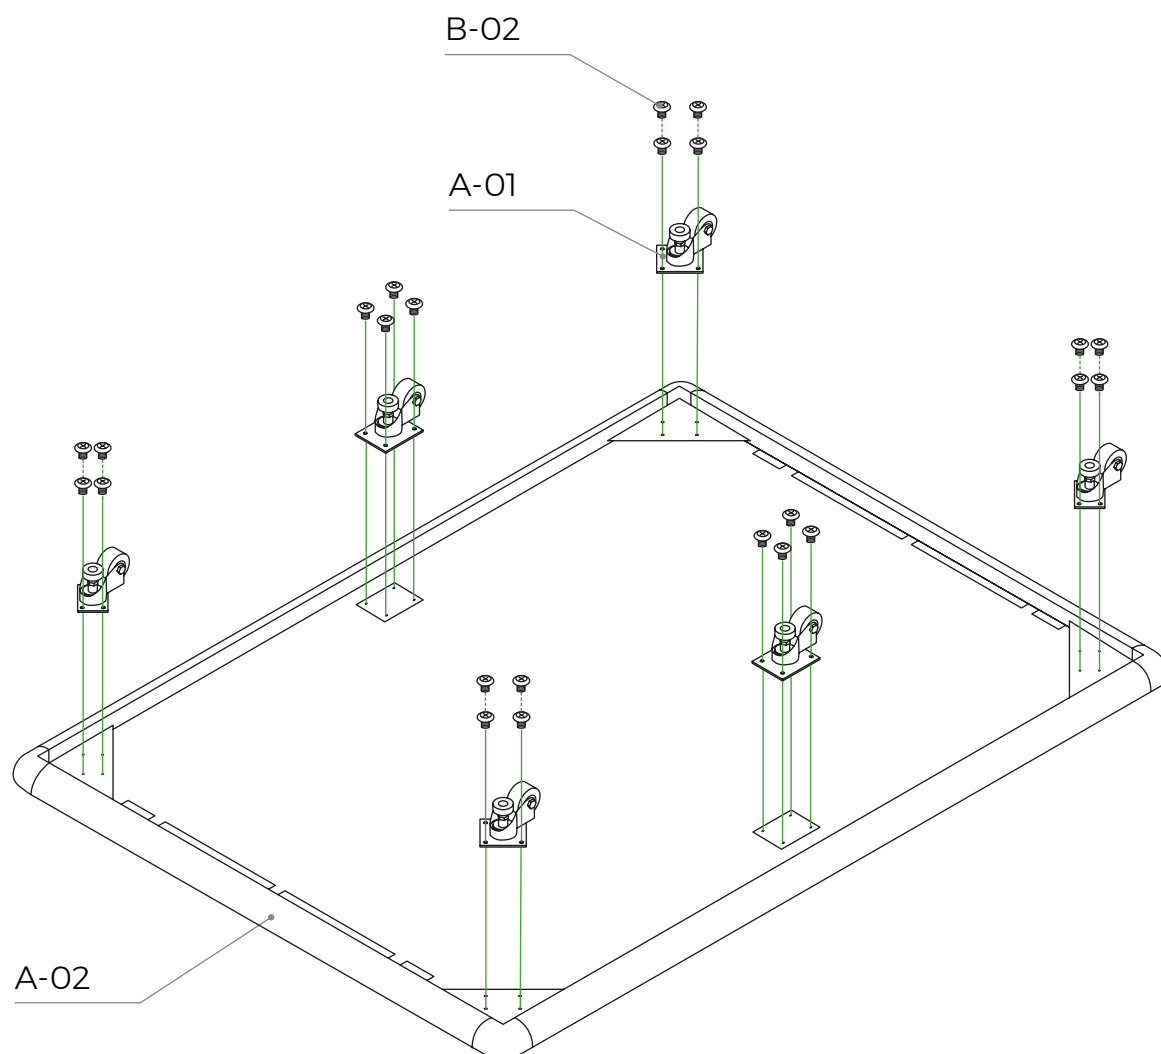

#### TOOLS



**02.** Use a spirit level to measure. A-01 / A-02

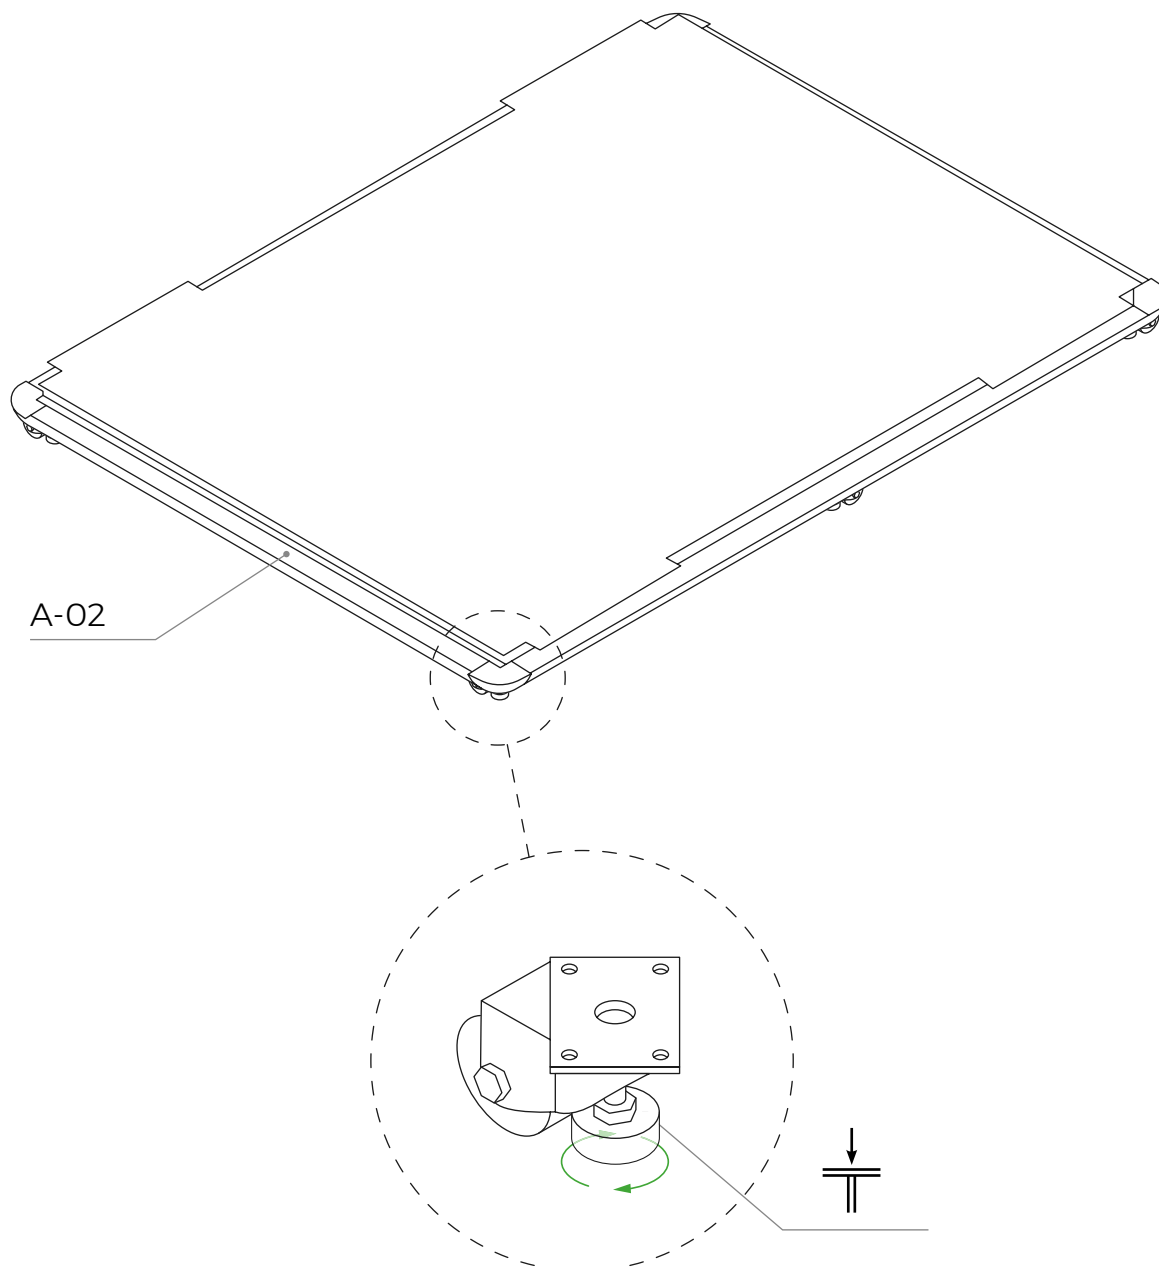


**IMPORTANT:** Unscrew all leveling glides before moving the booth.


### TOOLS




### 03. Walls assembly. A-03 / A-04

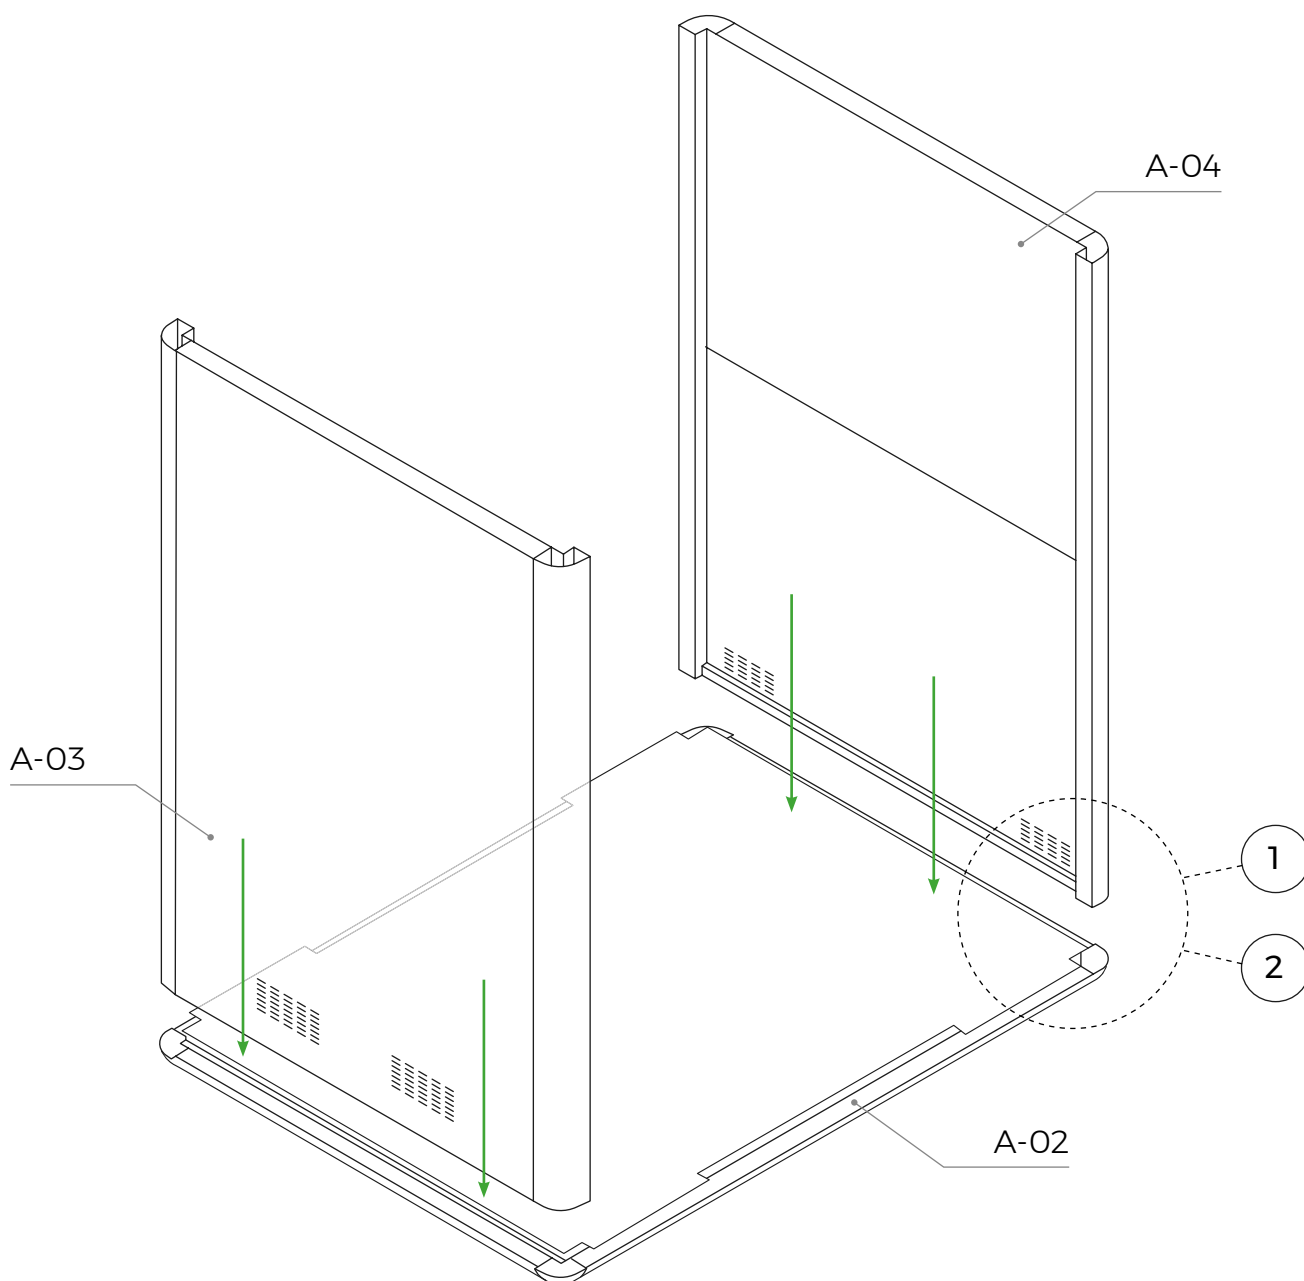


#### TOOLS




1

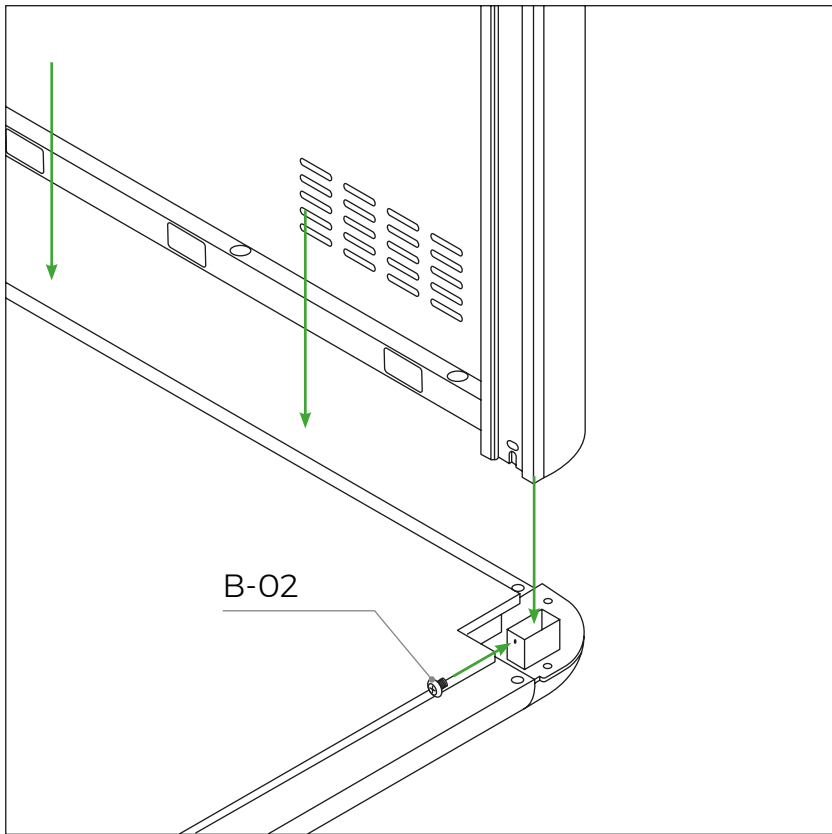


2

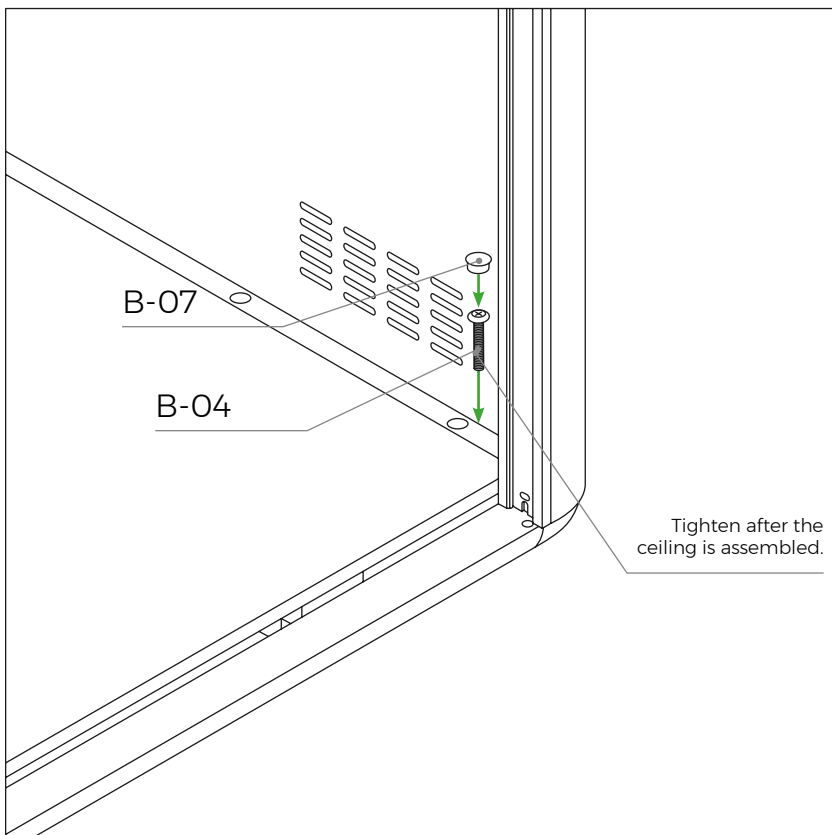


## TOOLS



### 04. Glass assembly. A-05 / A-09

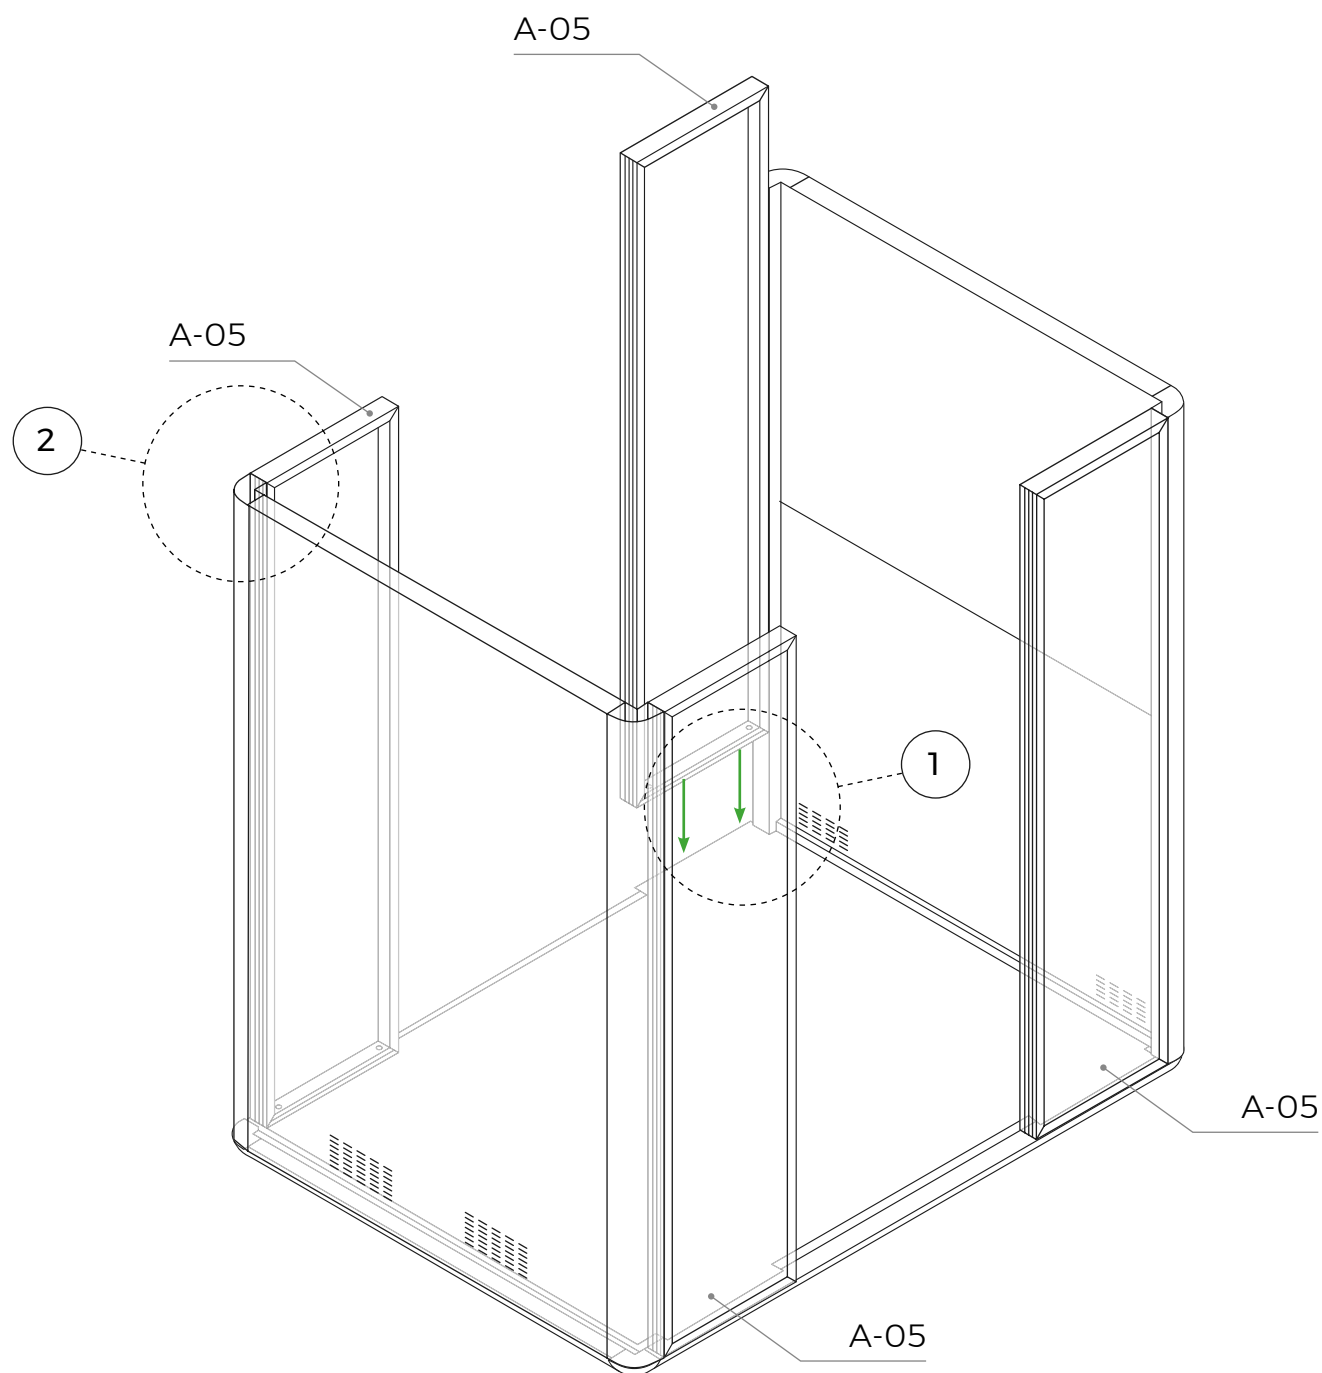


#### TOOLS







1

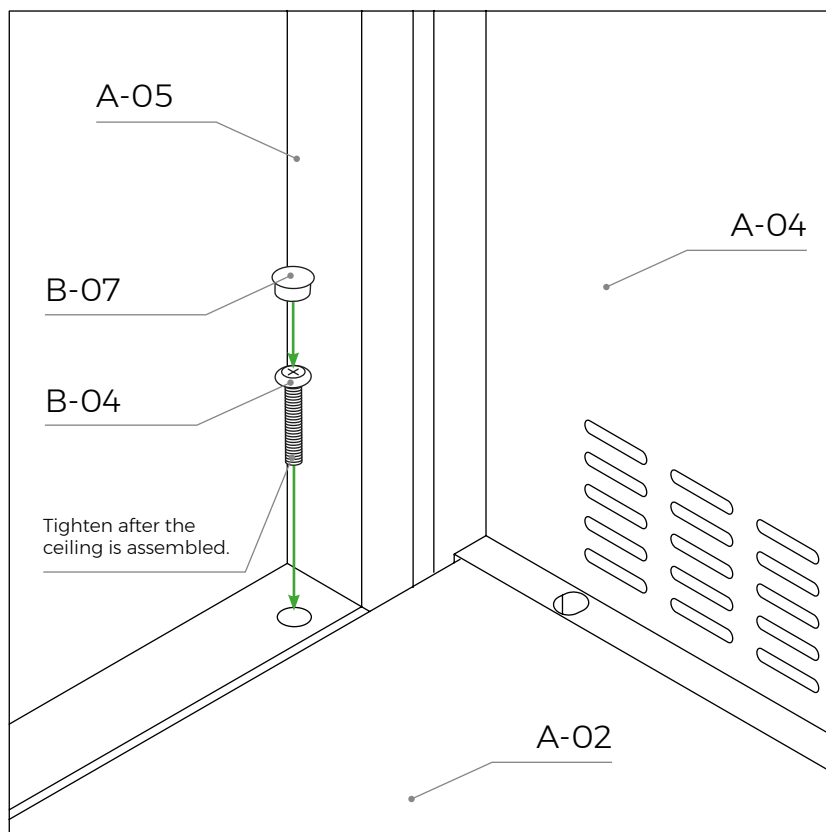


2

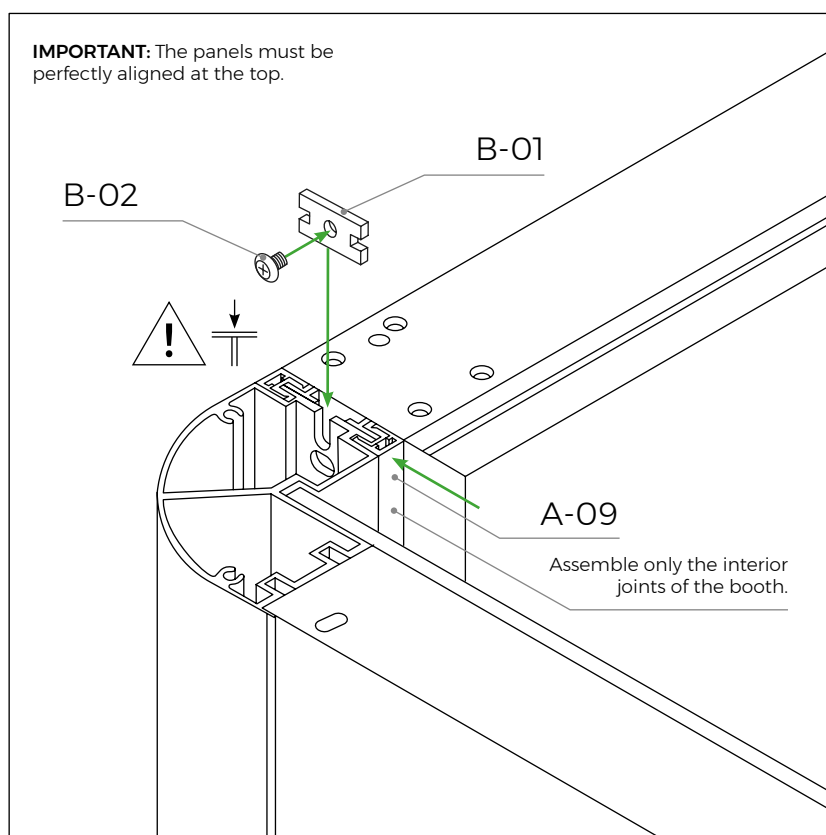

### TOOLS




**05.** Back center wall assembly. A-06 / A-09

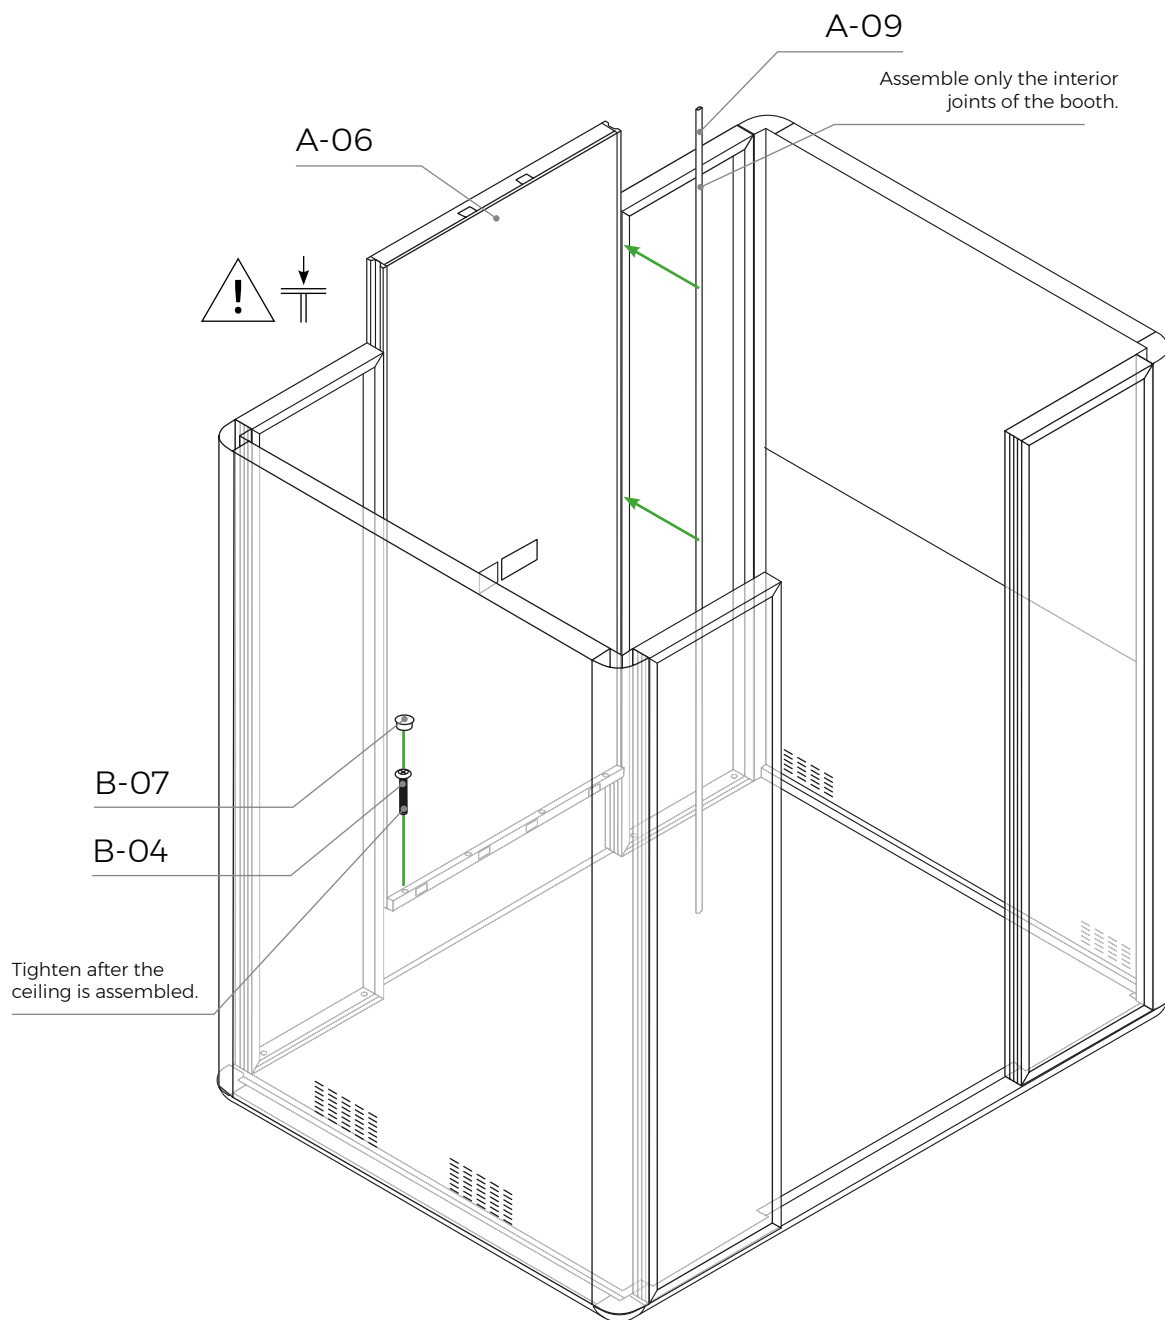


**IMPORTANT:**

- IMPORTANT:**
1. To ensure proper assembly, insert panel A-06 at an angle. The wall must be held firmly to prevent it from tipping over.




2. The panels must be perfectly aligned at the top.


## TOOLS




### 06. Assemble ceiling and fan covers. A-07 / A-10

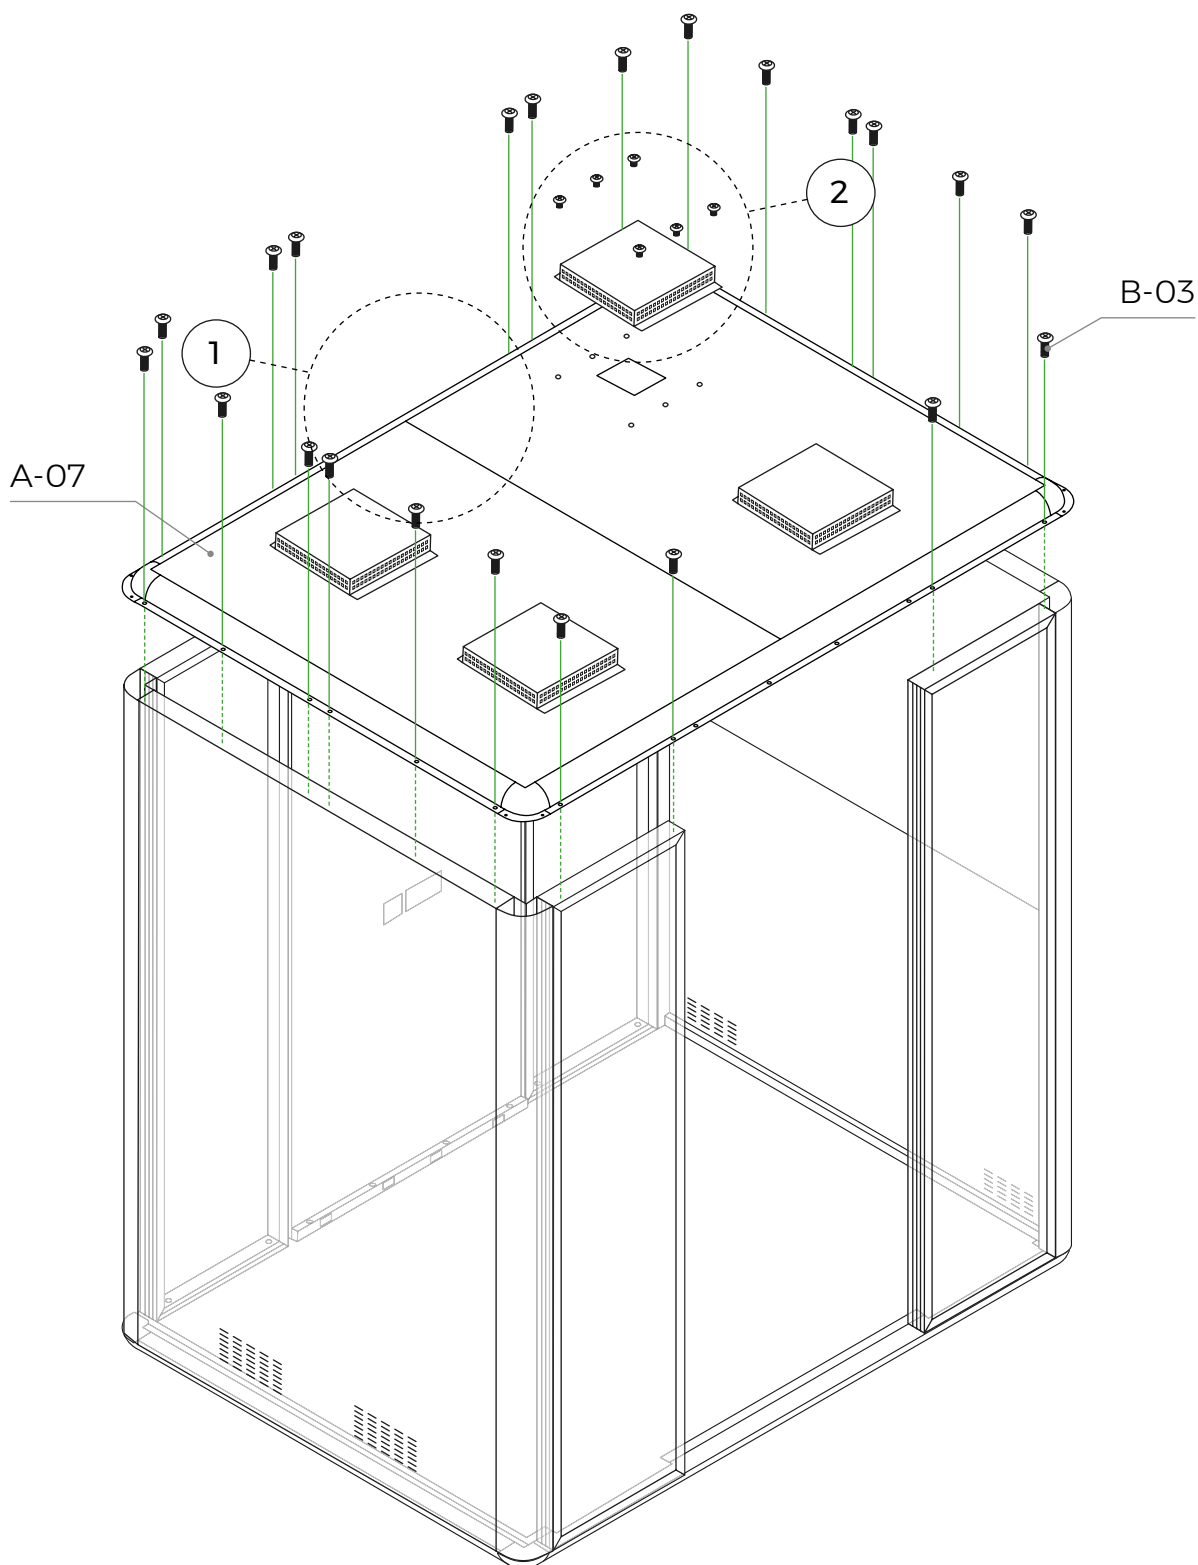


#### TOOLS




1

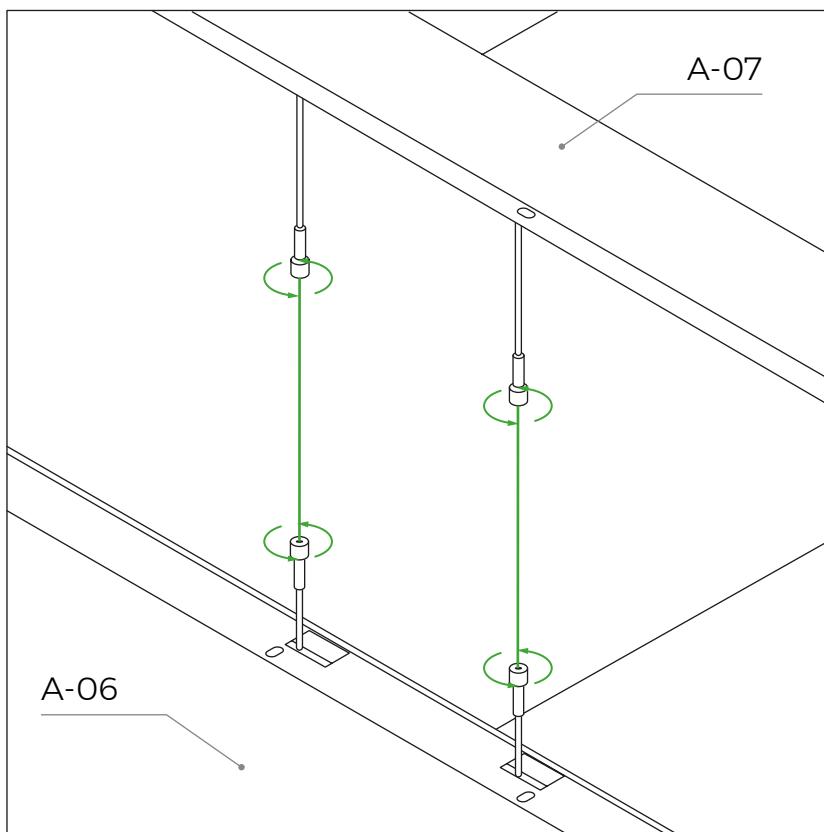


2

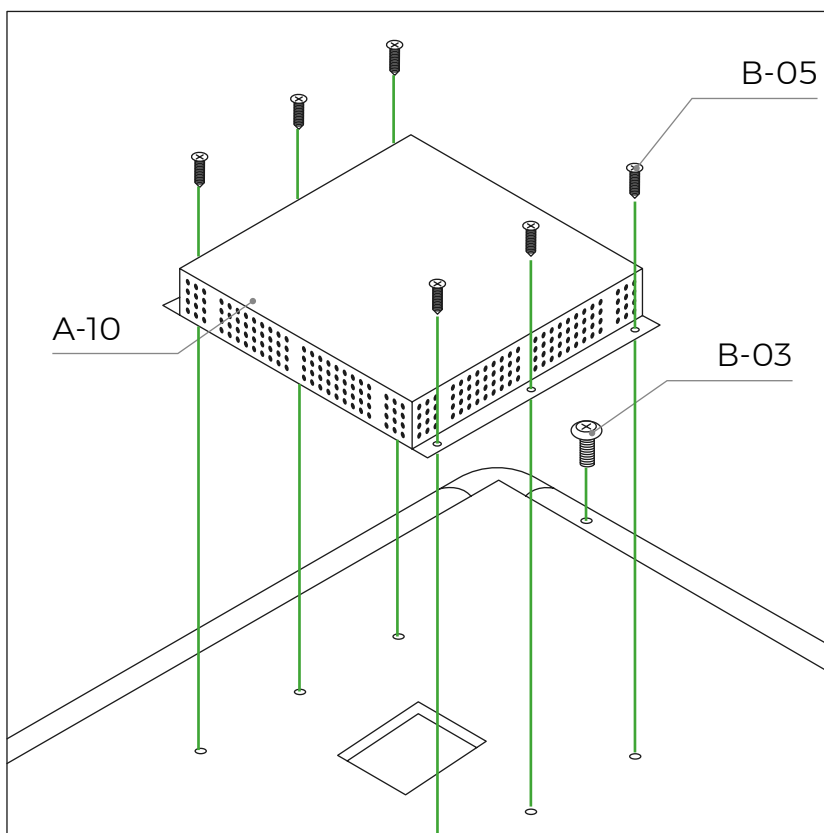

### TOOLS




### 07. Glass door and lock assembly. A-08 / A-09 / A-11 / A-12 / A-13 / A-14

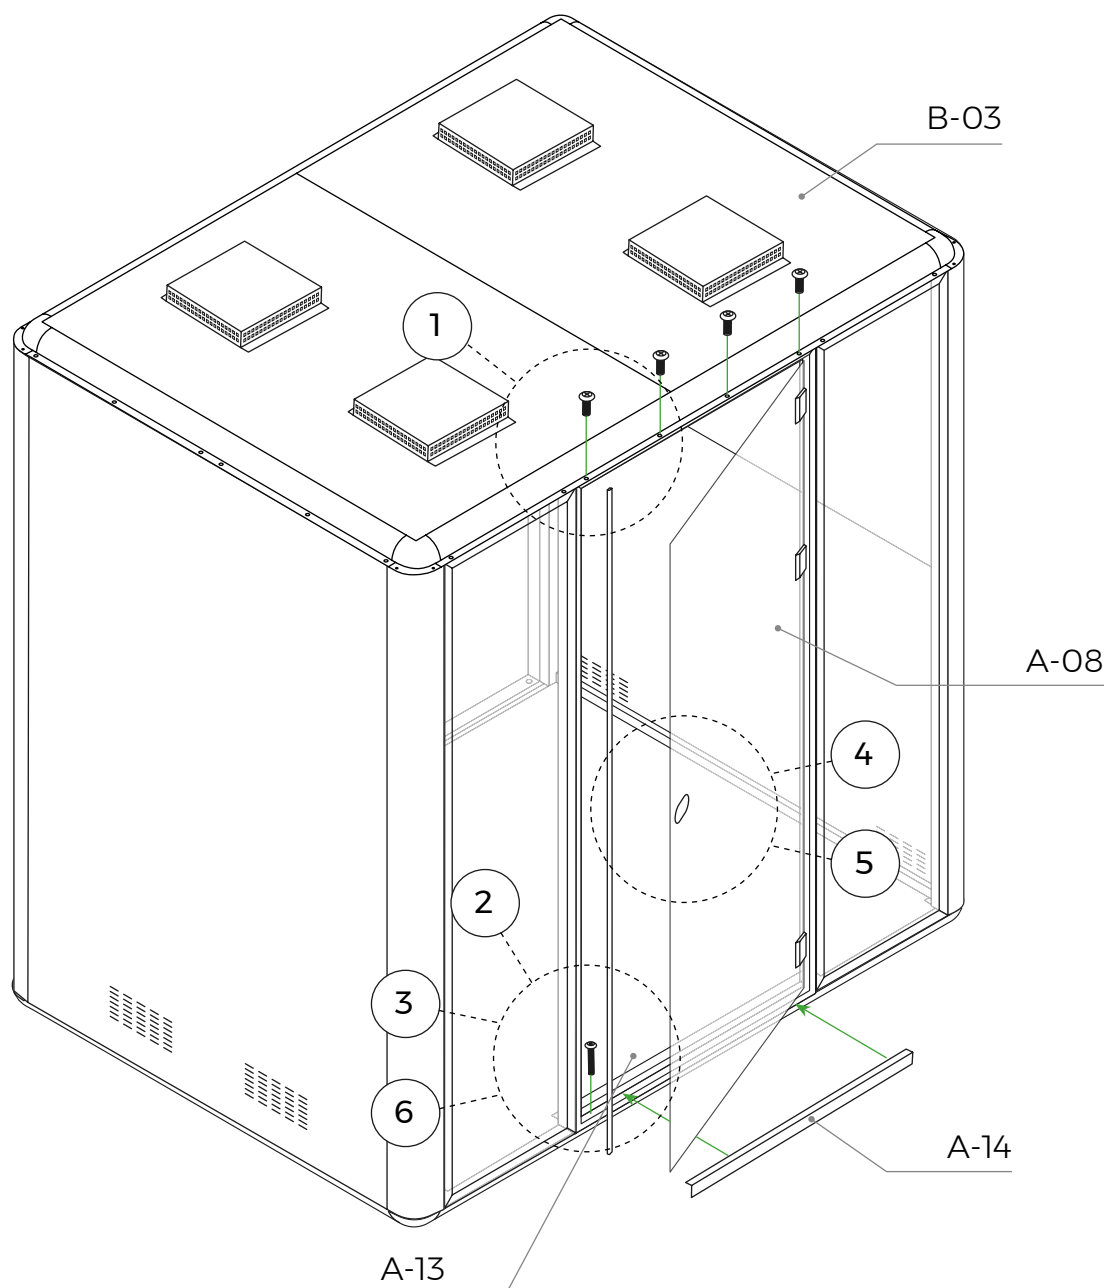


#### IMPORTANT:


1. To ensure proper assembly, insert panel A-08 at an angle. The wall must be held firmly to prevent it from tipping over.




#### TOOLS




2

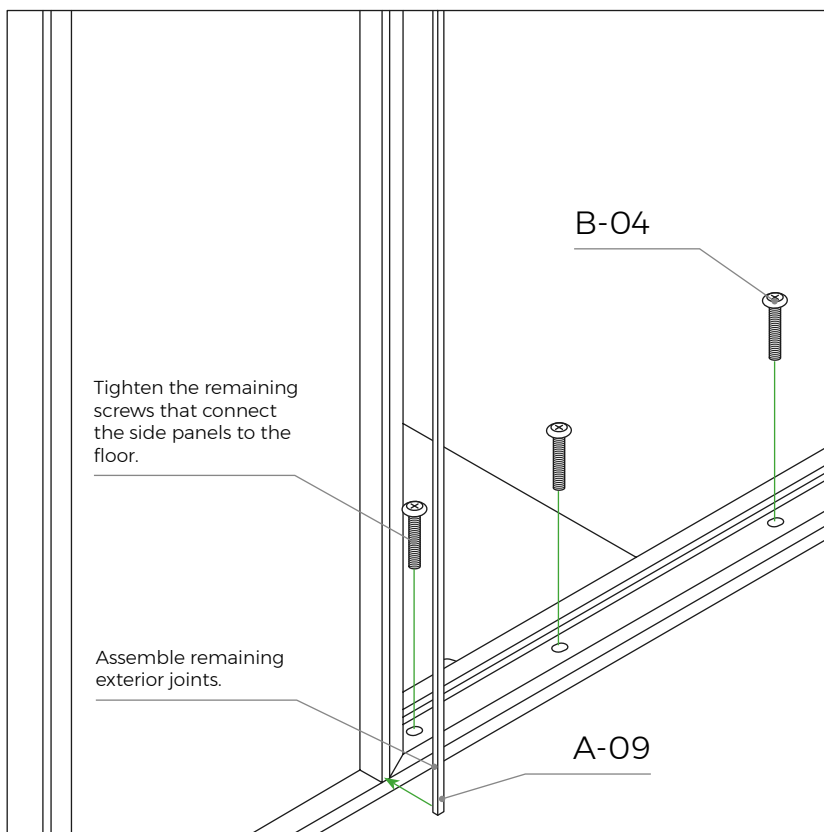


3

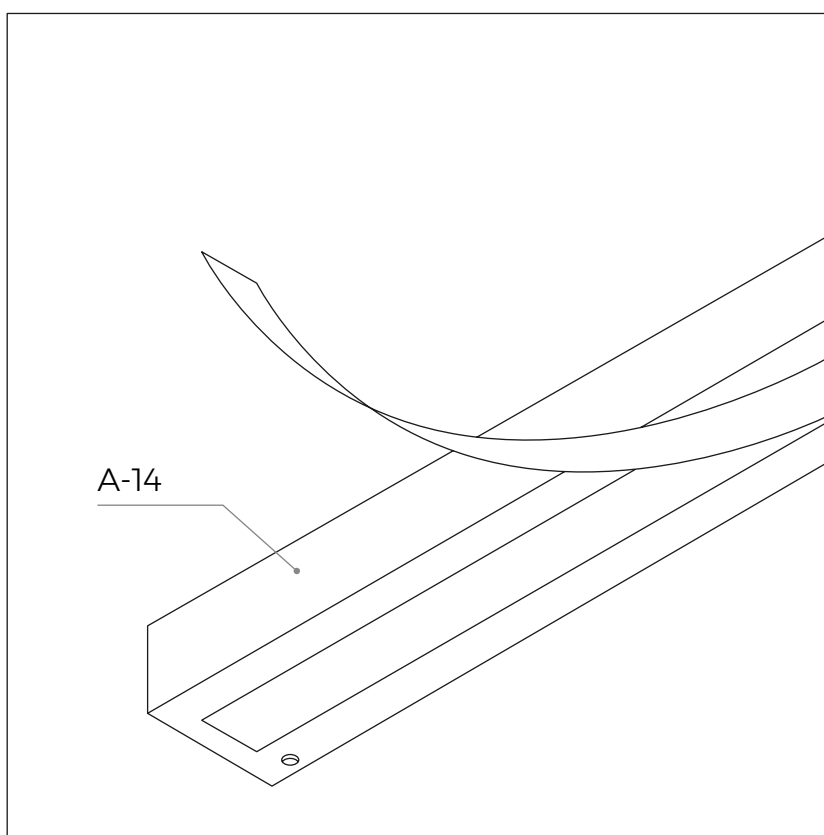


### TOOLS



4

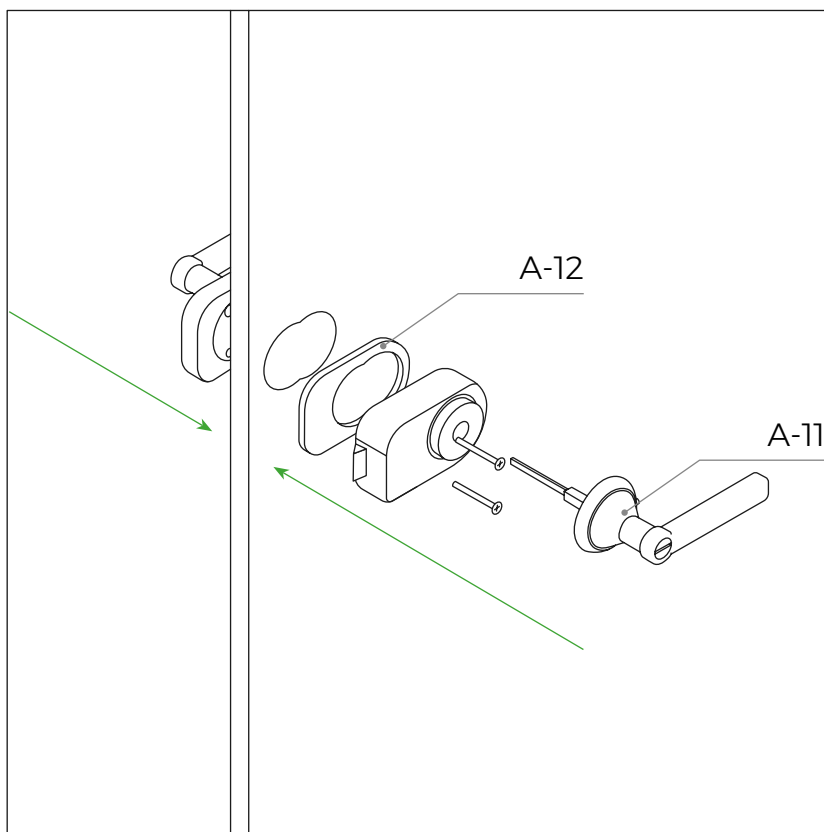

5

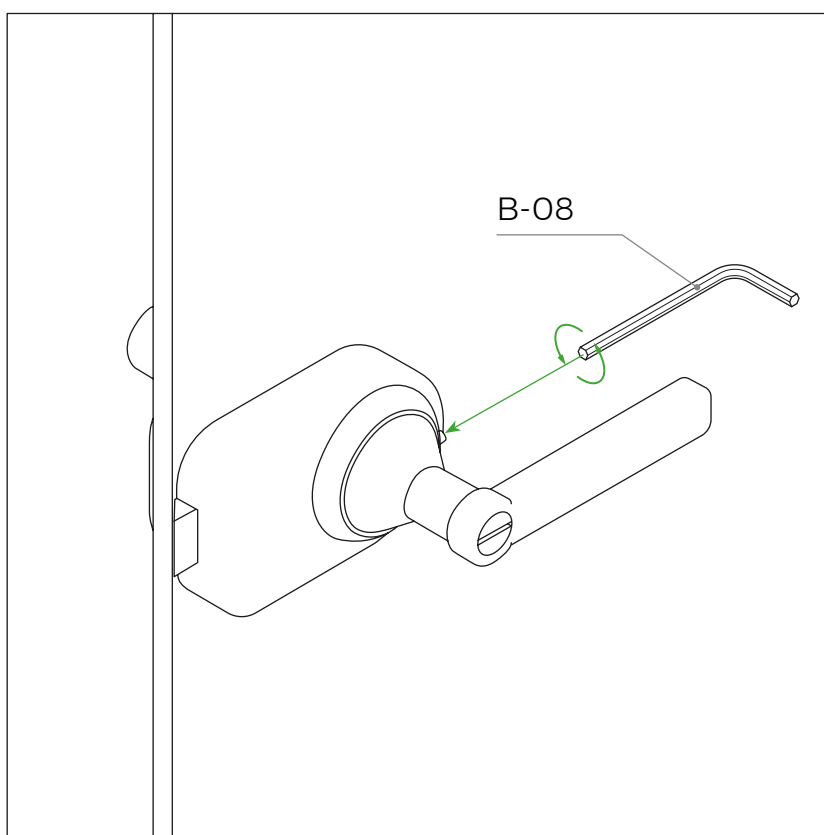

### TOOLS

