


















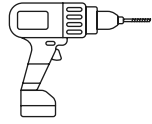
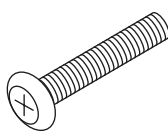



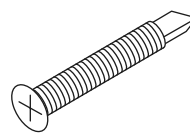


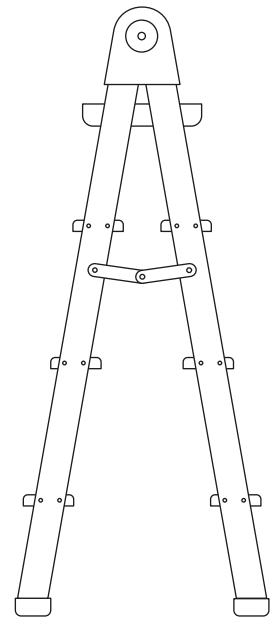


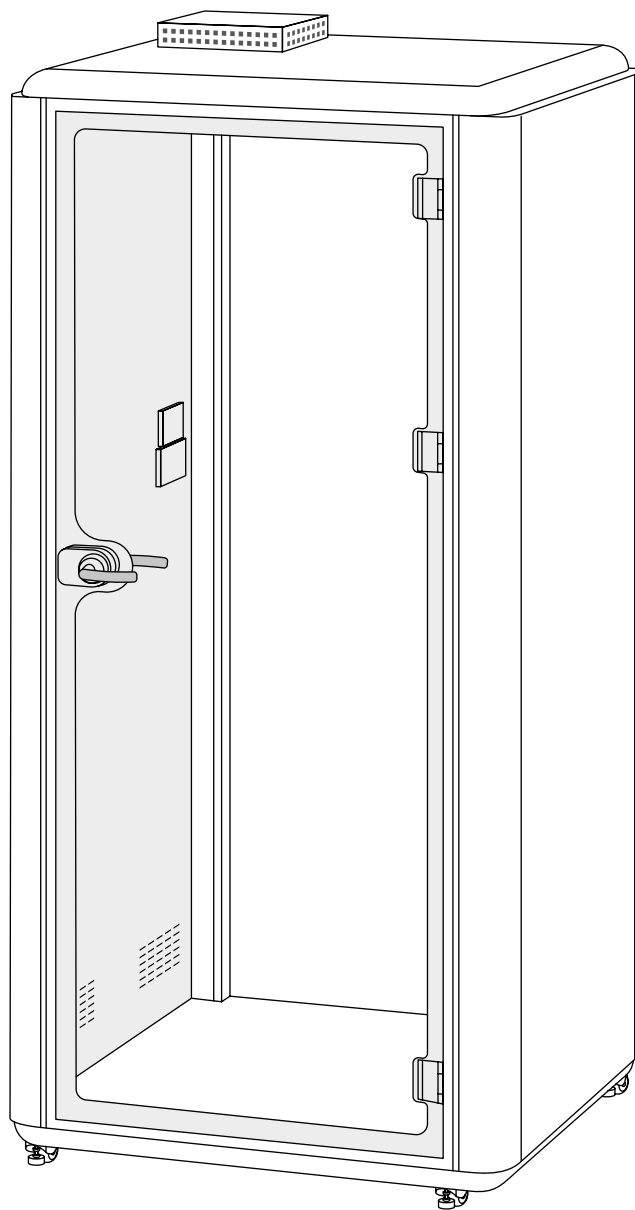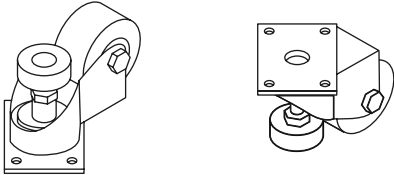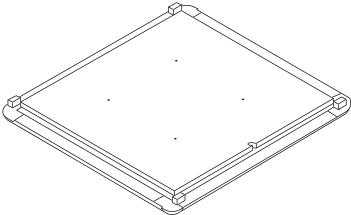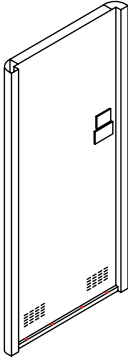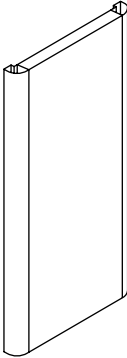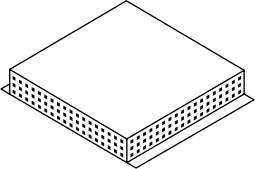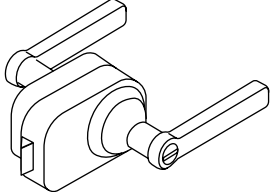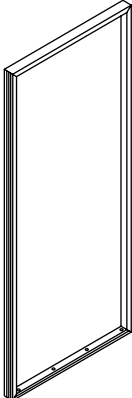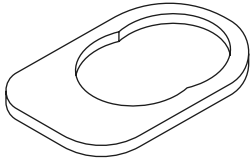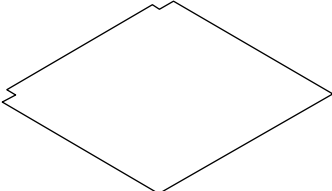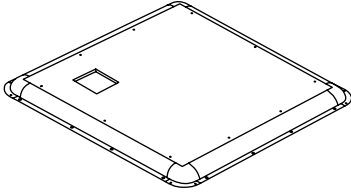
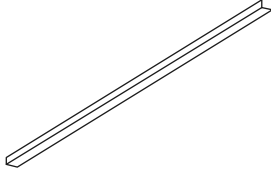




ASSEMBLY INSTRUCTIONS




PARTS LIST

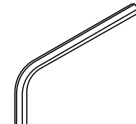
A-01 x4			A-07 x1		A-08	
A-02 x1			A-08 x8			
A-03 x1	A-03	A-04	A-09 x1			
A-04 x1			A-11 x1			
A-05 x1			A-12 x1			
A-06 x1			A-13 x1			
			A-14 x1			

ACCESSORIES		SELF-SUPPLIED TOOLS	
B-01 x2	M12x120 	C-01 x2	GLASS SUCTION CUPS 
B-02 x24	M6x10 	C-02 x1	SCREWDRIVER 
B-03 x18	M6x16 	C-03 x1	ELECTRIC SCREWDRIVER 
B-04 x18	M6x35 	C-04 x1	RUBBER Mallet 
B-05 x16	M4x16 	C-05 x1	SPIRIT LEVEL 
B-06 x4	M4x30 	C-06 x1	ADJUSTABLE WRENCH 
B-07 x18		C-07 x2	LADDER 
B-08 x1	3 mm 		
B-09 x1	5 mm 		
B-10 x1	6 mm 		
B-11 x4			
B-12 x1		 Recommendation: Minimum 2 people required for assembly	


01. Assemble castors. A-01 / A-02

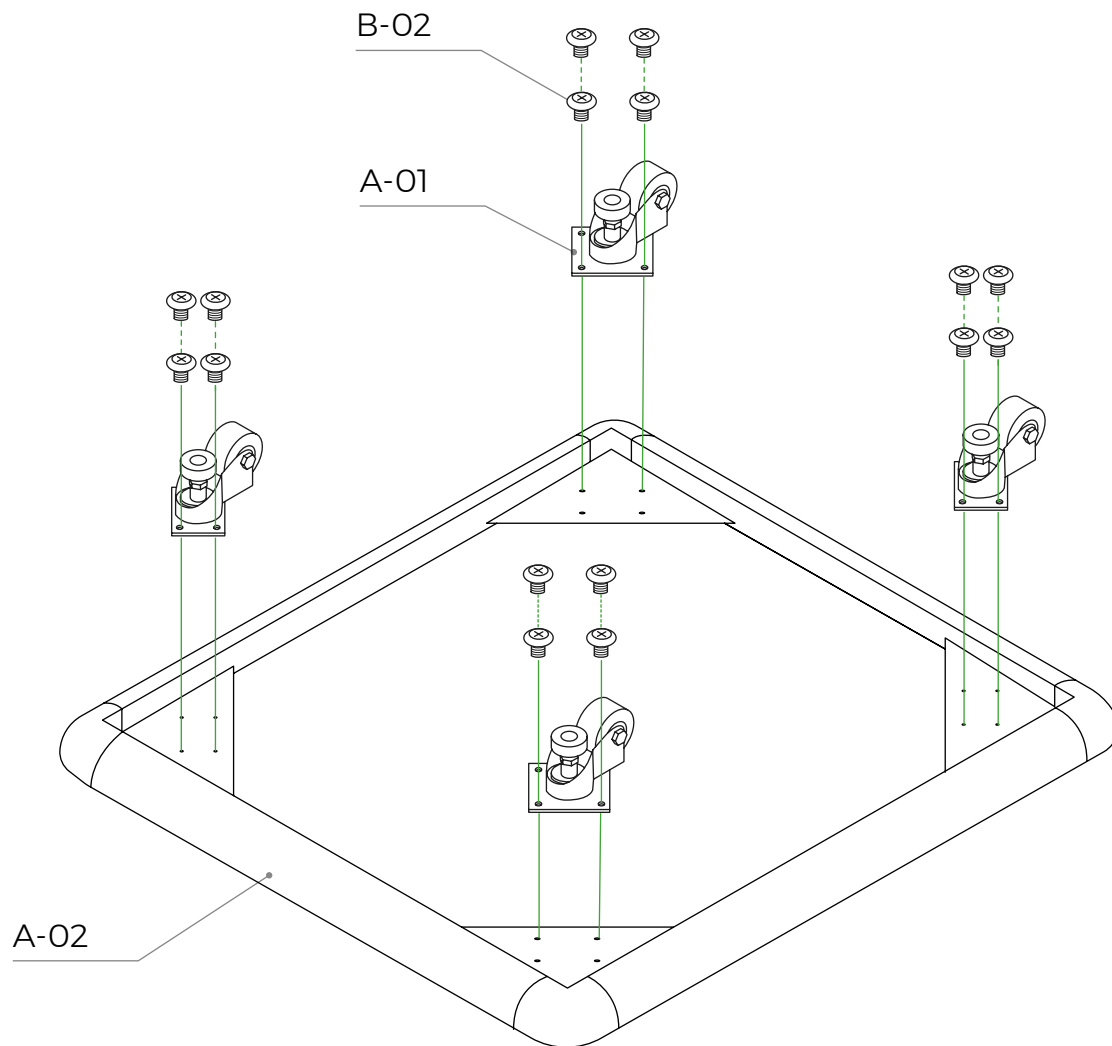

TOOLS



02. Use a spirit level to measure.. A-01 / A-02

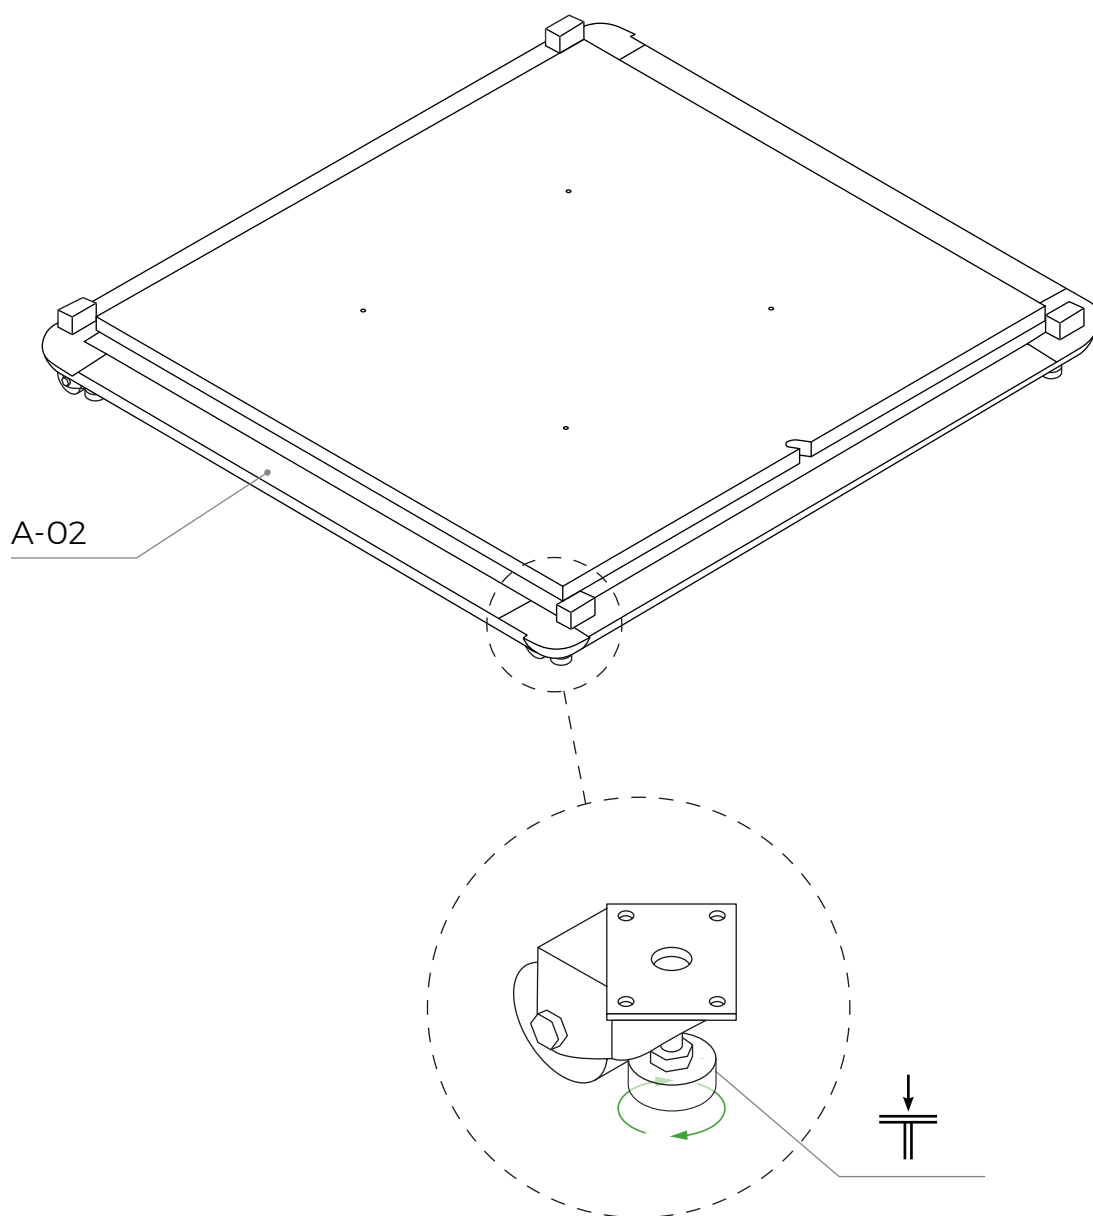


IMPORTANT: Unscrew all leveling glides before moving the booth


TOOLS




03. Walls assembly. A-03 / A-04

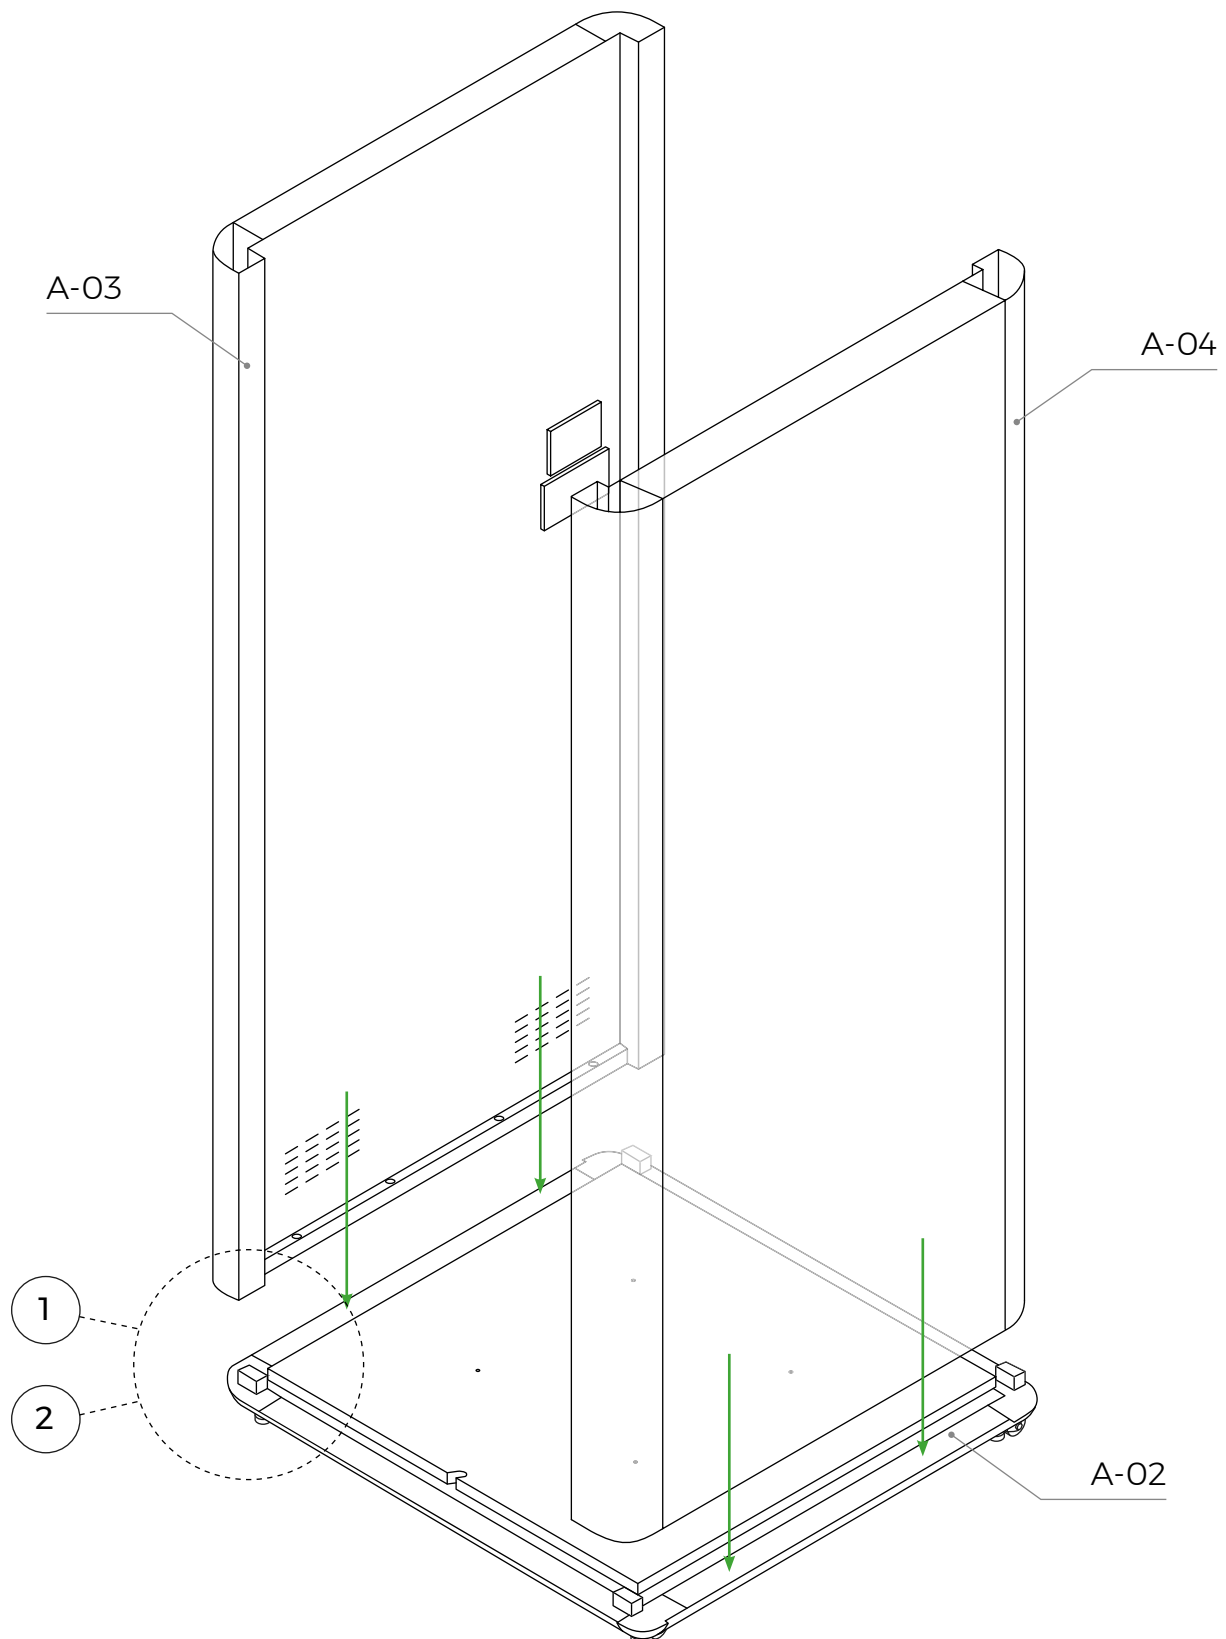


TOOLS




1

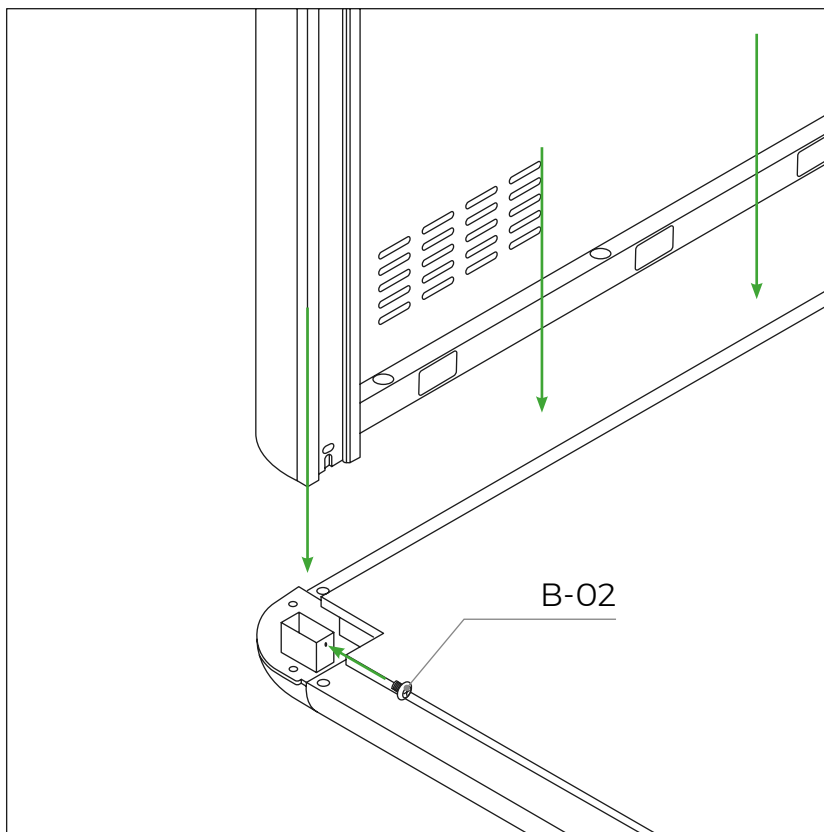


2

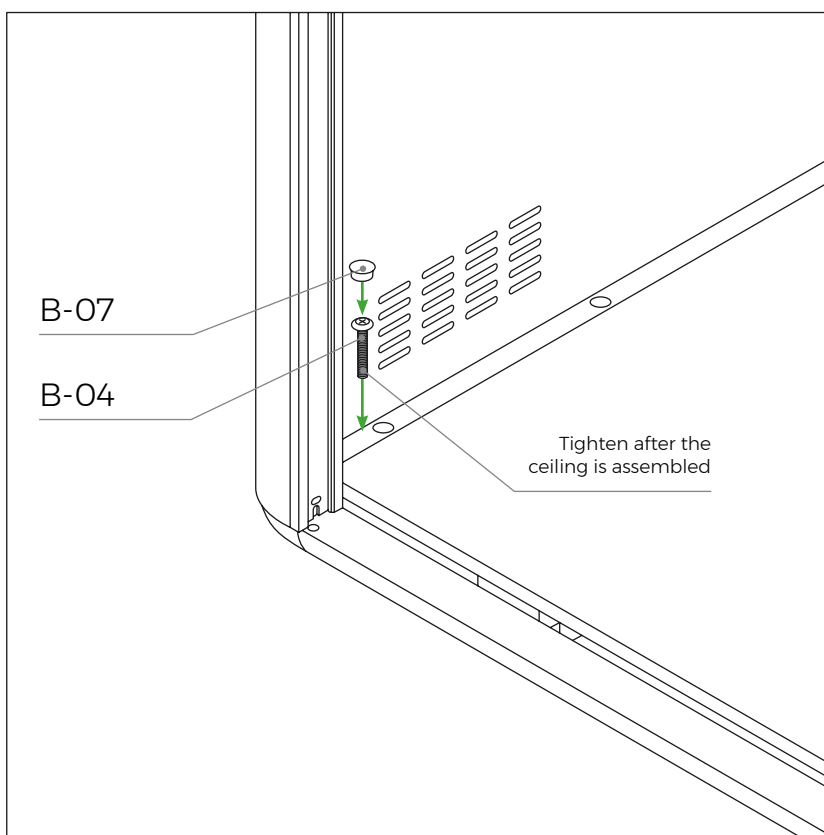

TOOLS




04. Glass assembly. A-05 / A-08

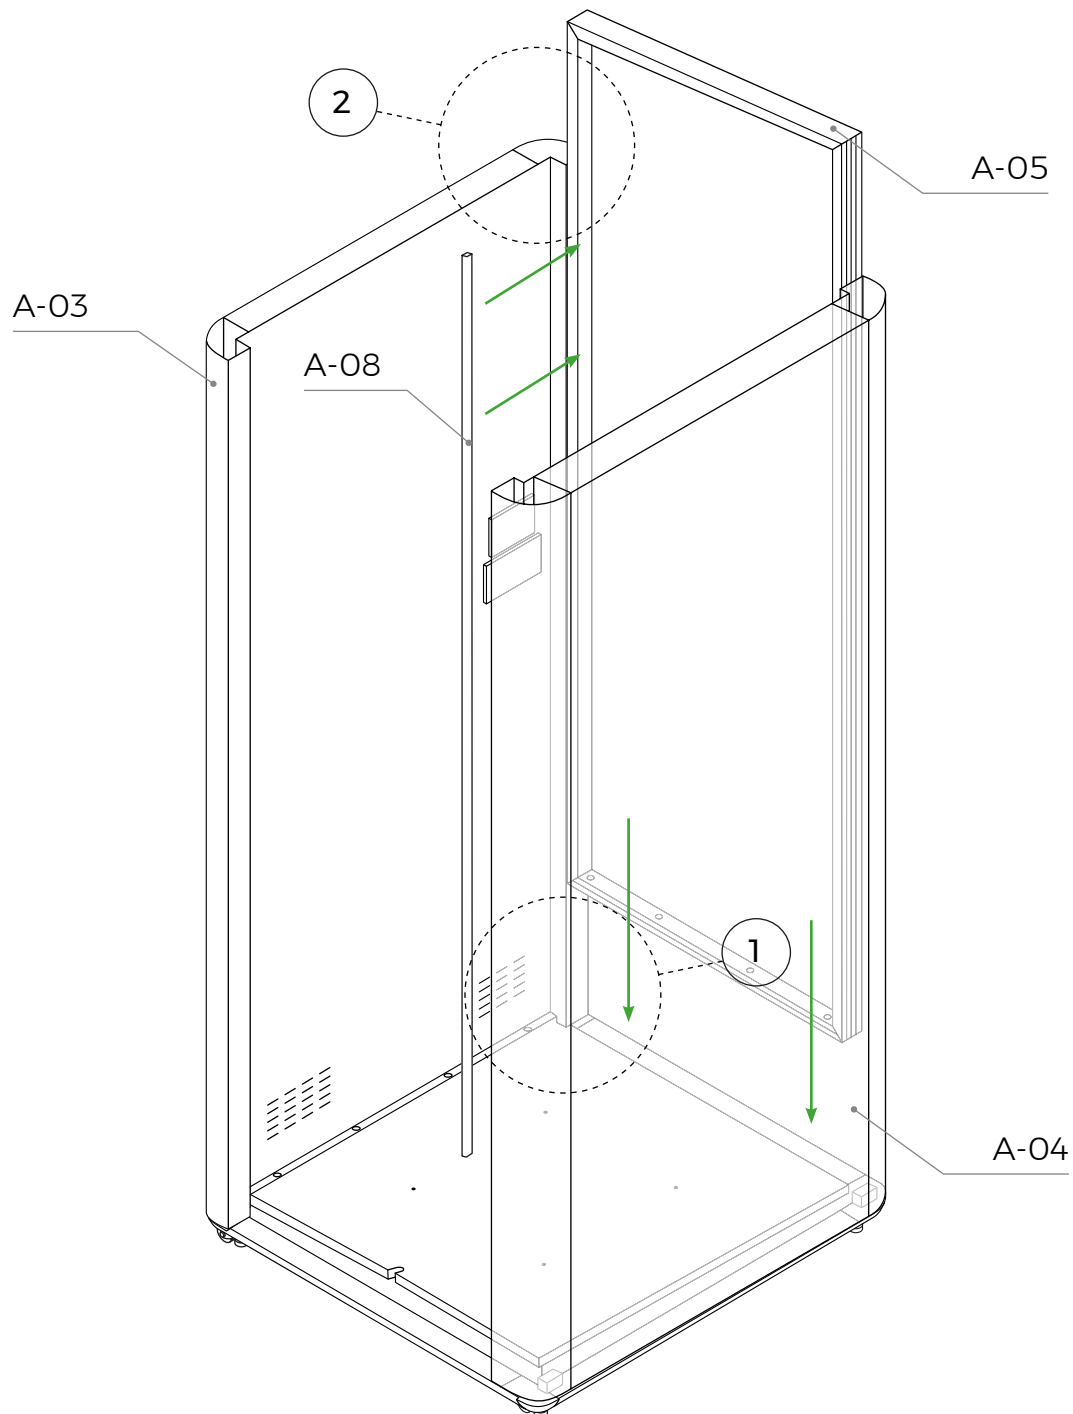


IMPORTANT:



1. To ensure proper assembly, insert panel A-05 at an angle. The wall must be held firmly to prevent it from tipping over.




2. The panels must be perfectly aligned at the top.

TOOLS




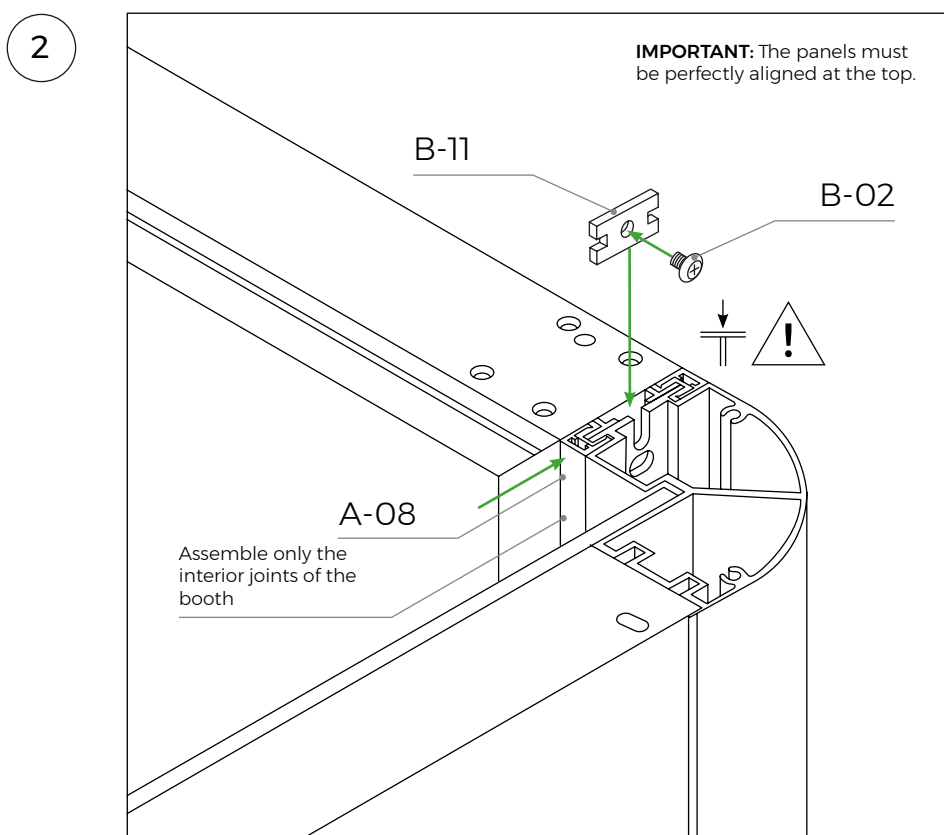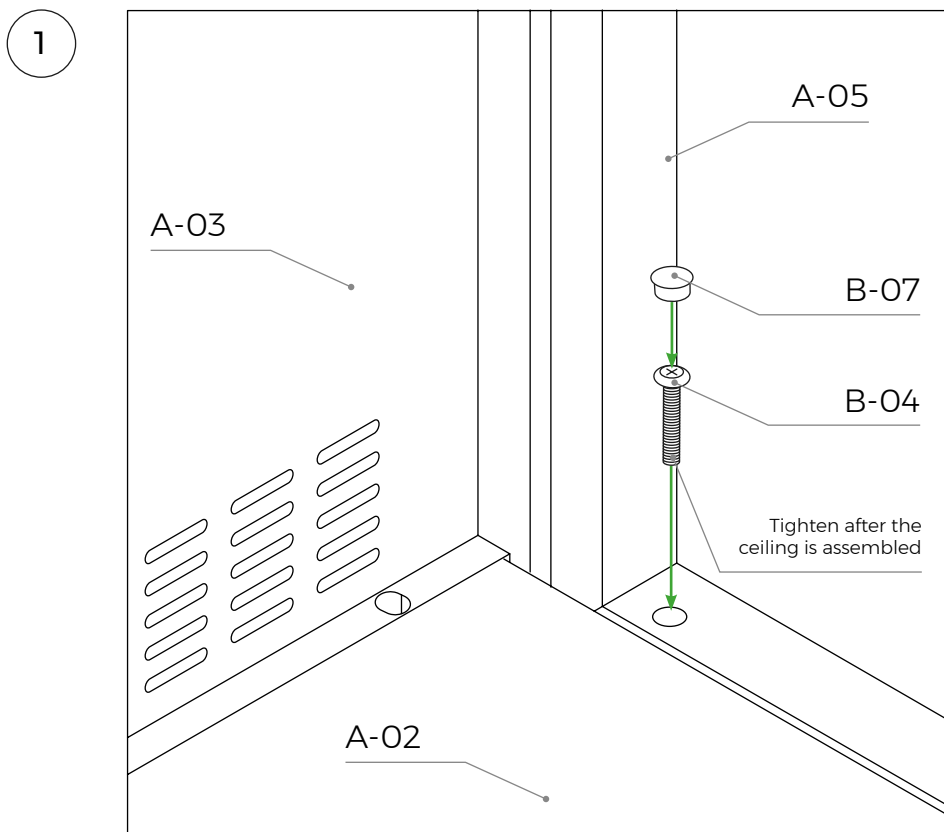

TOOLS




05. Assemble glass door and lock.. A-07 / A-11 / A-12

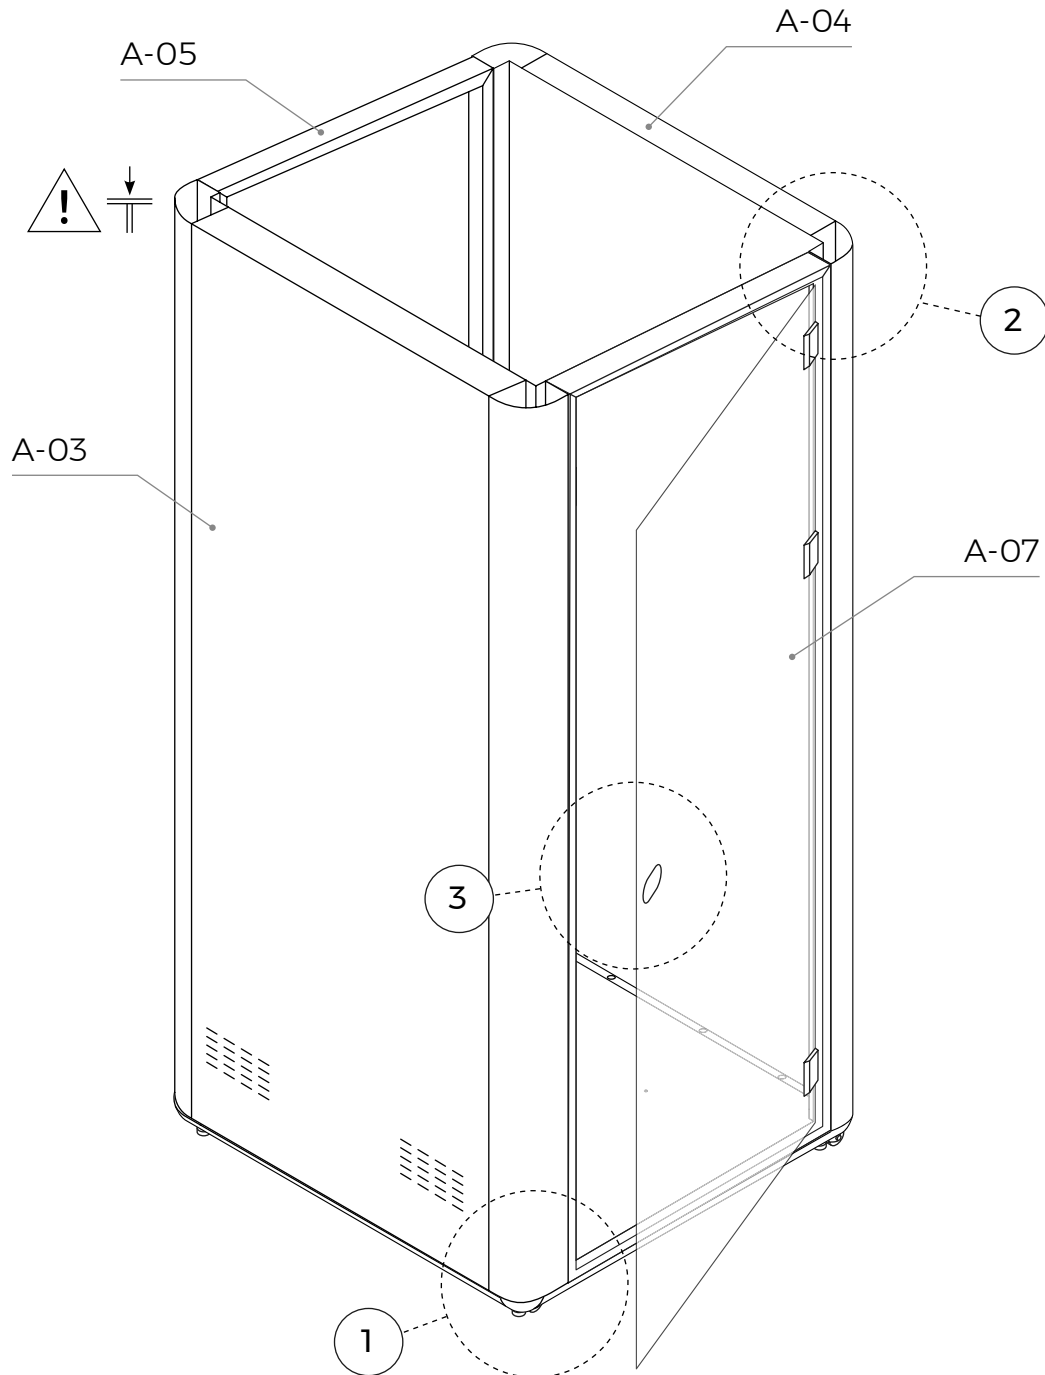


IMPORTANTE:

1. To ensure proper assembly, insert panel A-07 at an angle. The wall must be held firmly to prevent it from tipping over..




2. The panels must be perfectly aligned at the top.

TOOLS




1

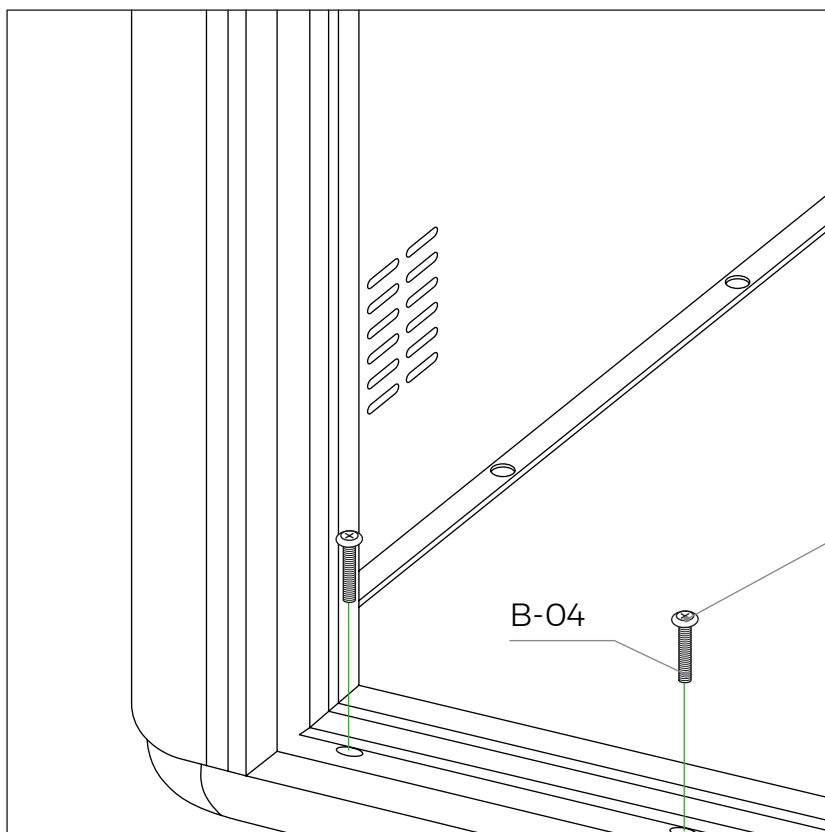


2



IMPORTANT: The panels must be perfectly aligned at the top.

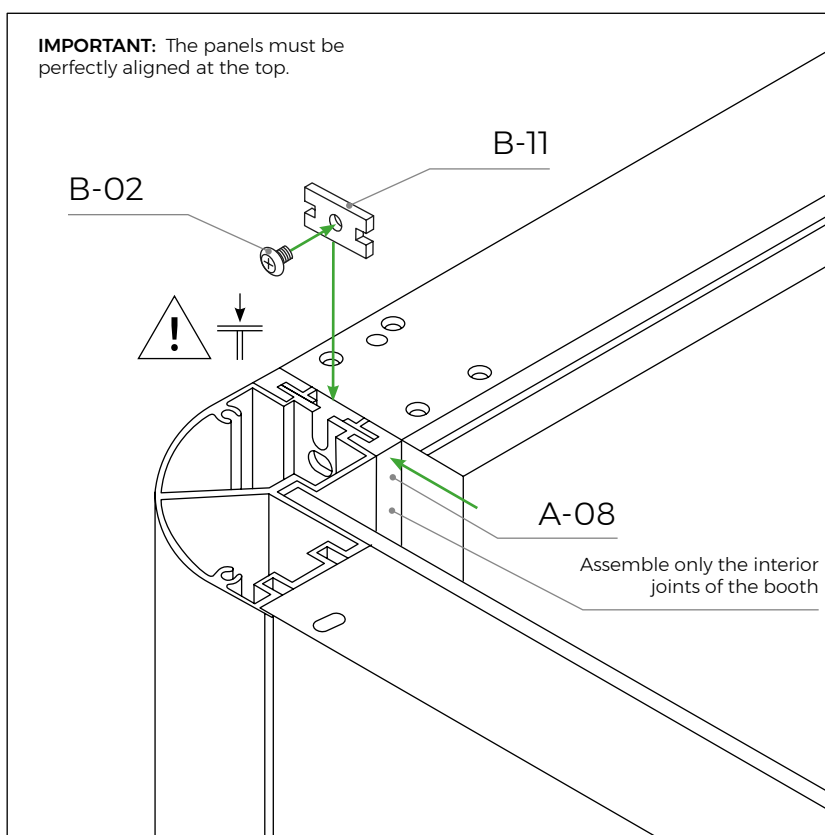


TOOLS




3

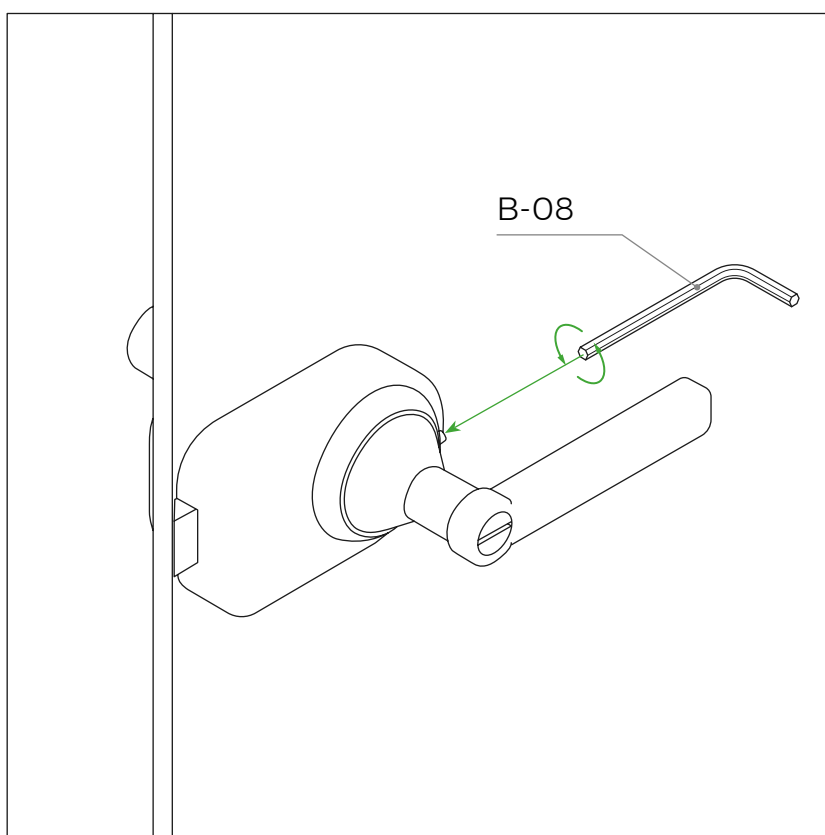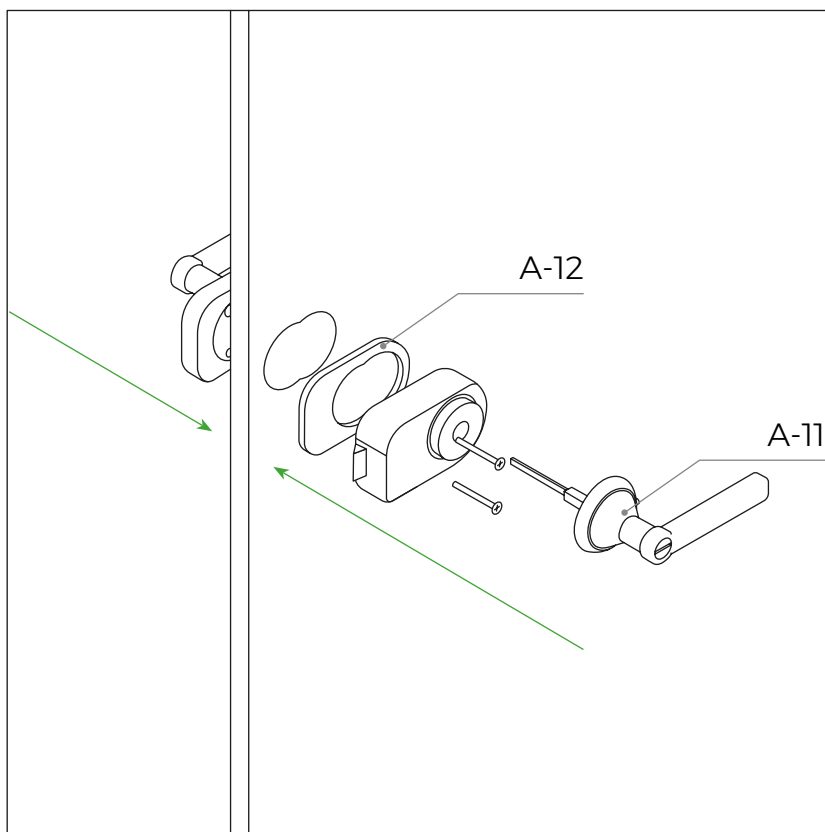


TOOLS




06. Assemble ceiling and fan covers.. A-07 / A-08 / A-14

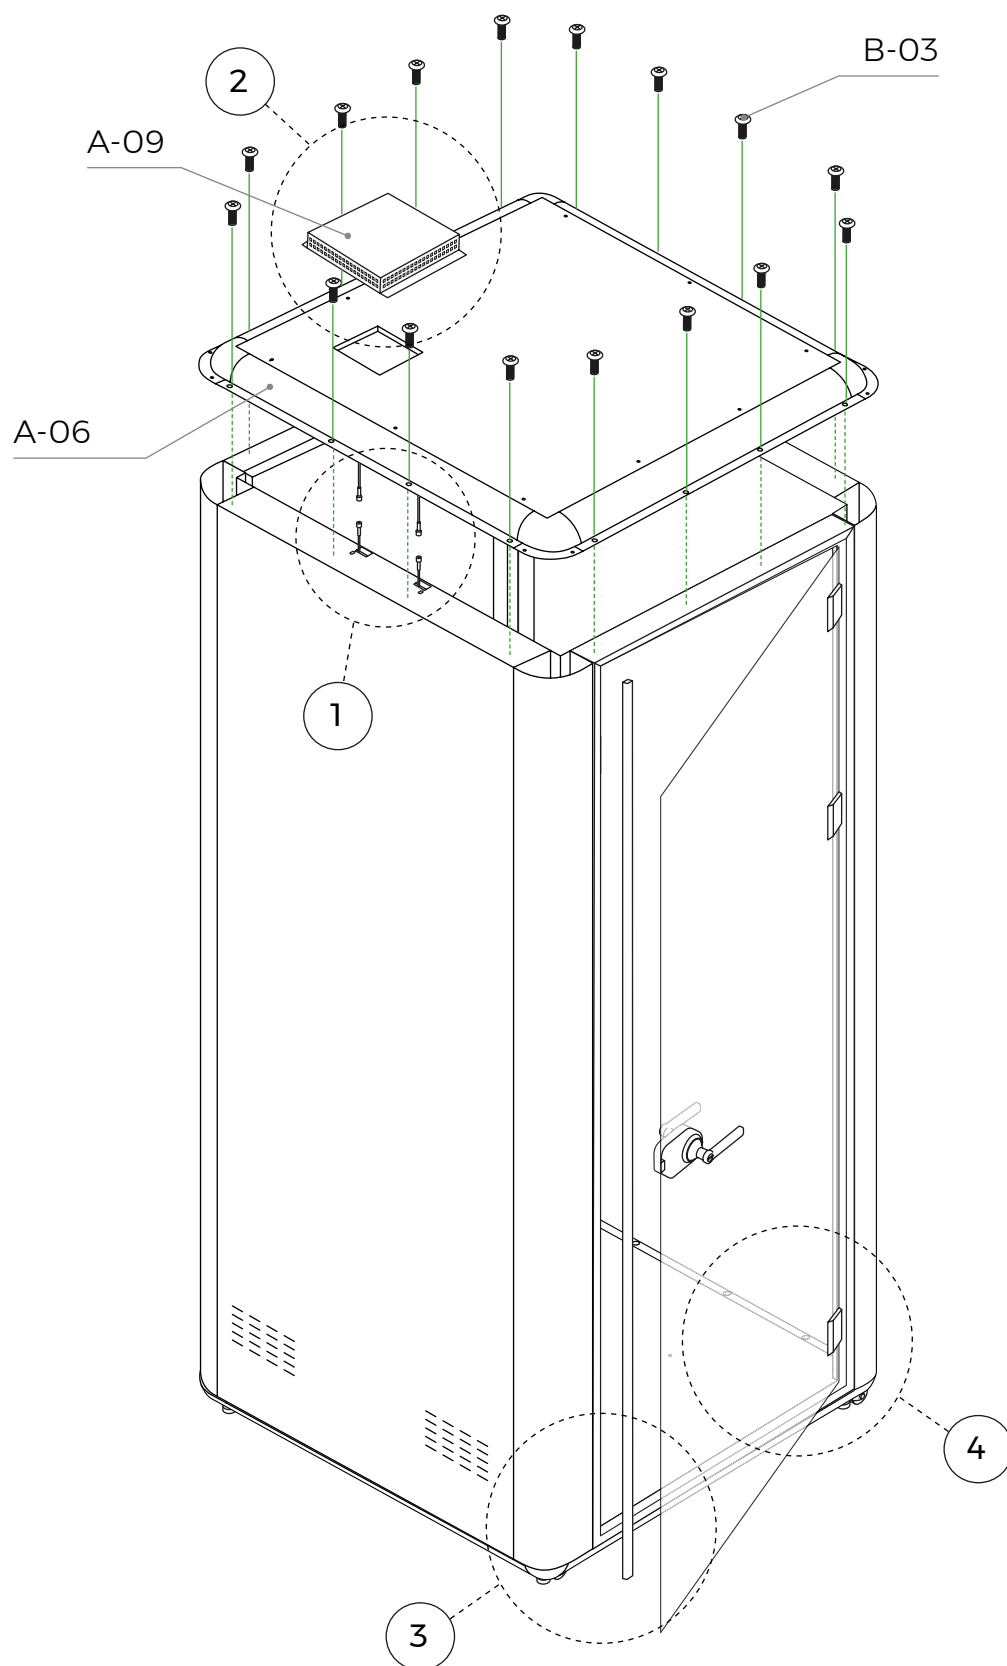


TOOLS




1

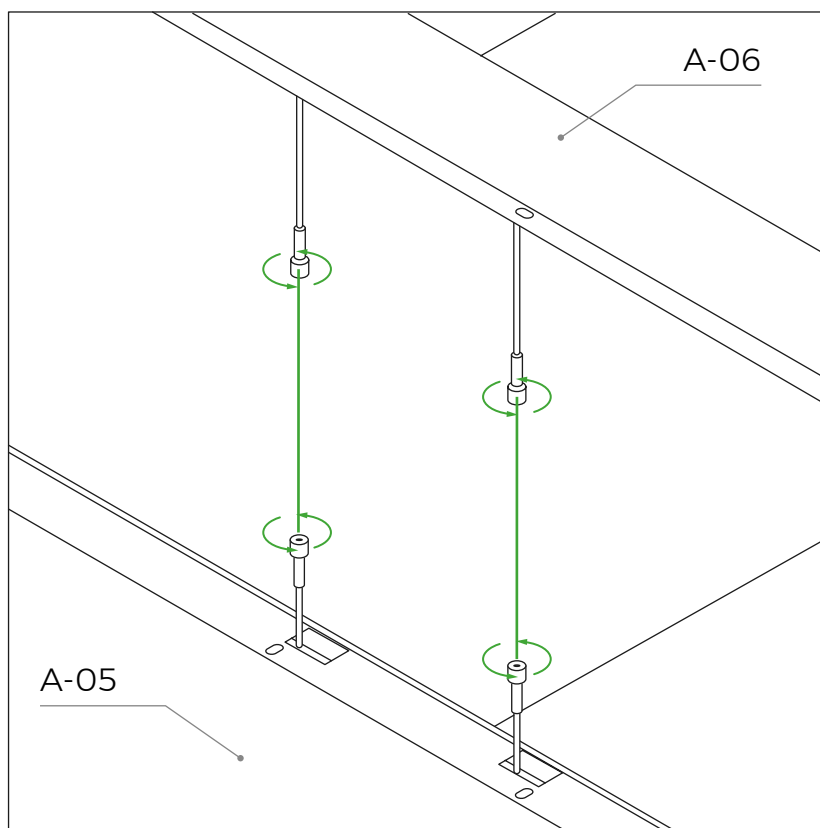


2

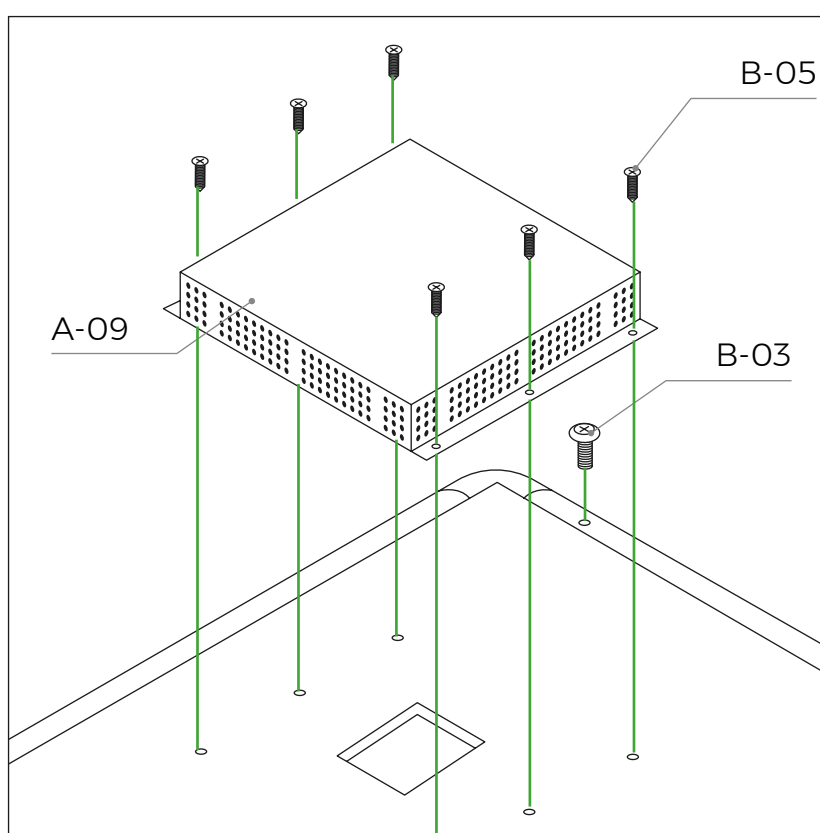

TOOLS




3

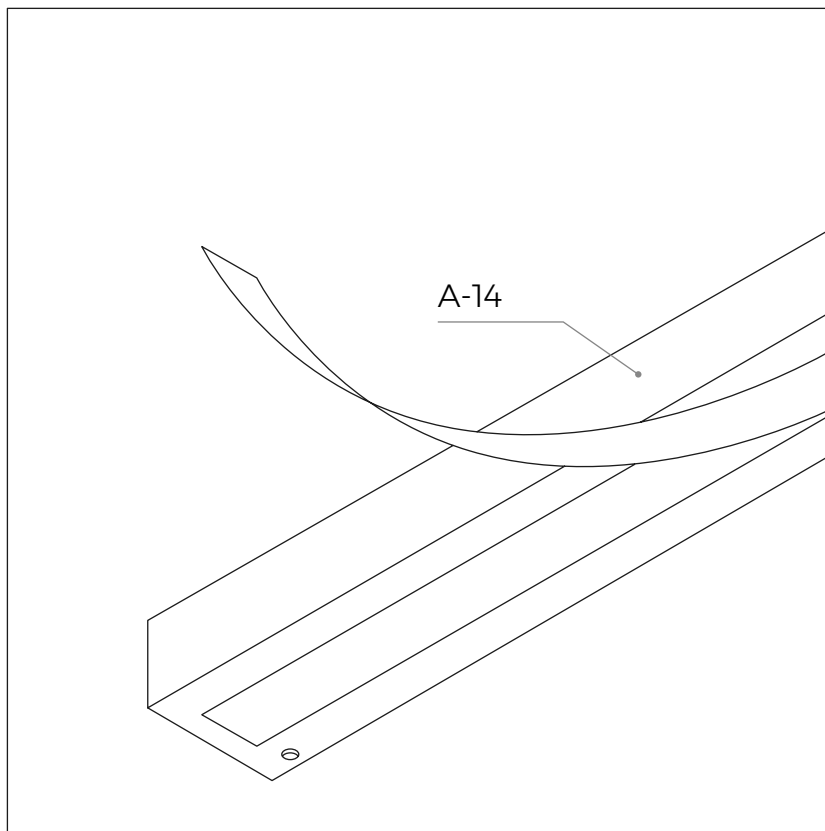


A-08

Assemble remaining exterior joints

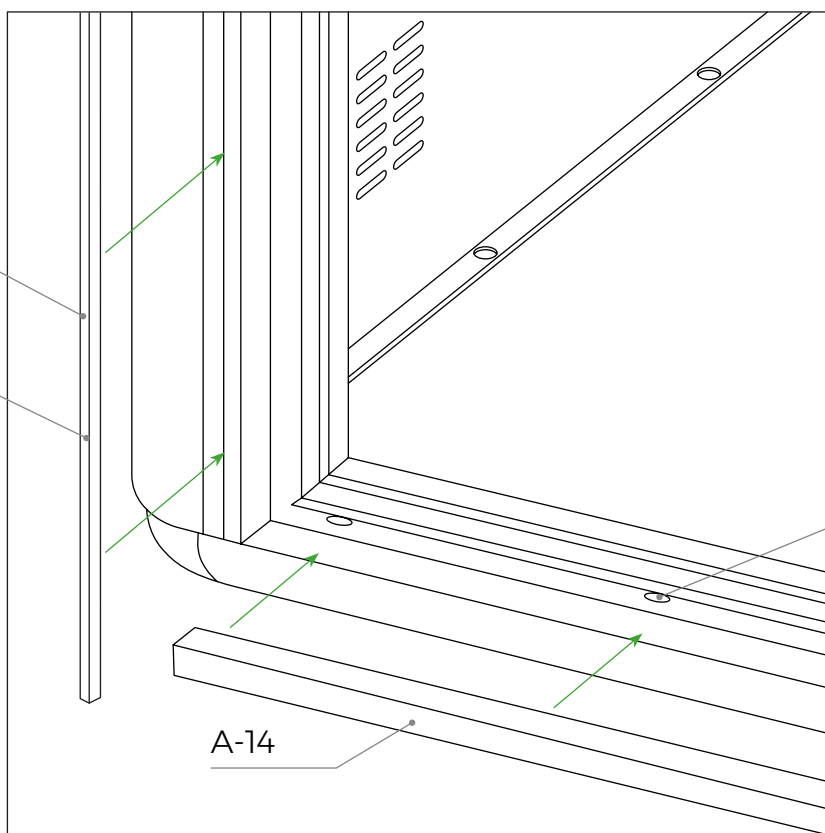

Tighten the remaining screws that connect the side panels to the floor.

TOOLS



4

