











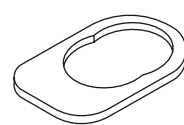
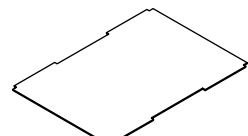


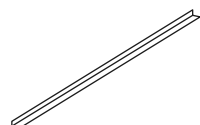

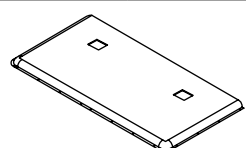
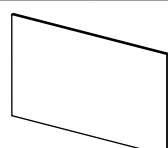
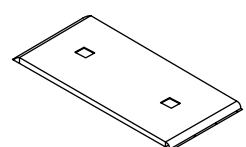
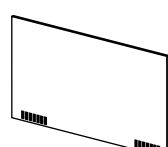






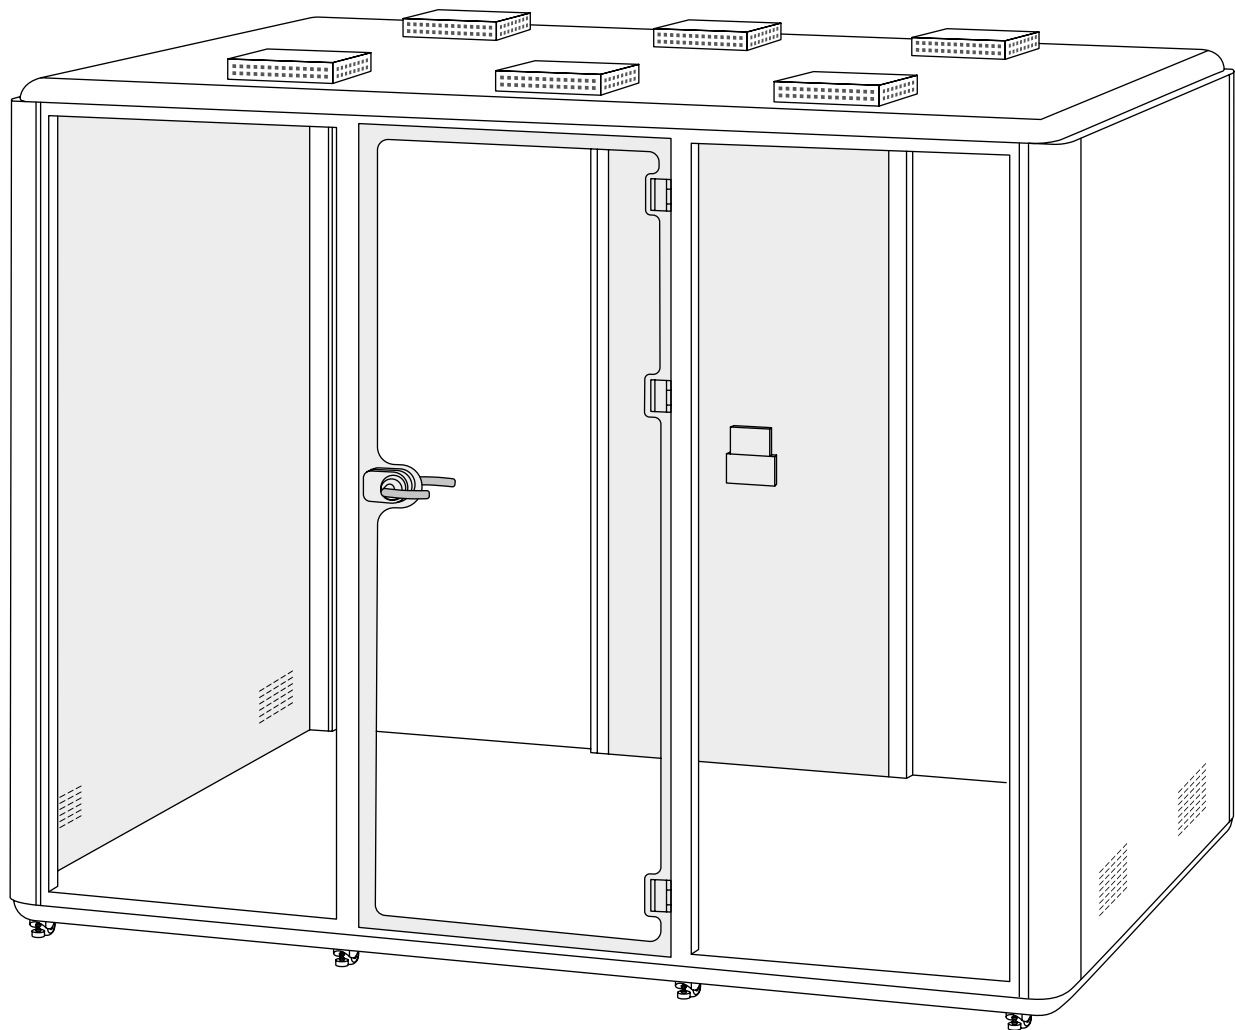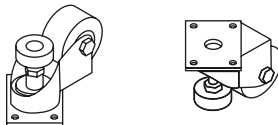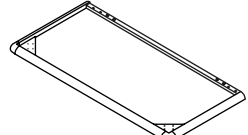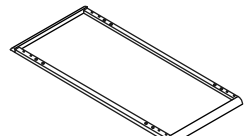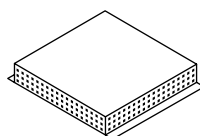
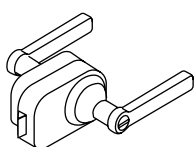





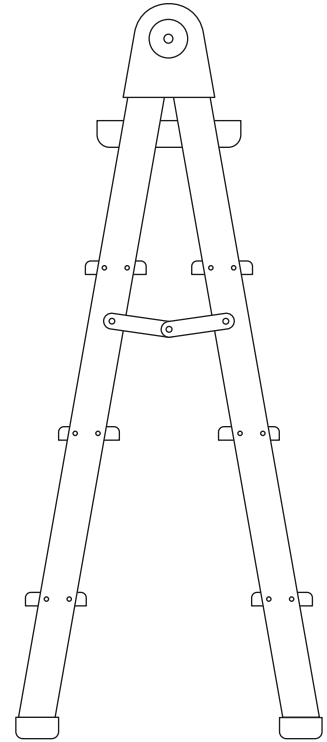










ASSEMBLY INSTRUCTIONS




PARTS LISTING


A-01 x8			A-08 x1		A-09 
A-02-1 x2			A-09 x18		
A-02-2 x1					
A-03-1 x1	A-03-1 	A-03-2 	A-10 x6		
A-03-2 x1			A-11 x1		
A-04-1 x1	A-04-1 	A-04-2 	A-12 x1		
A-04-2 x1			A-13 x1		
A-05 x4	A-05 	A-06 	A-14 x1		
A-06 x1			A-15 x4		
A-07-1 x2			A-16 x2		
A-07-2 x1			A-16-1 x2		

ACCESORIES		SELF-PROVIDED TOOLS	
B-01 x4		C-01 x2	GLASS SUCTION CUP 
B-02 x88	M6x10 	C-02 x1	CROSS SCREWDRIVER 
B-03 x30	M6x16 	C-03 x1	DRILL 
B-04 x30	M6x35 	C-04 x1	RUBBER HAMMER 
B-05 x4	M4x16 	C-05 x1	SPIRIT LEVEL 
B-06 x8	M4x30 	C-06 x1	MONKEY WRENCH 
B-07 x30		C-07 x2	LADDER 
B-08 x1	3 mm 		
B-09 x1	5 mm 		
B-10 x1			
B-11 x16			
B-12 x64	M8x20 		
B-13 x40	M6x16 		
B-14 x14			
		<div>Recommendation: Minimum 5 people required for assembly</div>	


01. Floor assembly. A-02

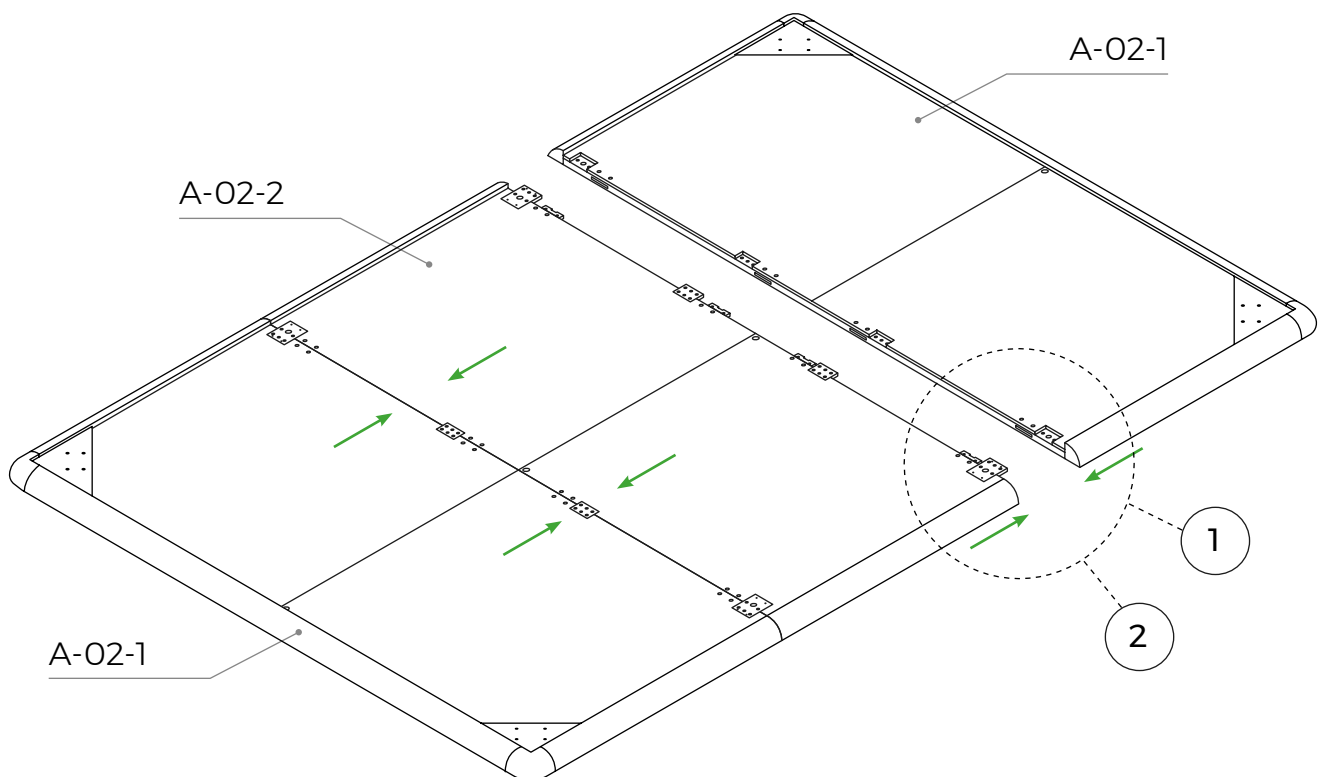


TOOLS





1

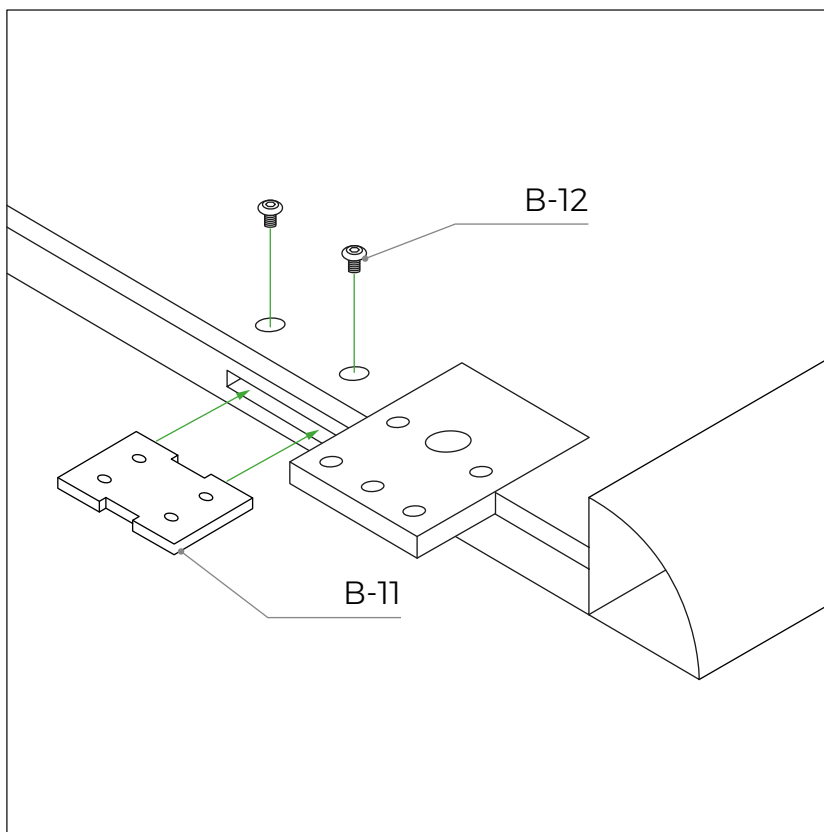


2

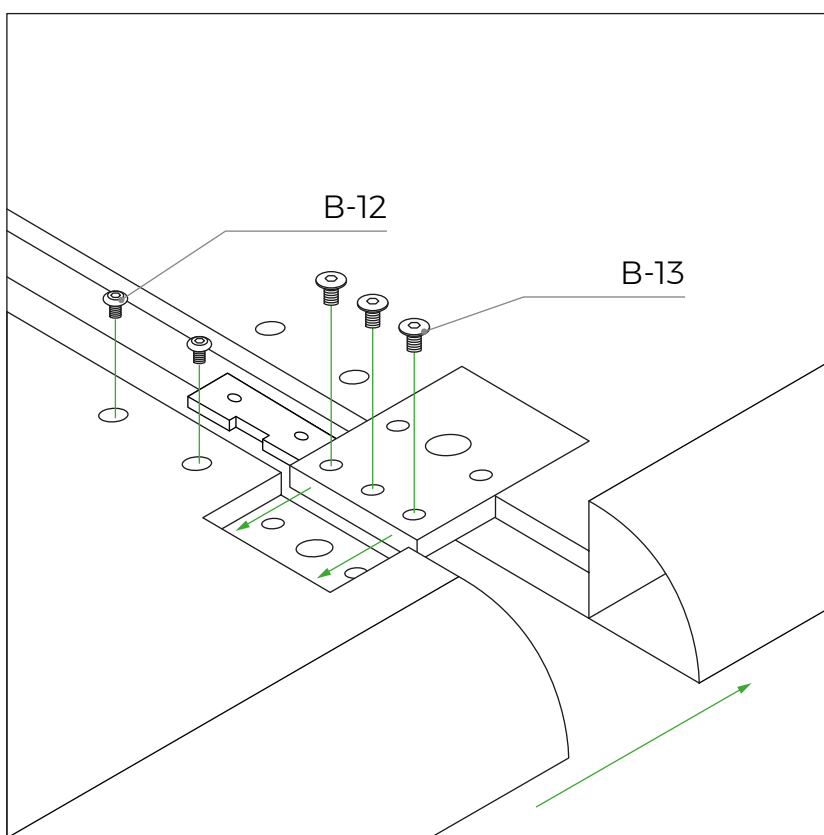

TOOLS

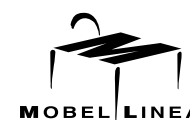


02. Assemble castors. A-01 / A-02 / A-15

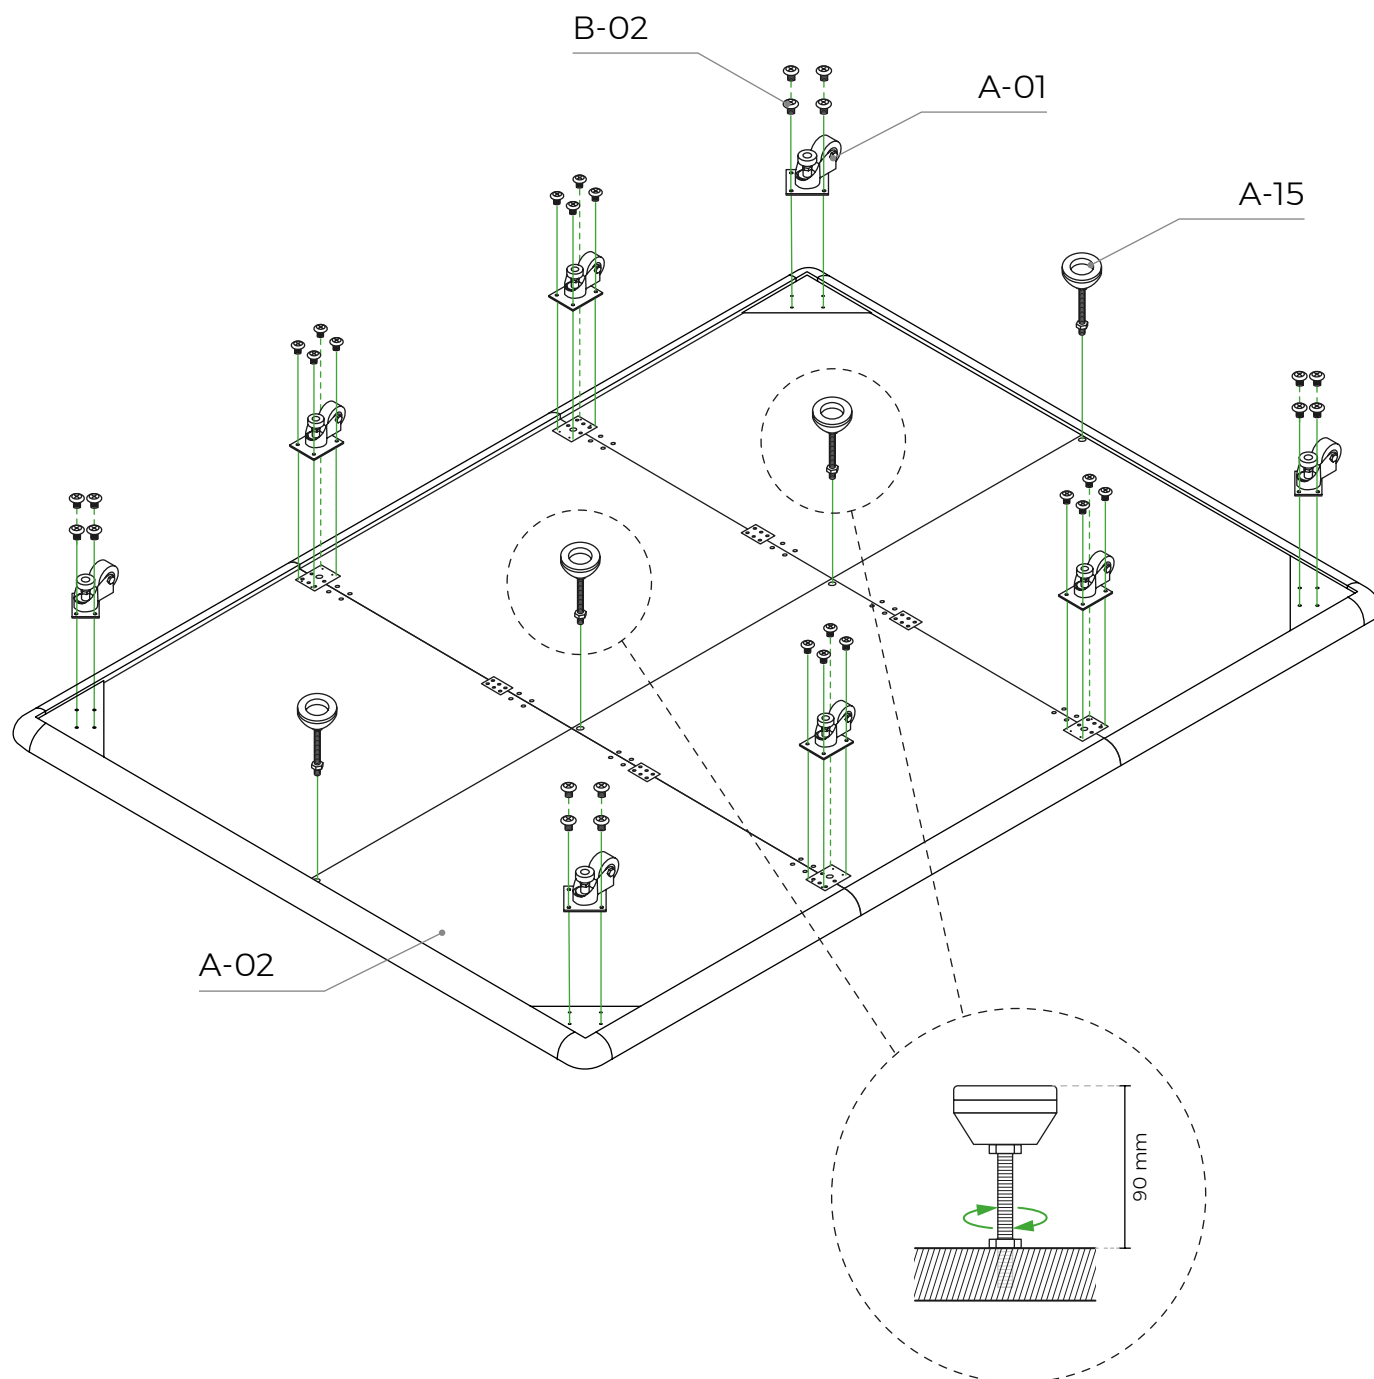

TOOLS



03. Use a spirit level to measure. A-01 / A-02

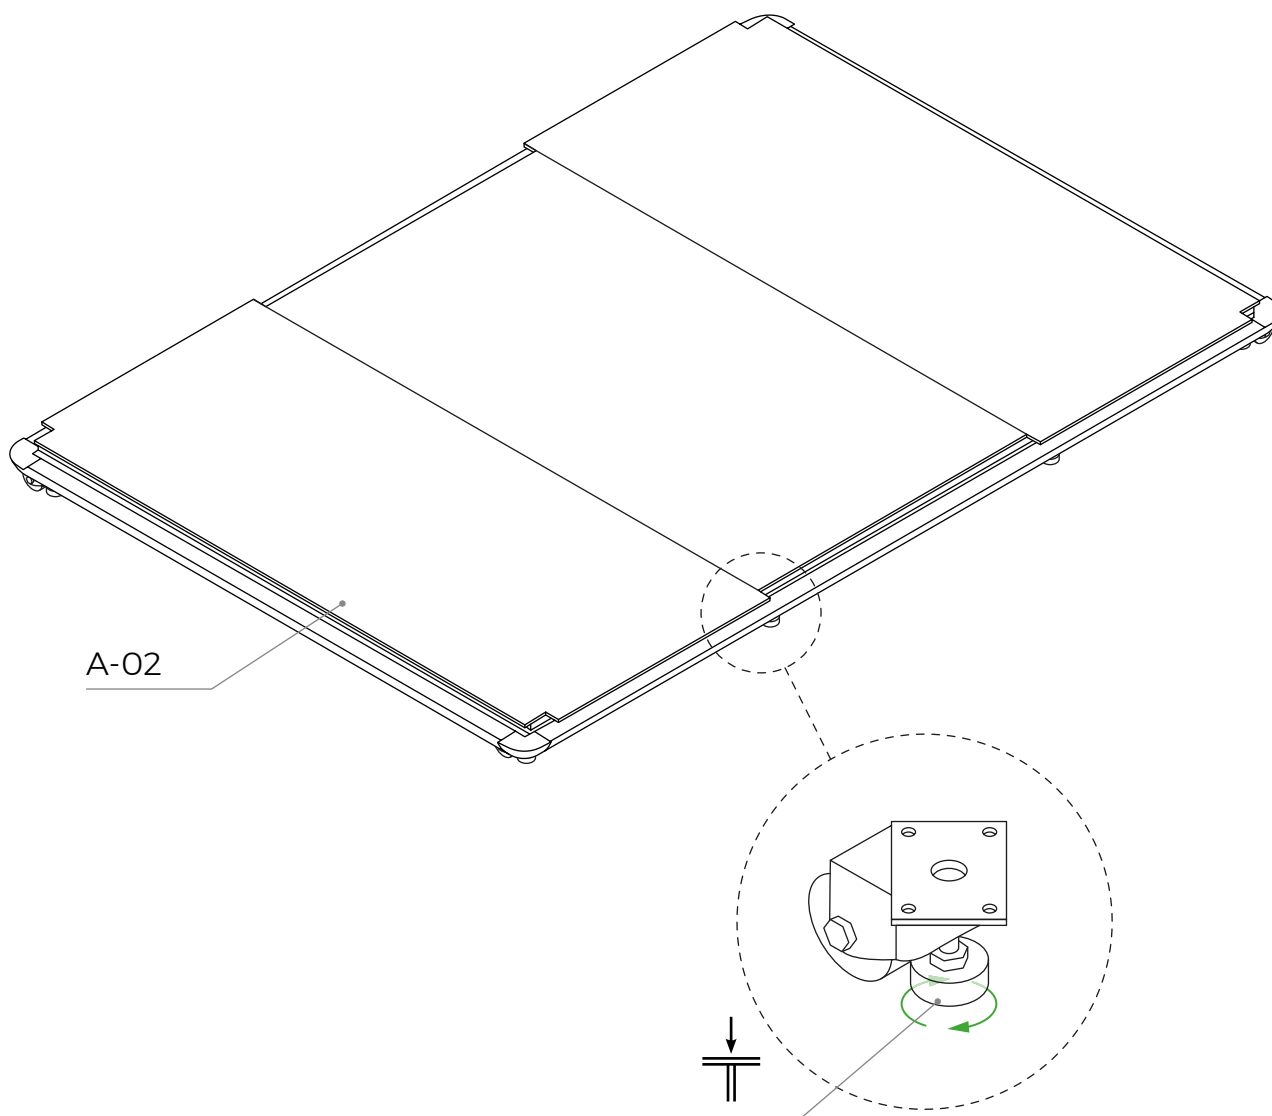


IMPORTANT: Unscrew all leveling glides before moving the booth.


TOOLS





04. Walls assembly. A-03 / A-04 / A-09

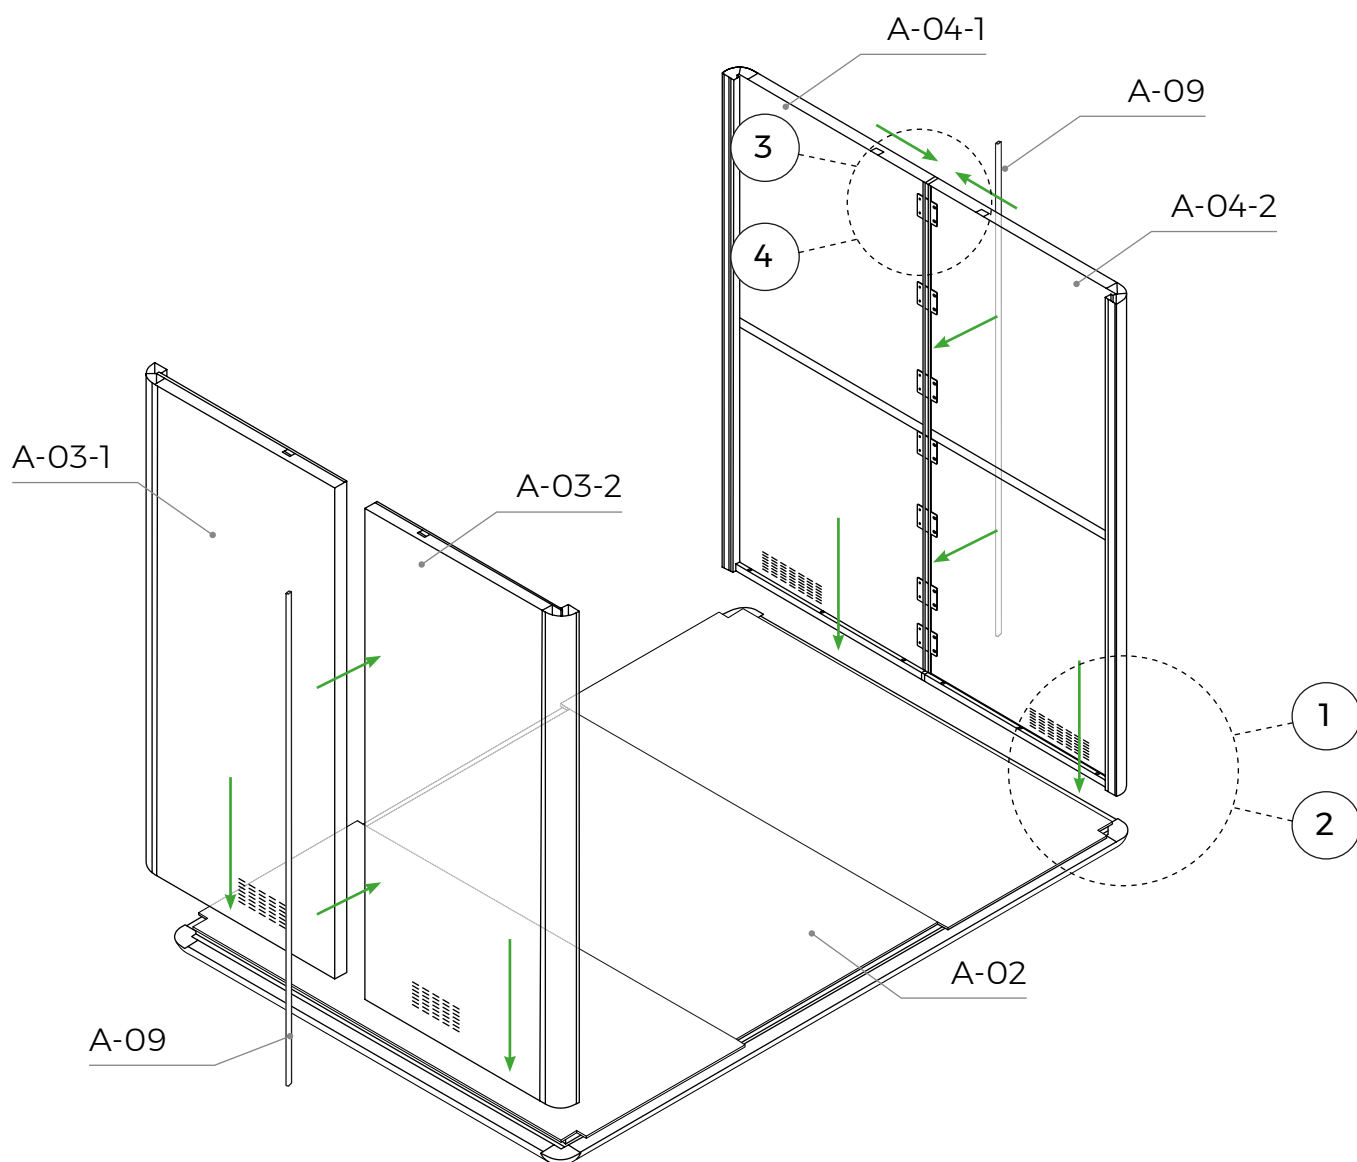




TOOLS



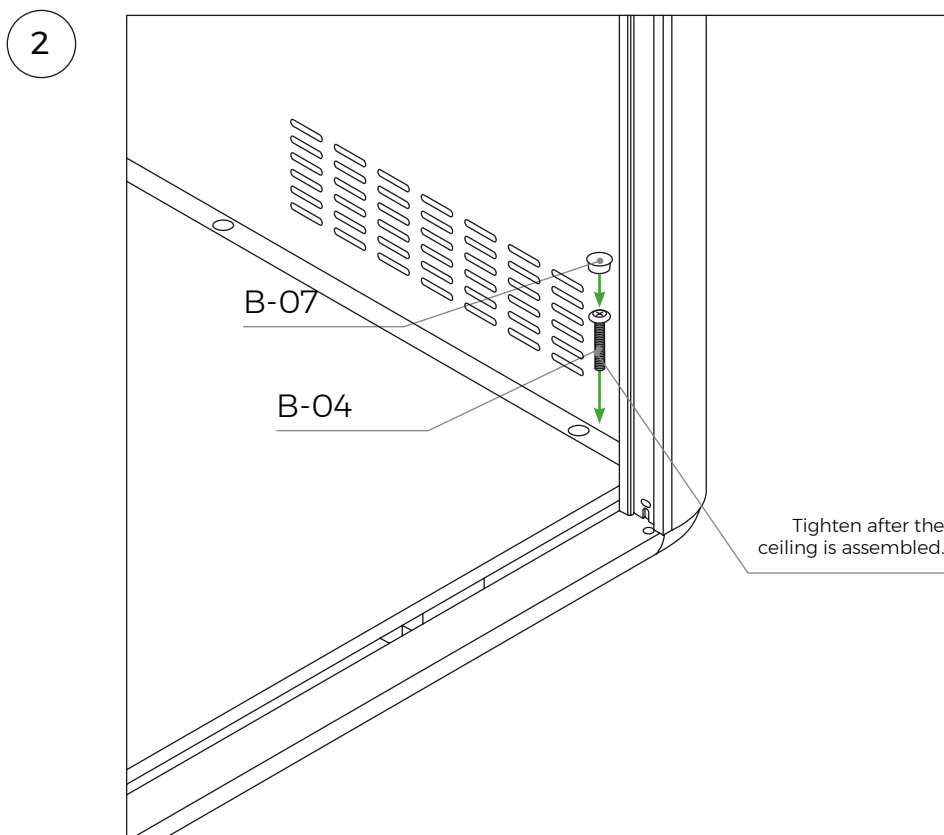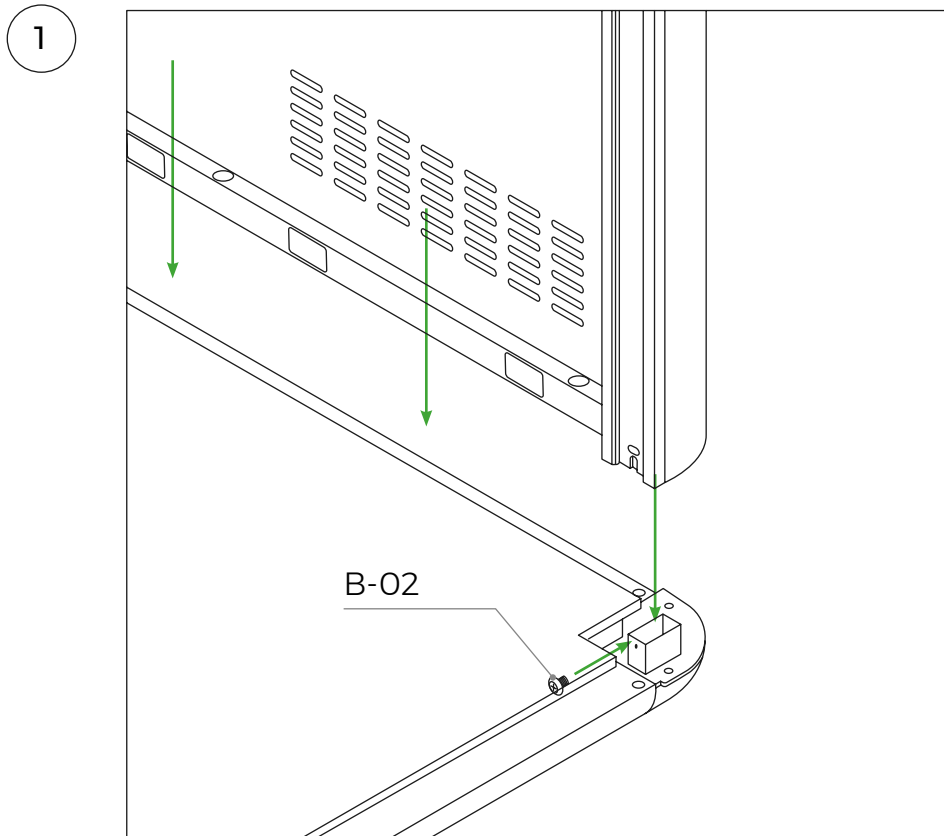


TOOLS




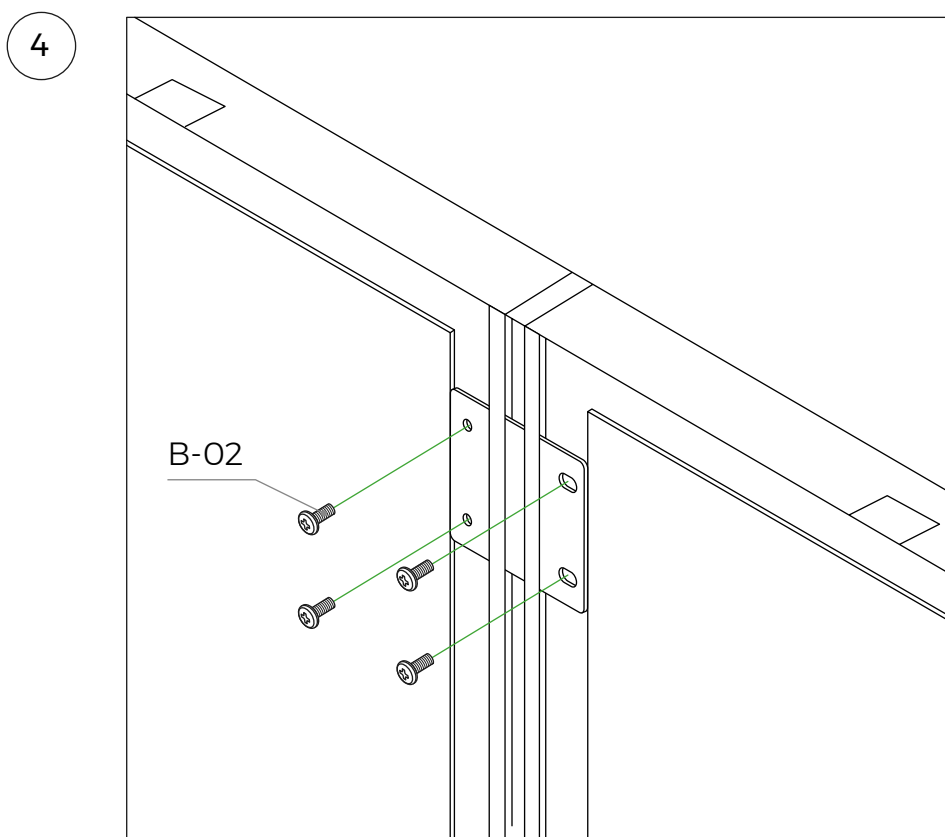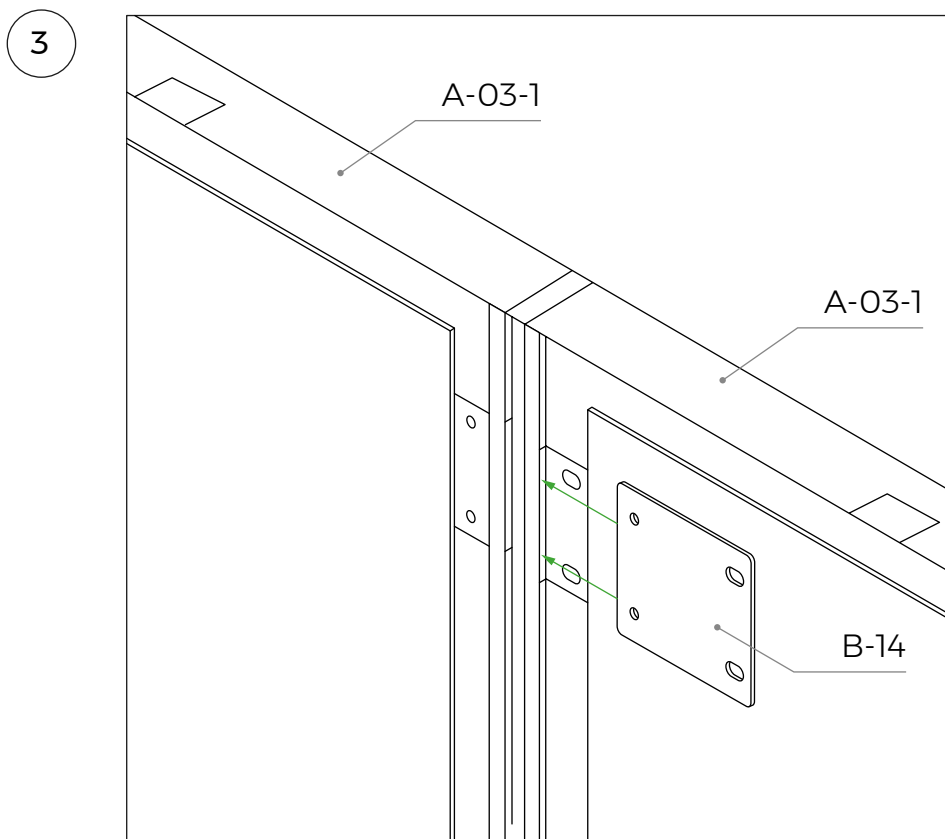


TOOLS




05. Glass assembly. A-05 / A-09

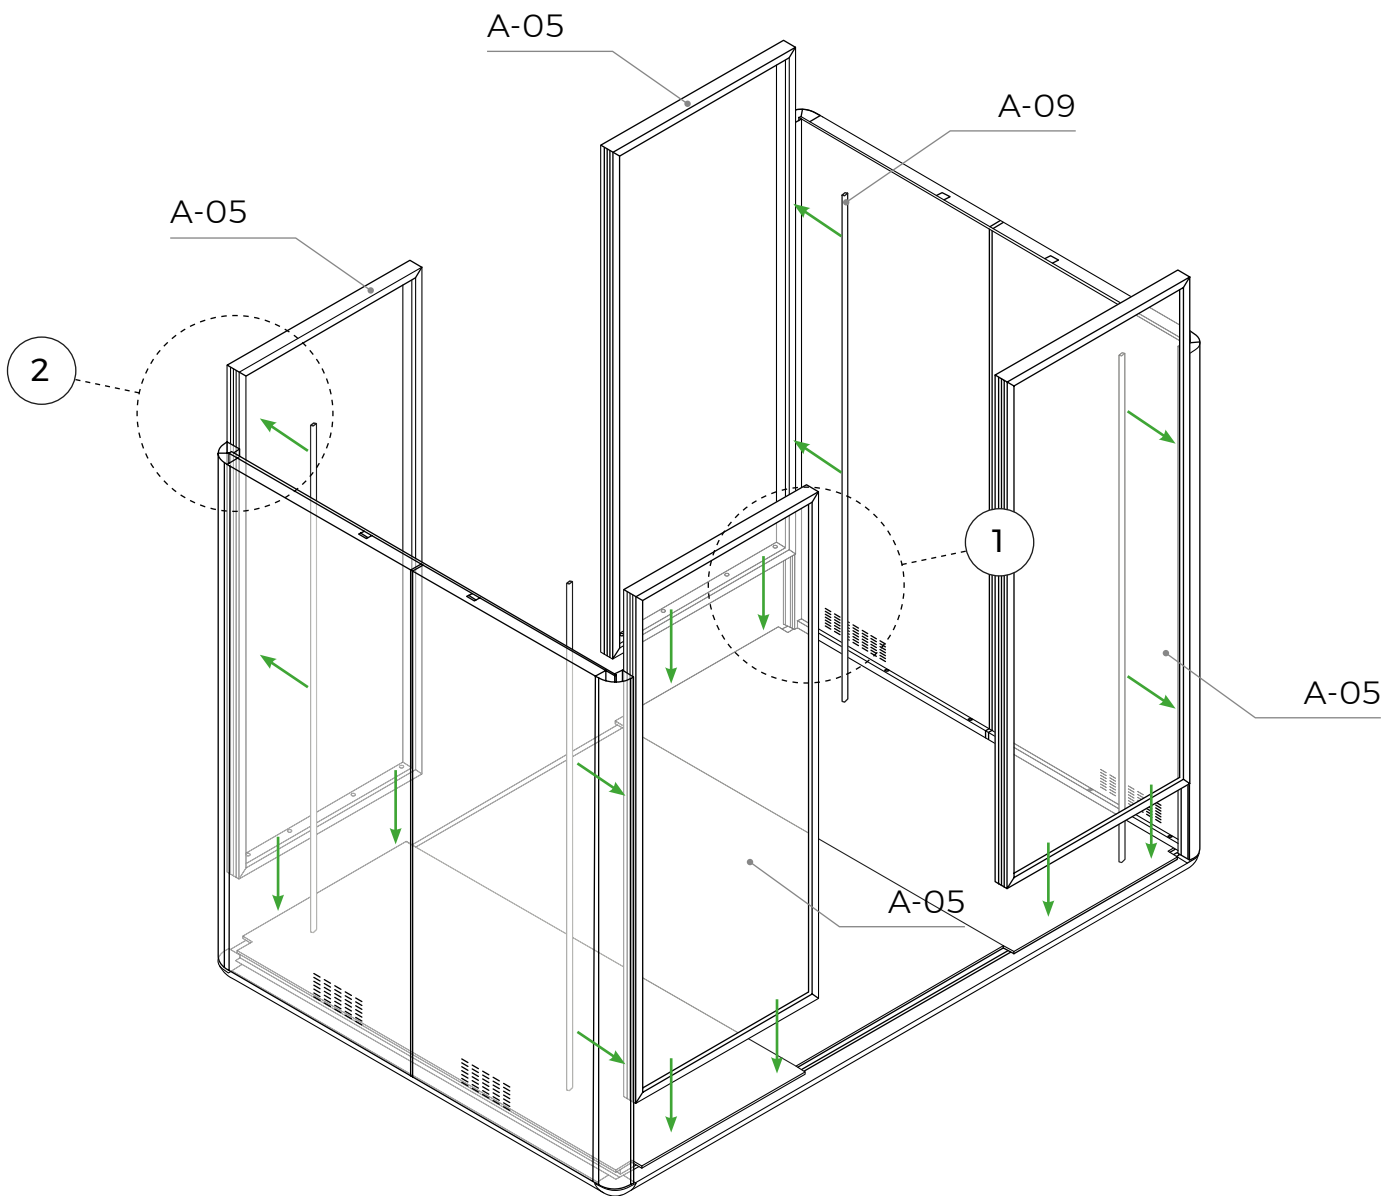


TOOLS




1

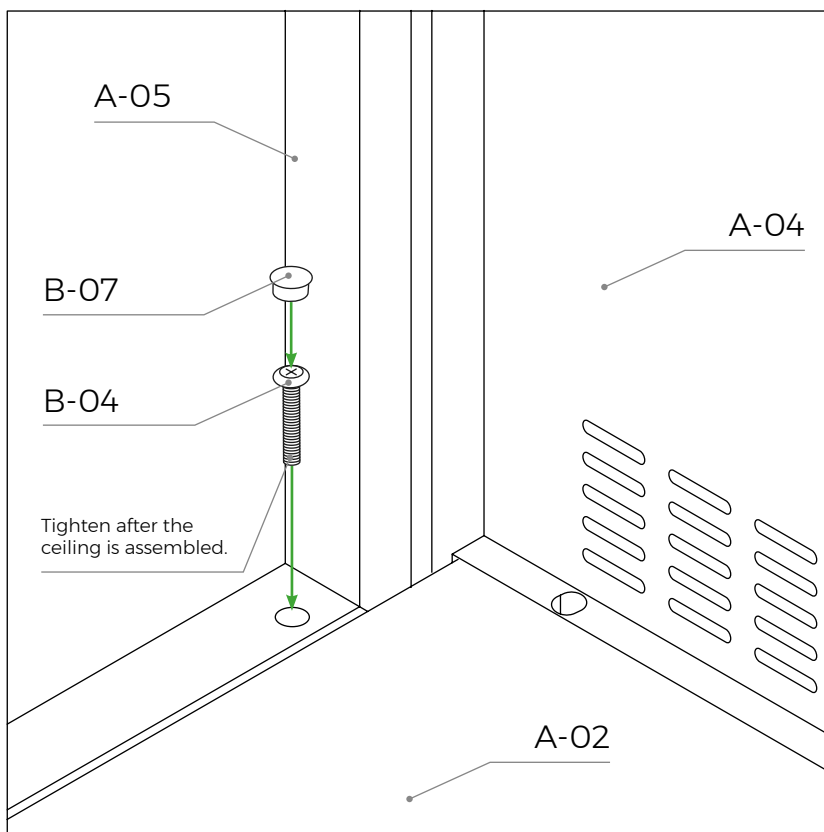

2

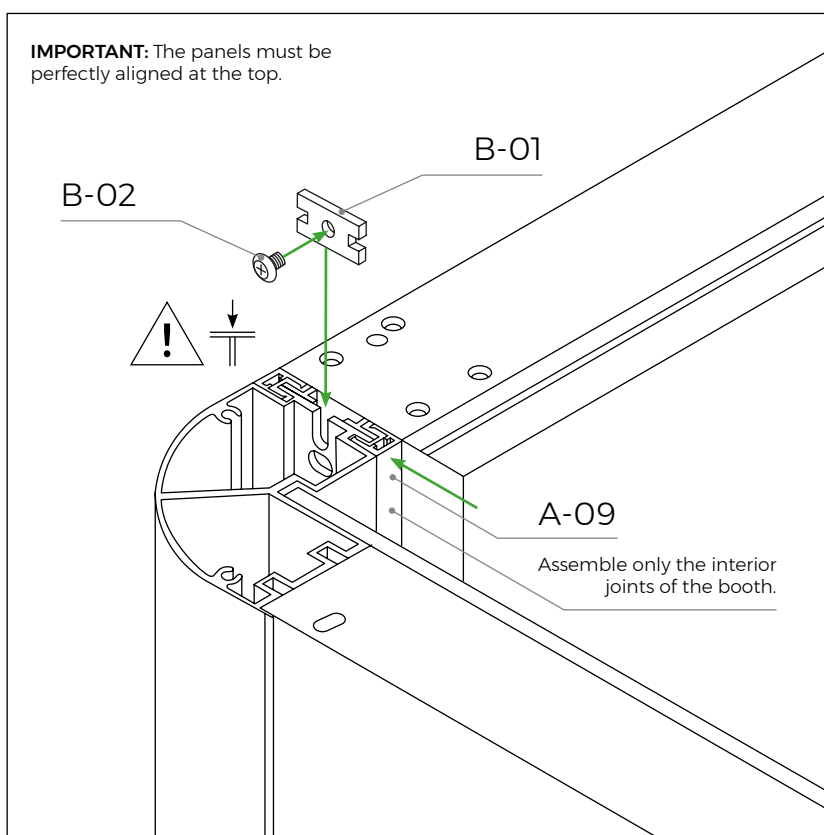


TOOLS




PET PANELS OPTION

06. PET panels assembly. A-16

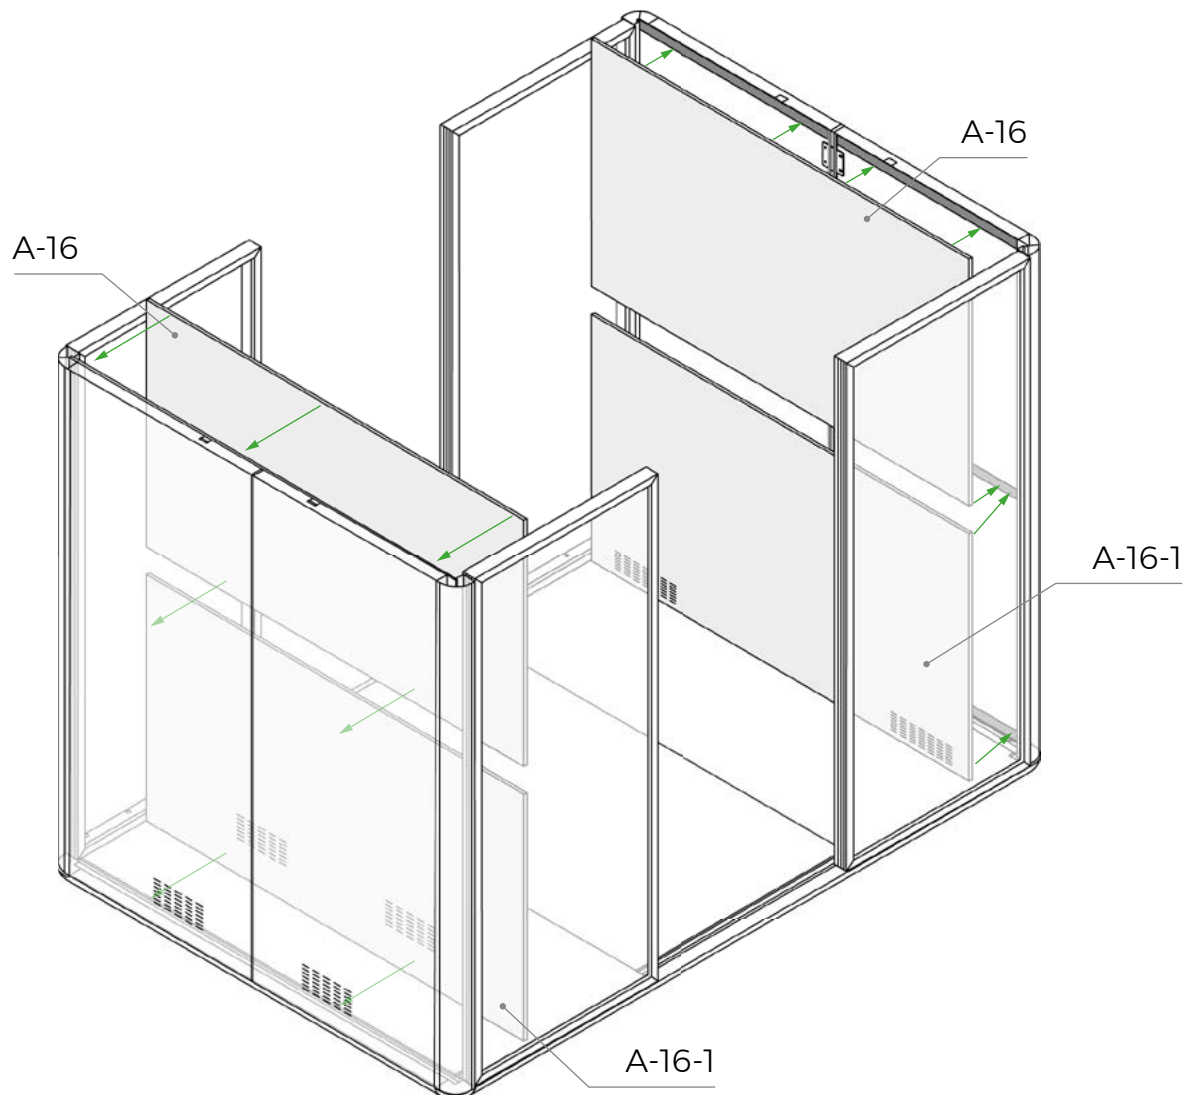


WOOD PANELS OPTION


06. Wood panels assembly for acoustic sofa.

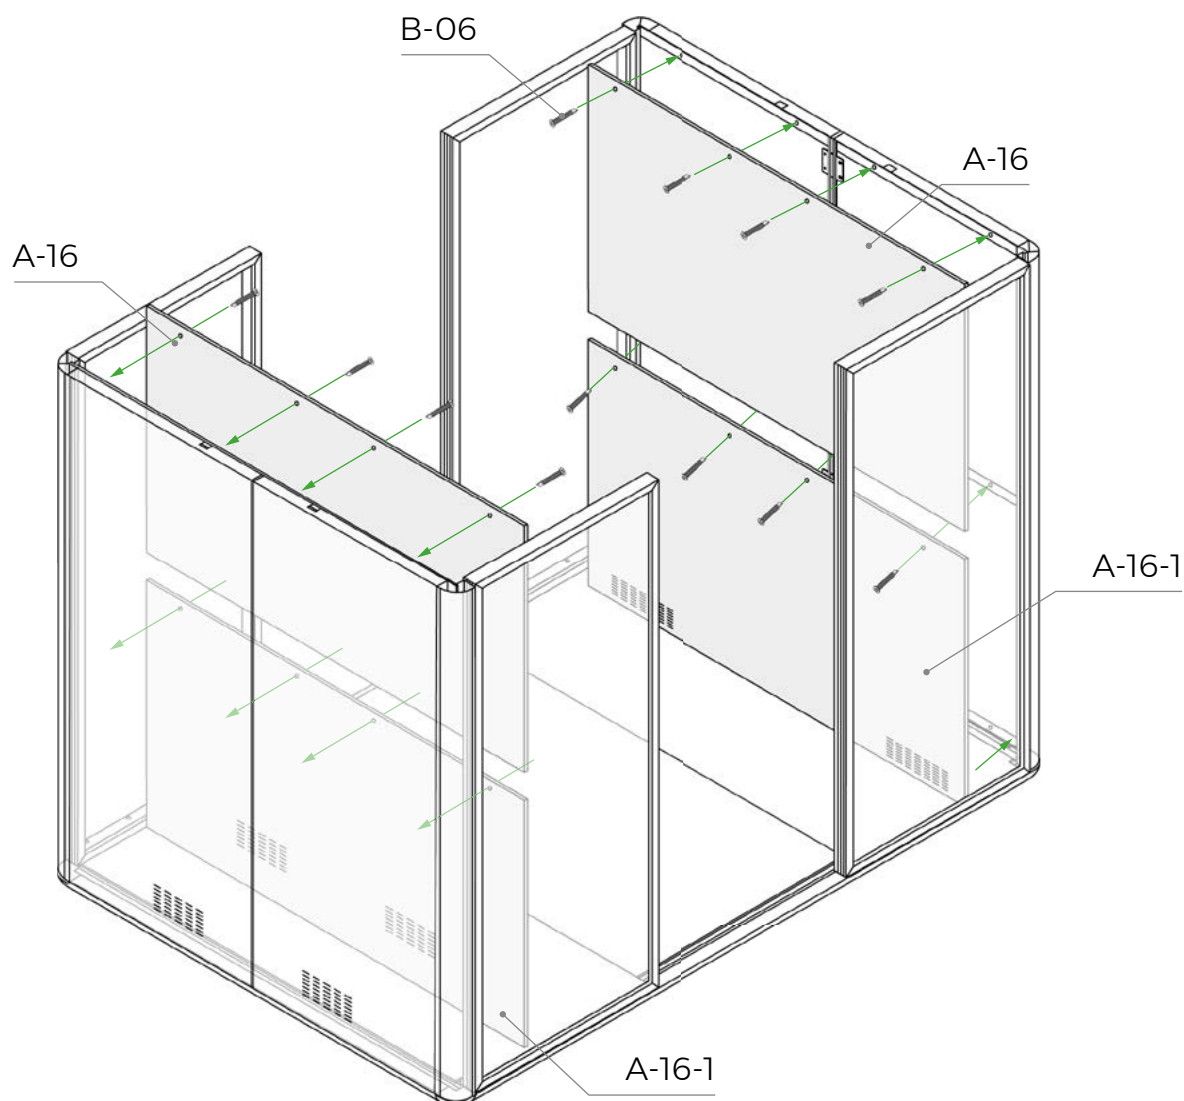

TOOLS




07. Back center wall assembly. A-06 / A-09

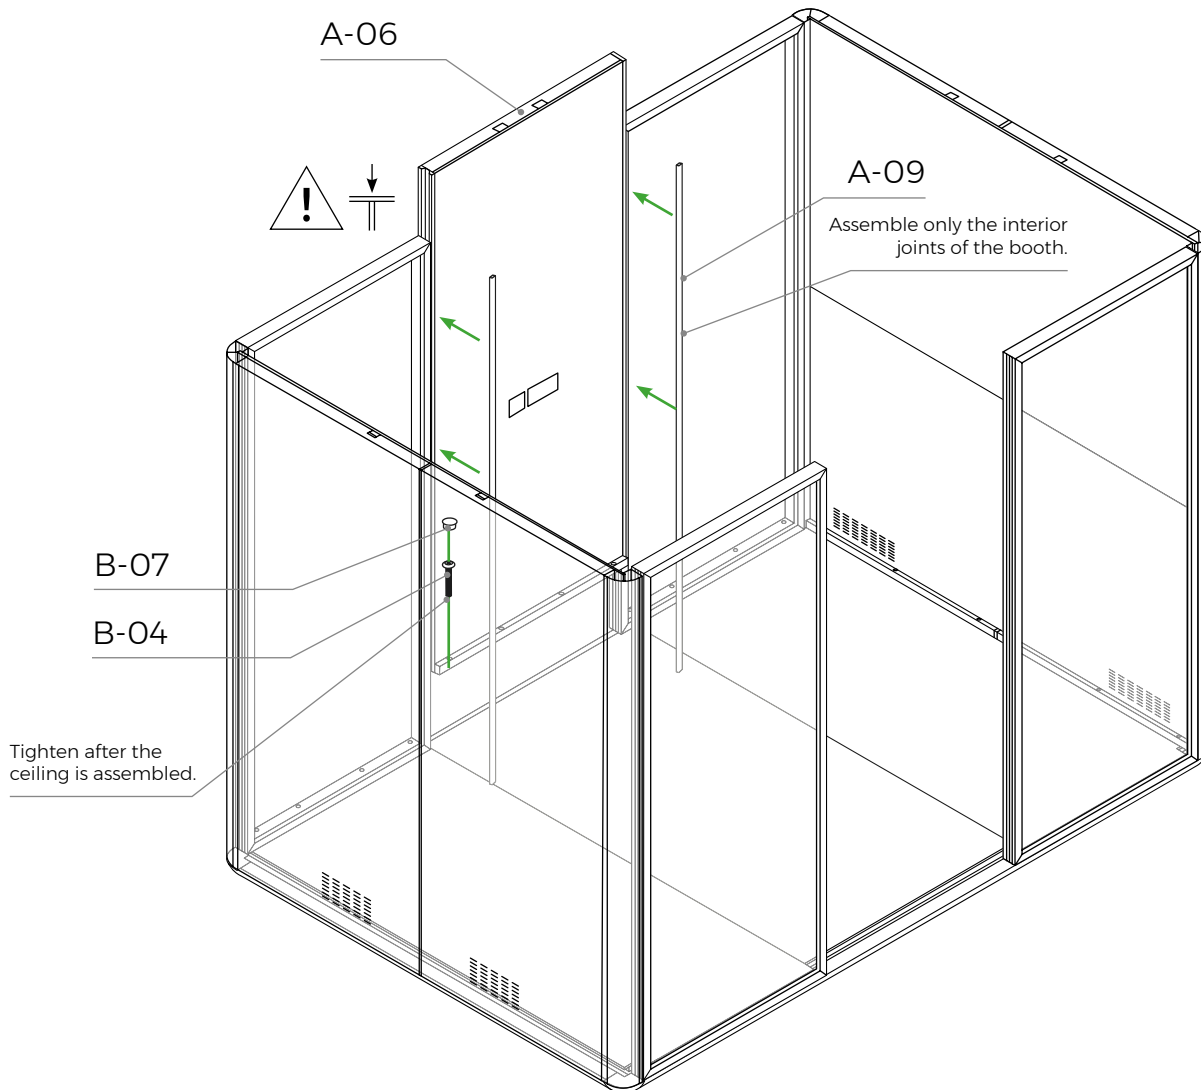


IMPORTANT:

1. To ensure proper assembly, insert panel A-06 at an angle. The wall must be held firmly to prevent it from tipping over.




2. The panels must be perfectly aligned at the top.


TOOLS




08. Ceiling assembly. A-07

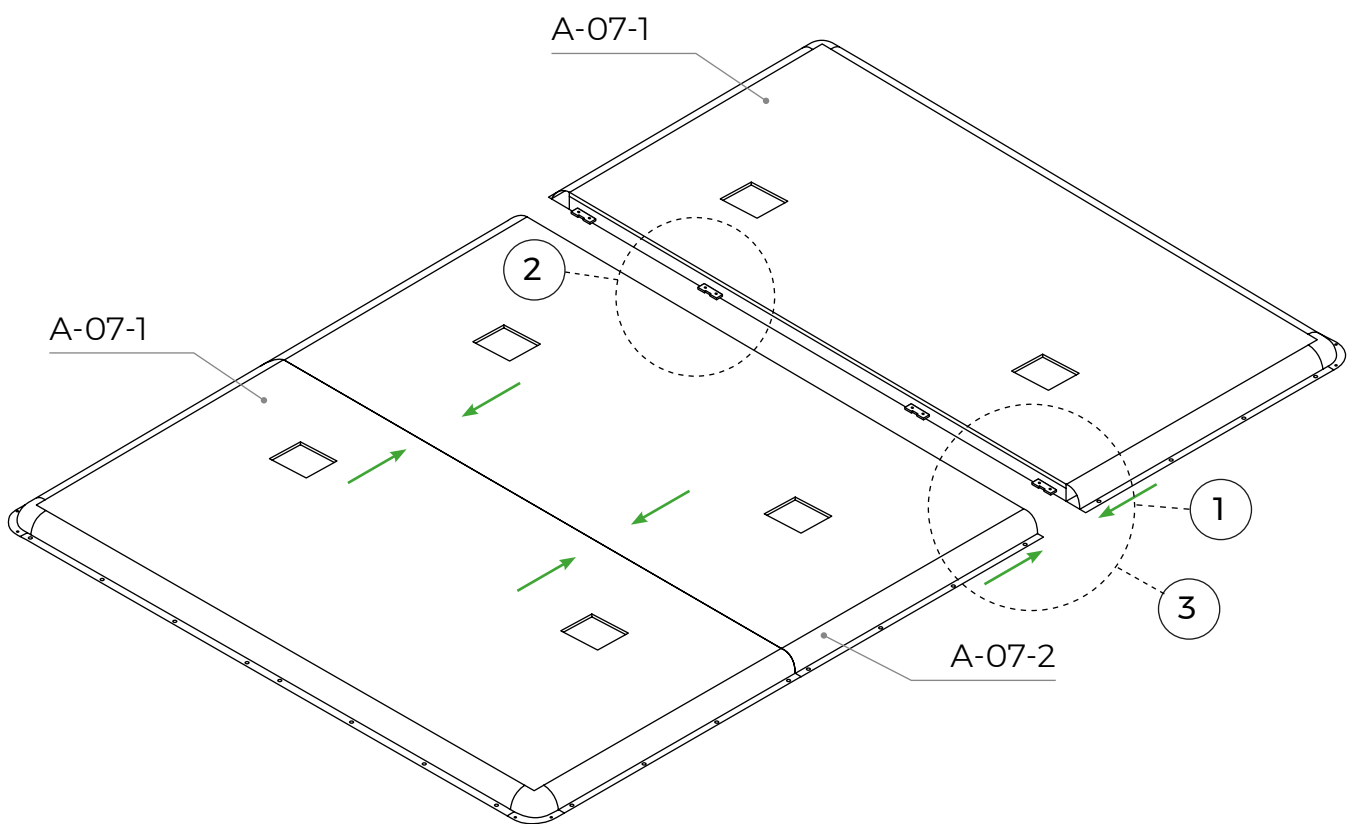


TOOLS




1

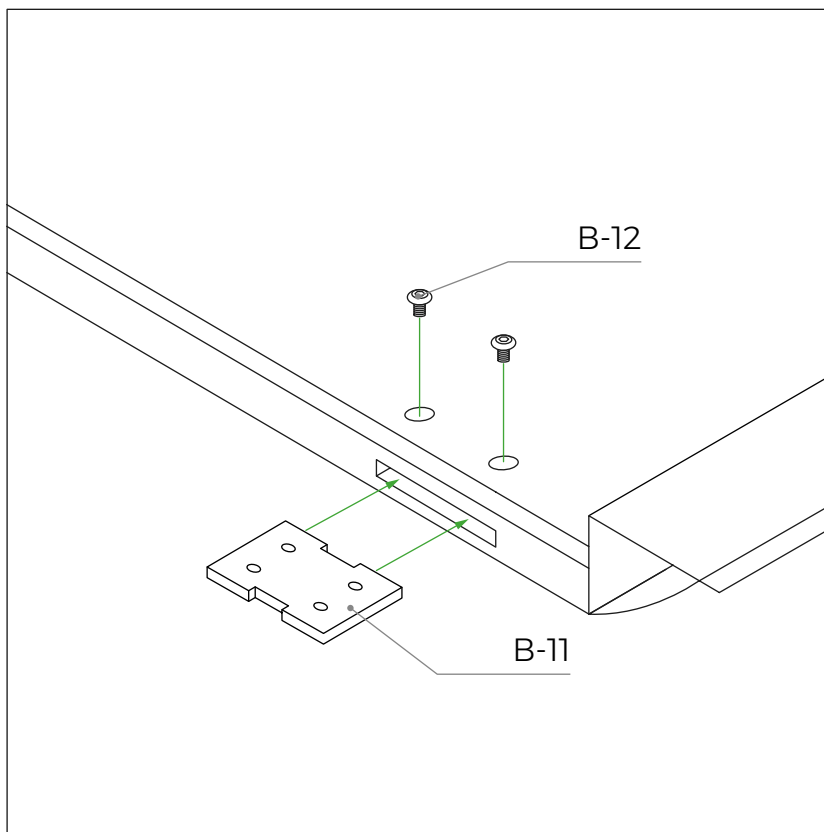


2

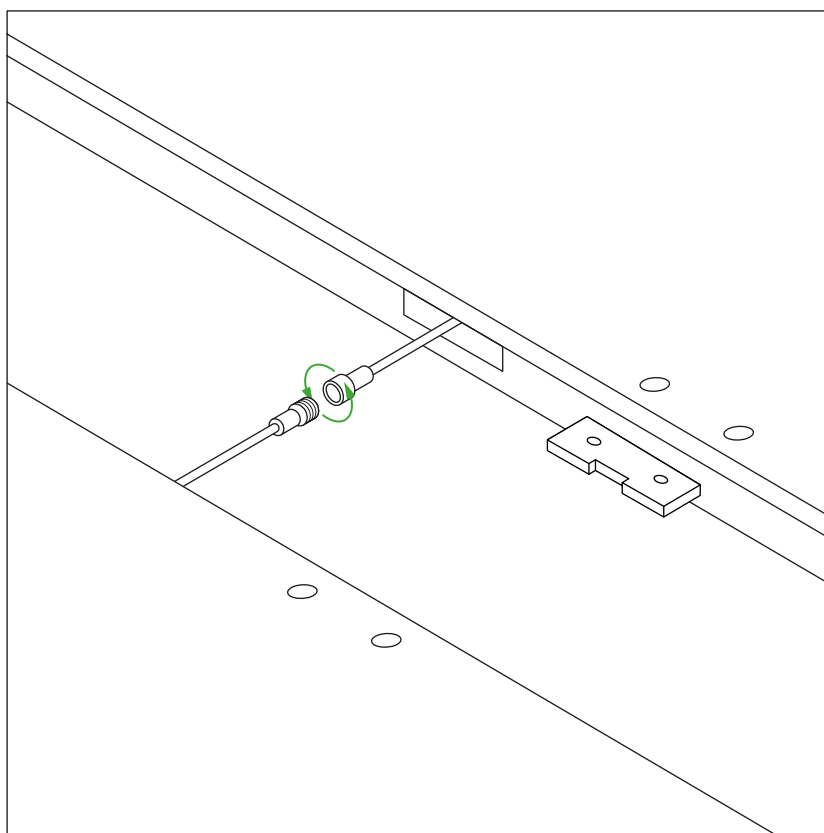



TOOLS




3

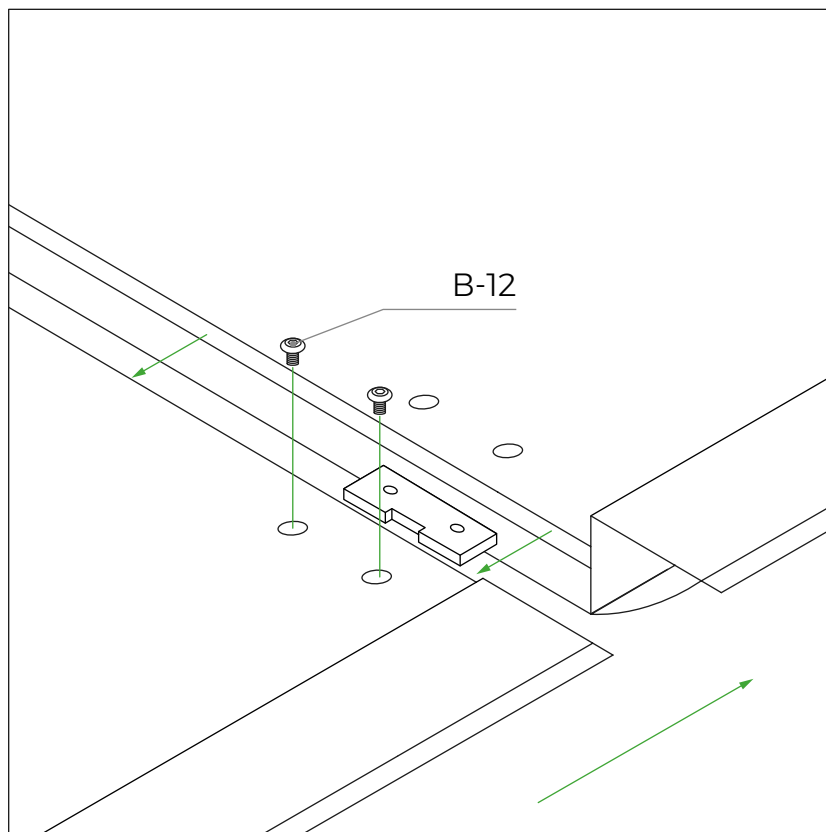


TOOLS

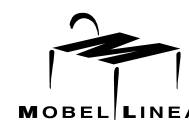


09. Assemble roof and fan covers. A-07 / A-10

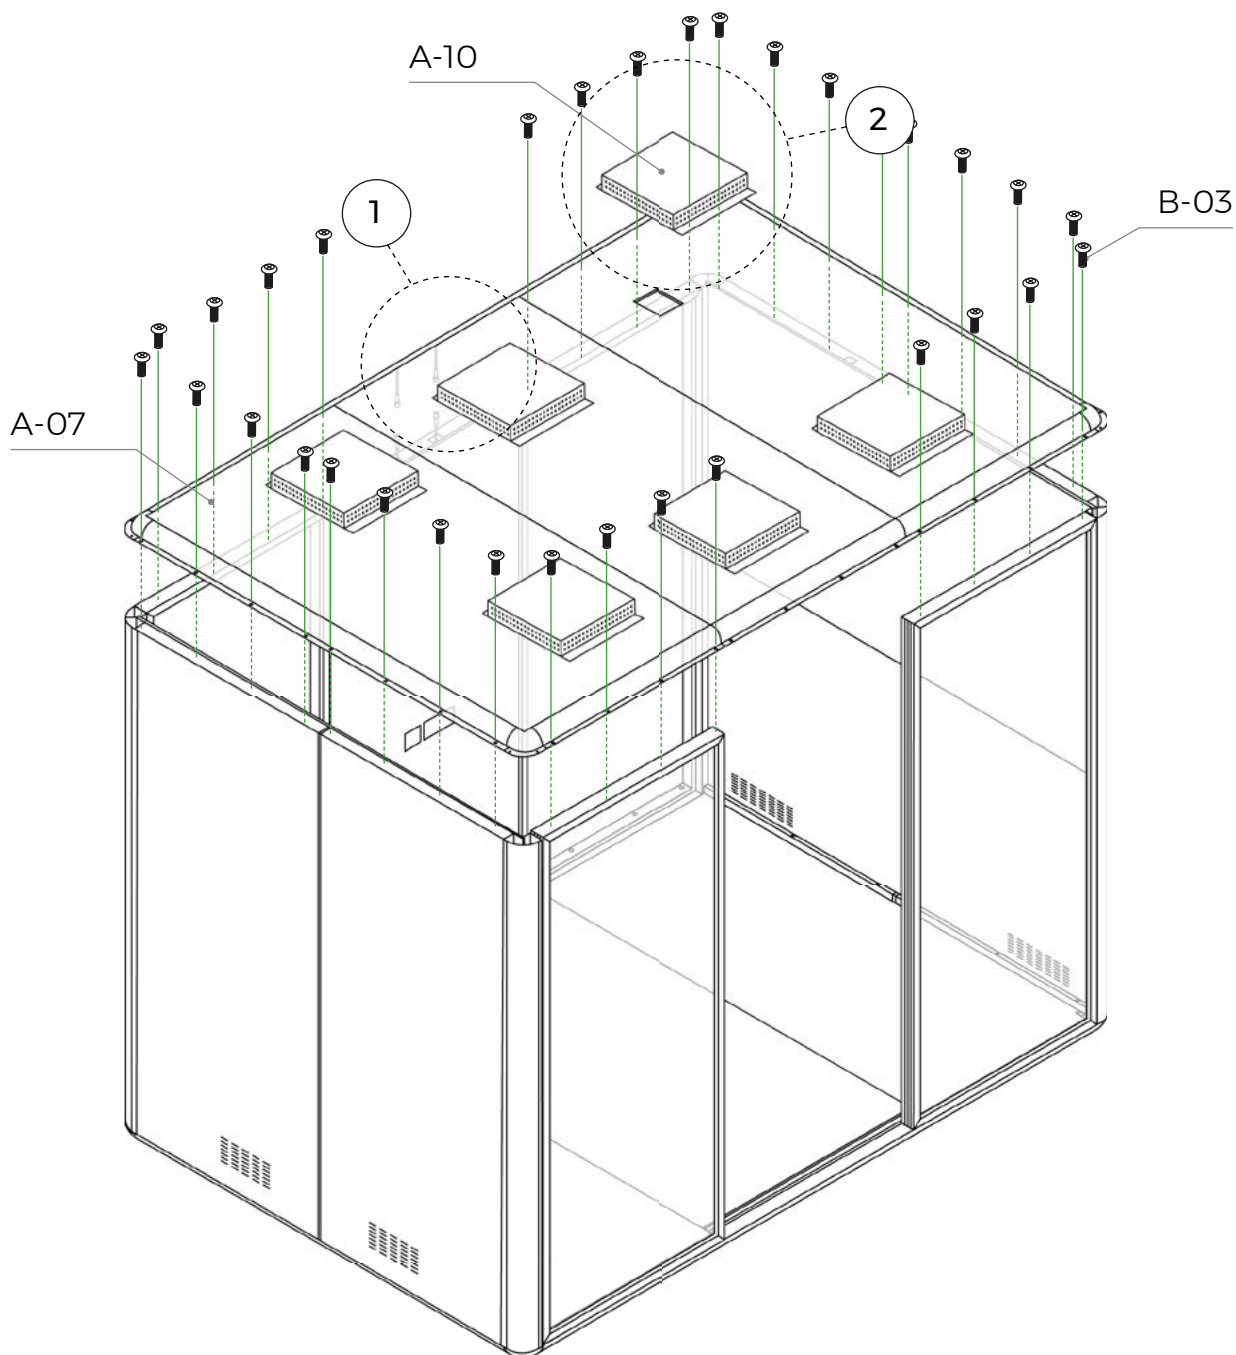


TOOLS




1

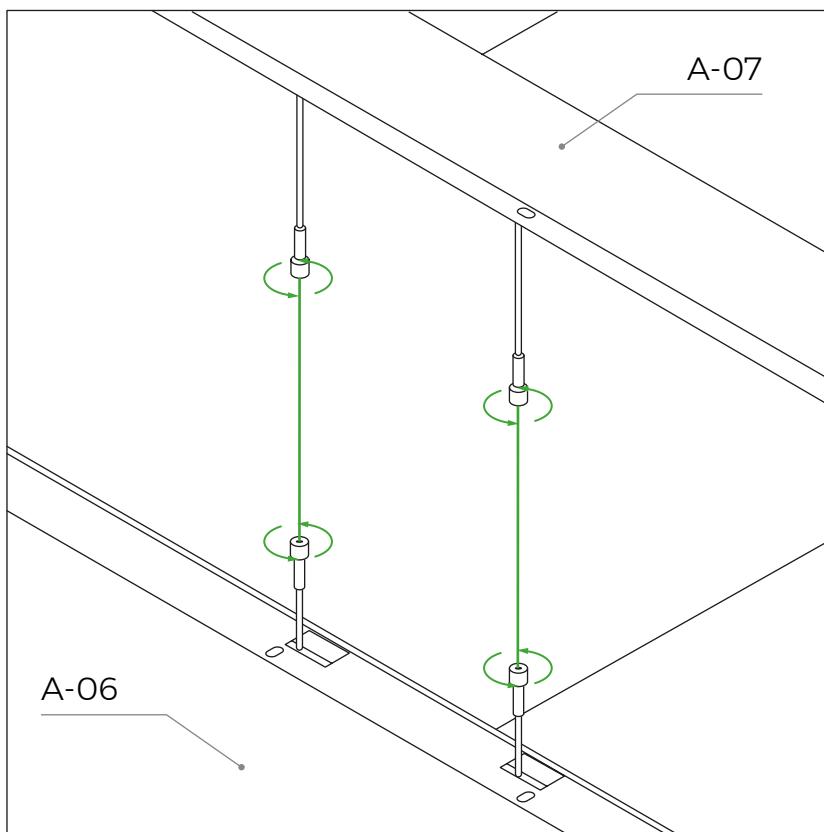


2

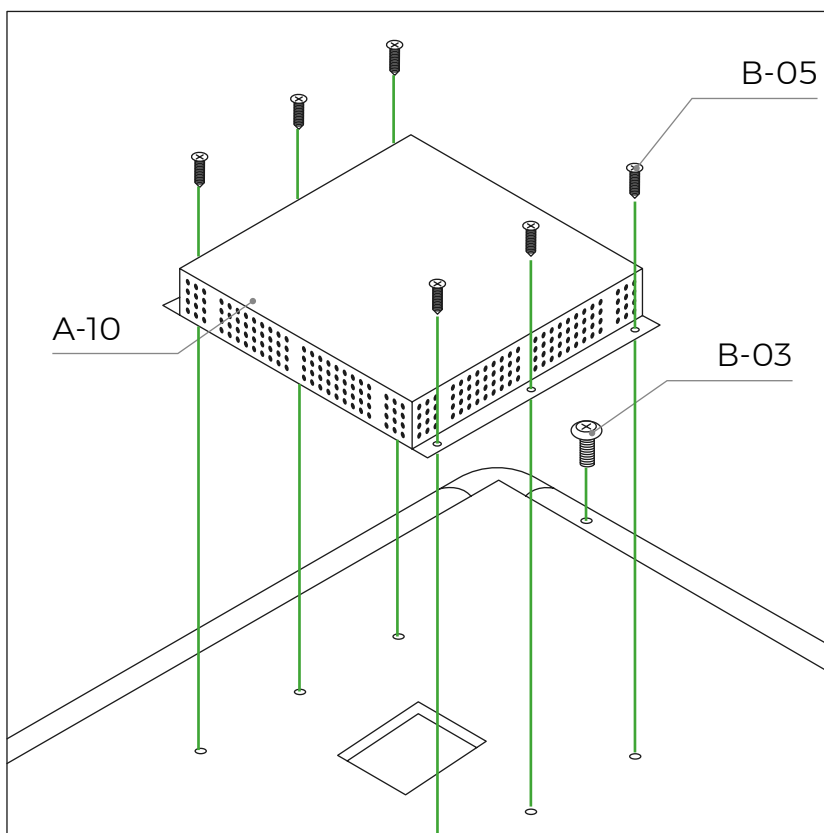

TOOLS




10. Assemble glass door and lock. A-08 / A-09 / A-11 / A-12 / A-13 / A-14

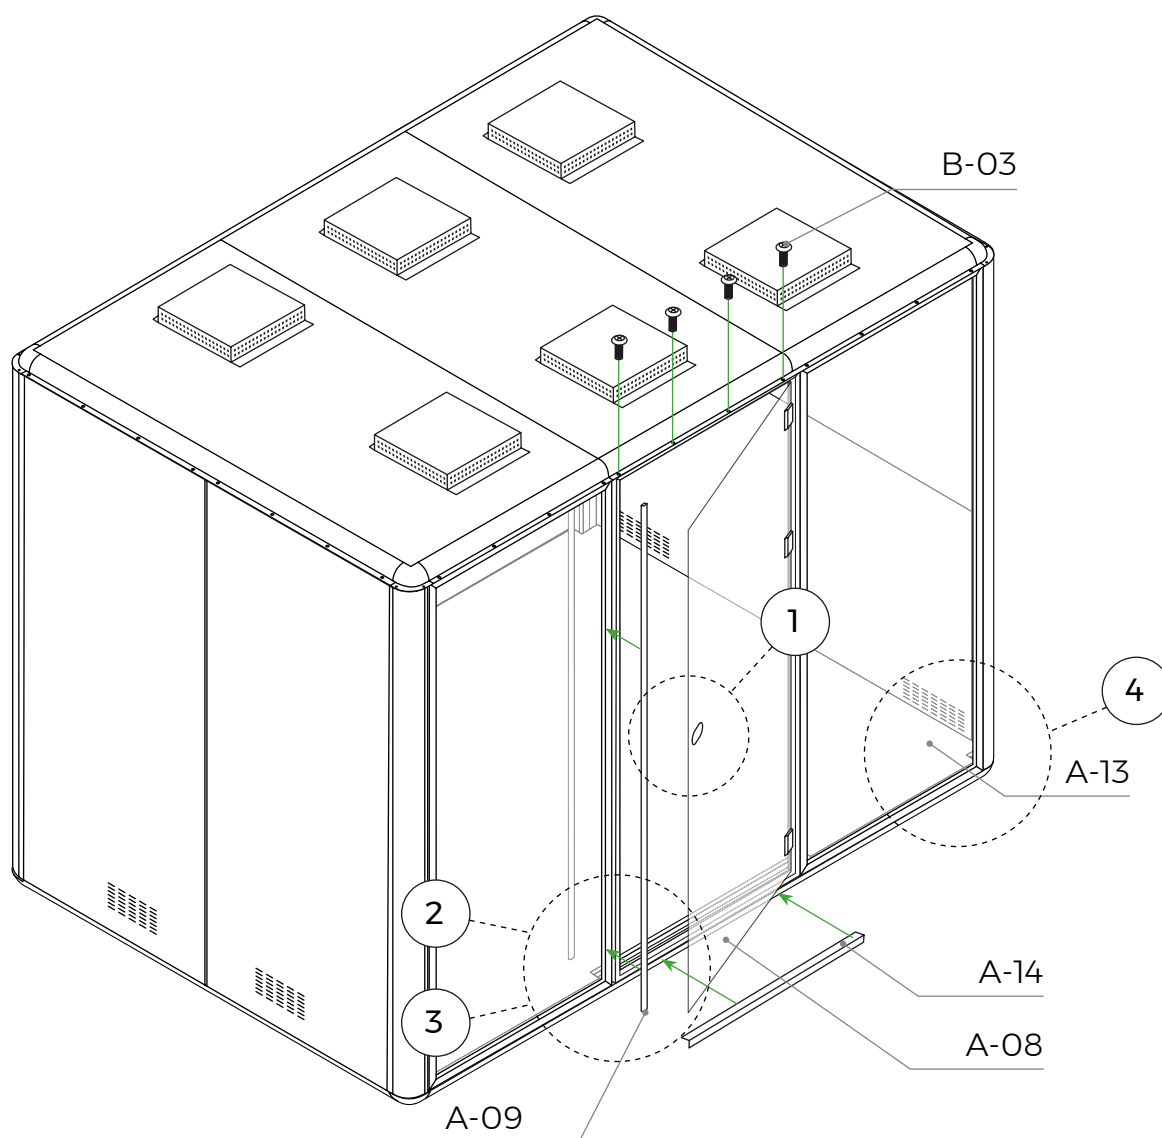


IMPORTANT:



1. To ensure proper assembly, insert panel A-08 at an angle. The wall must be held firmly to prevent it from tipping over.




TOOLS




1

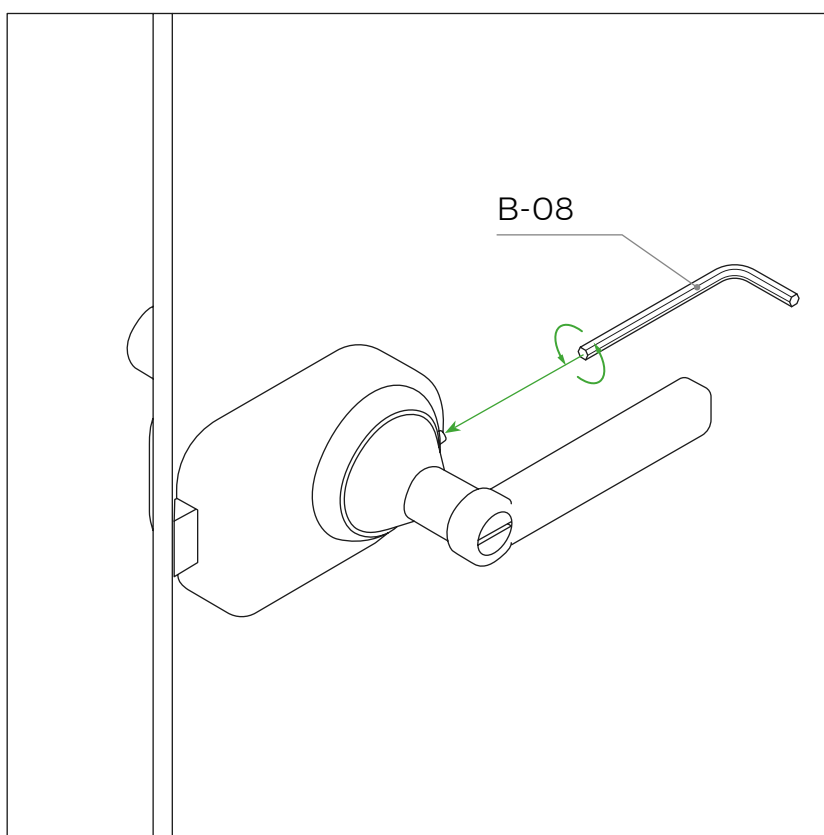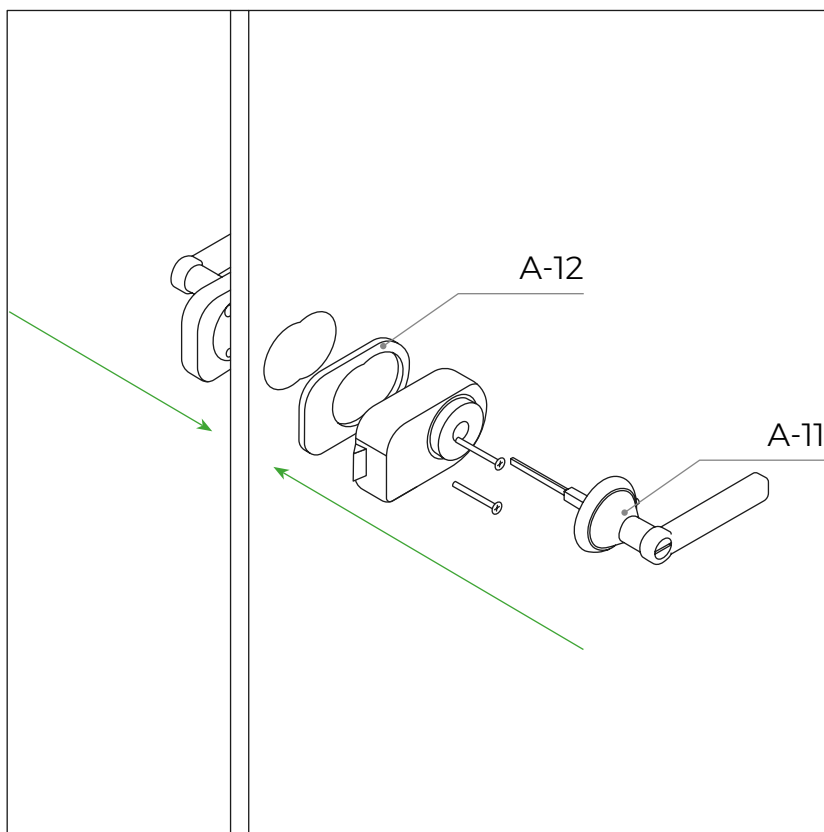


TOOLS



2

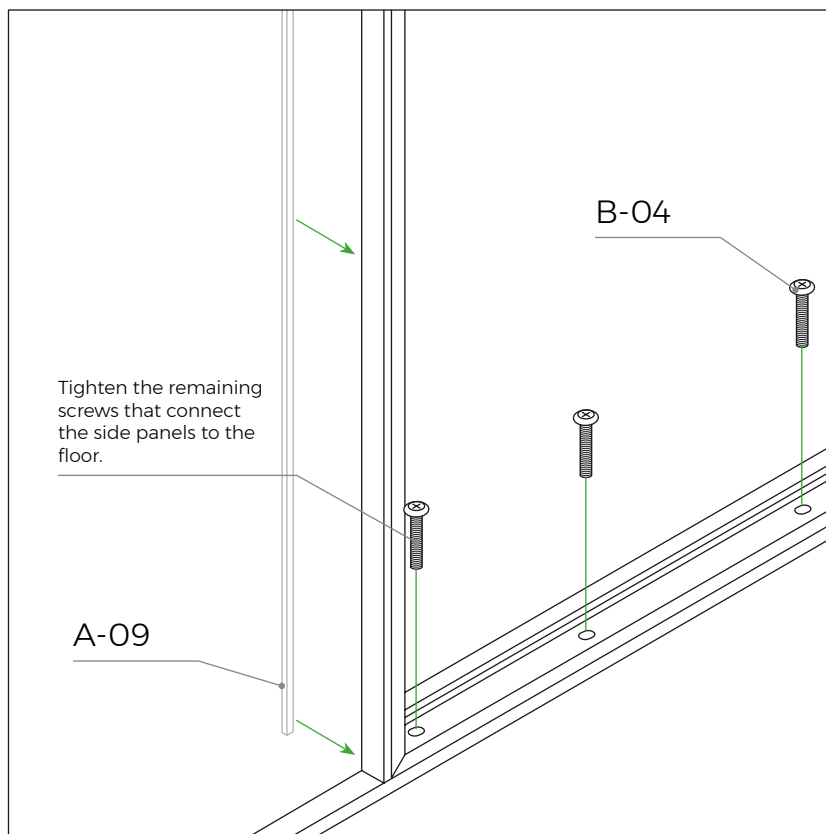

3

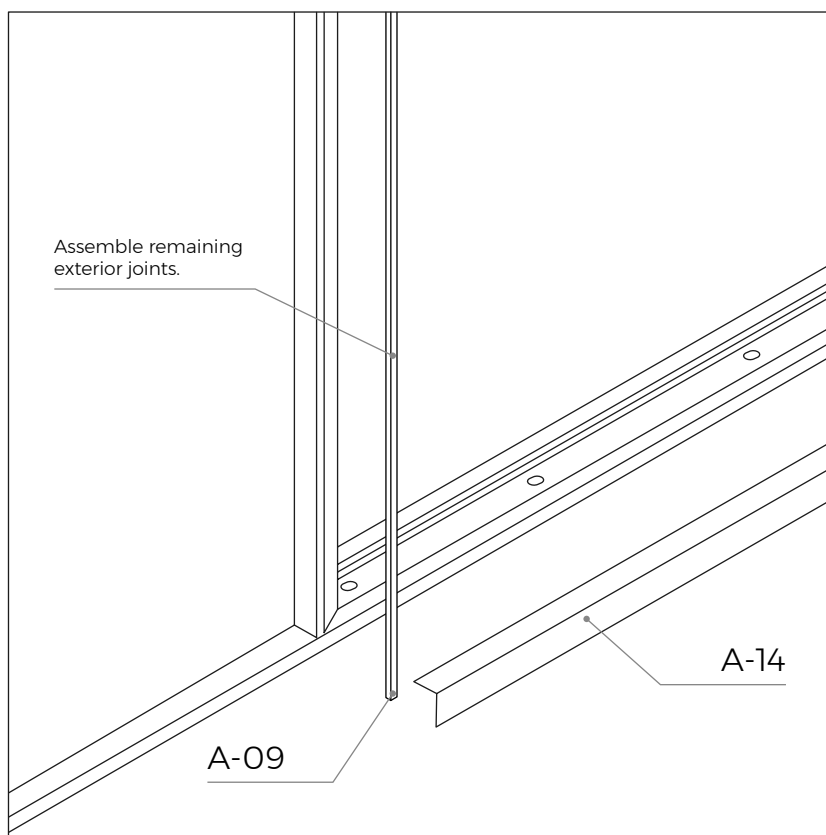

TOOLS

