

KREA


ASSEMBLY INSTRUCTIONS

by mobel linea
EN




PLEASE MAKE SURE TO PRESS ONLY THE FRONT LEVER TO TILT THE TABLE. PRESSING THE REAR LEVER WILL CAUSE THE GAS SPRING TO LIFT THE SURFACE.



Attention: Do not fully tighten the screws until all components are properly positioned.

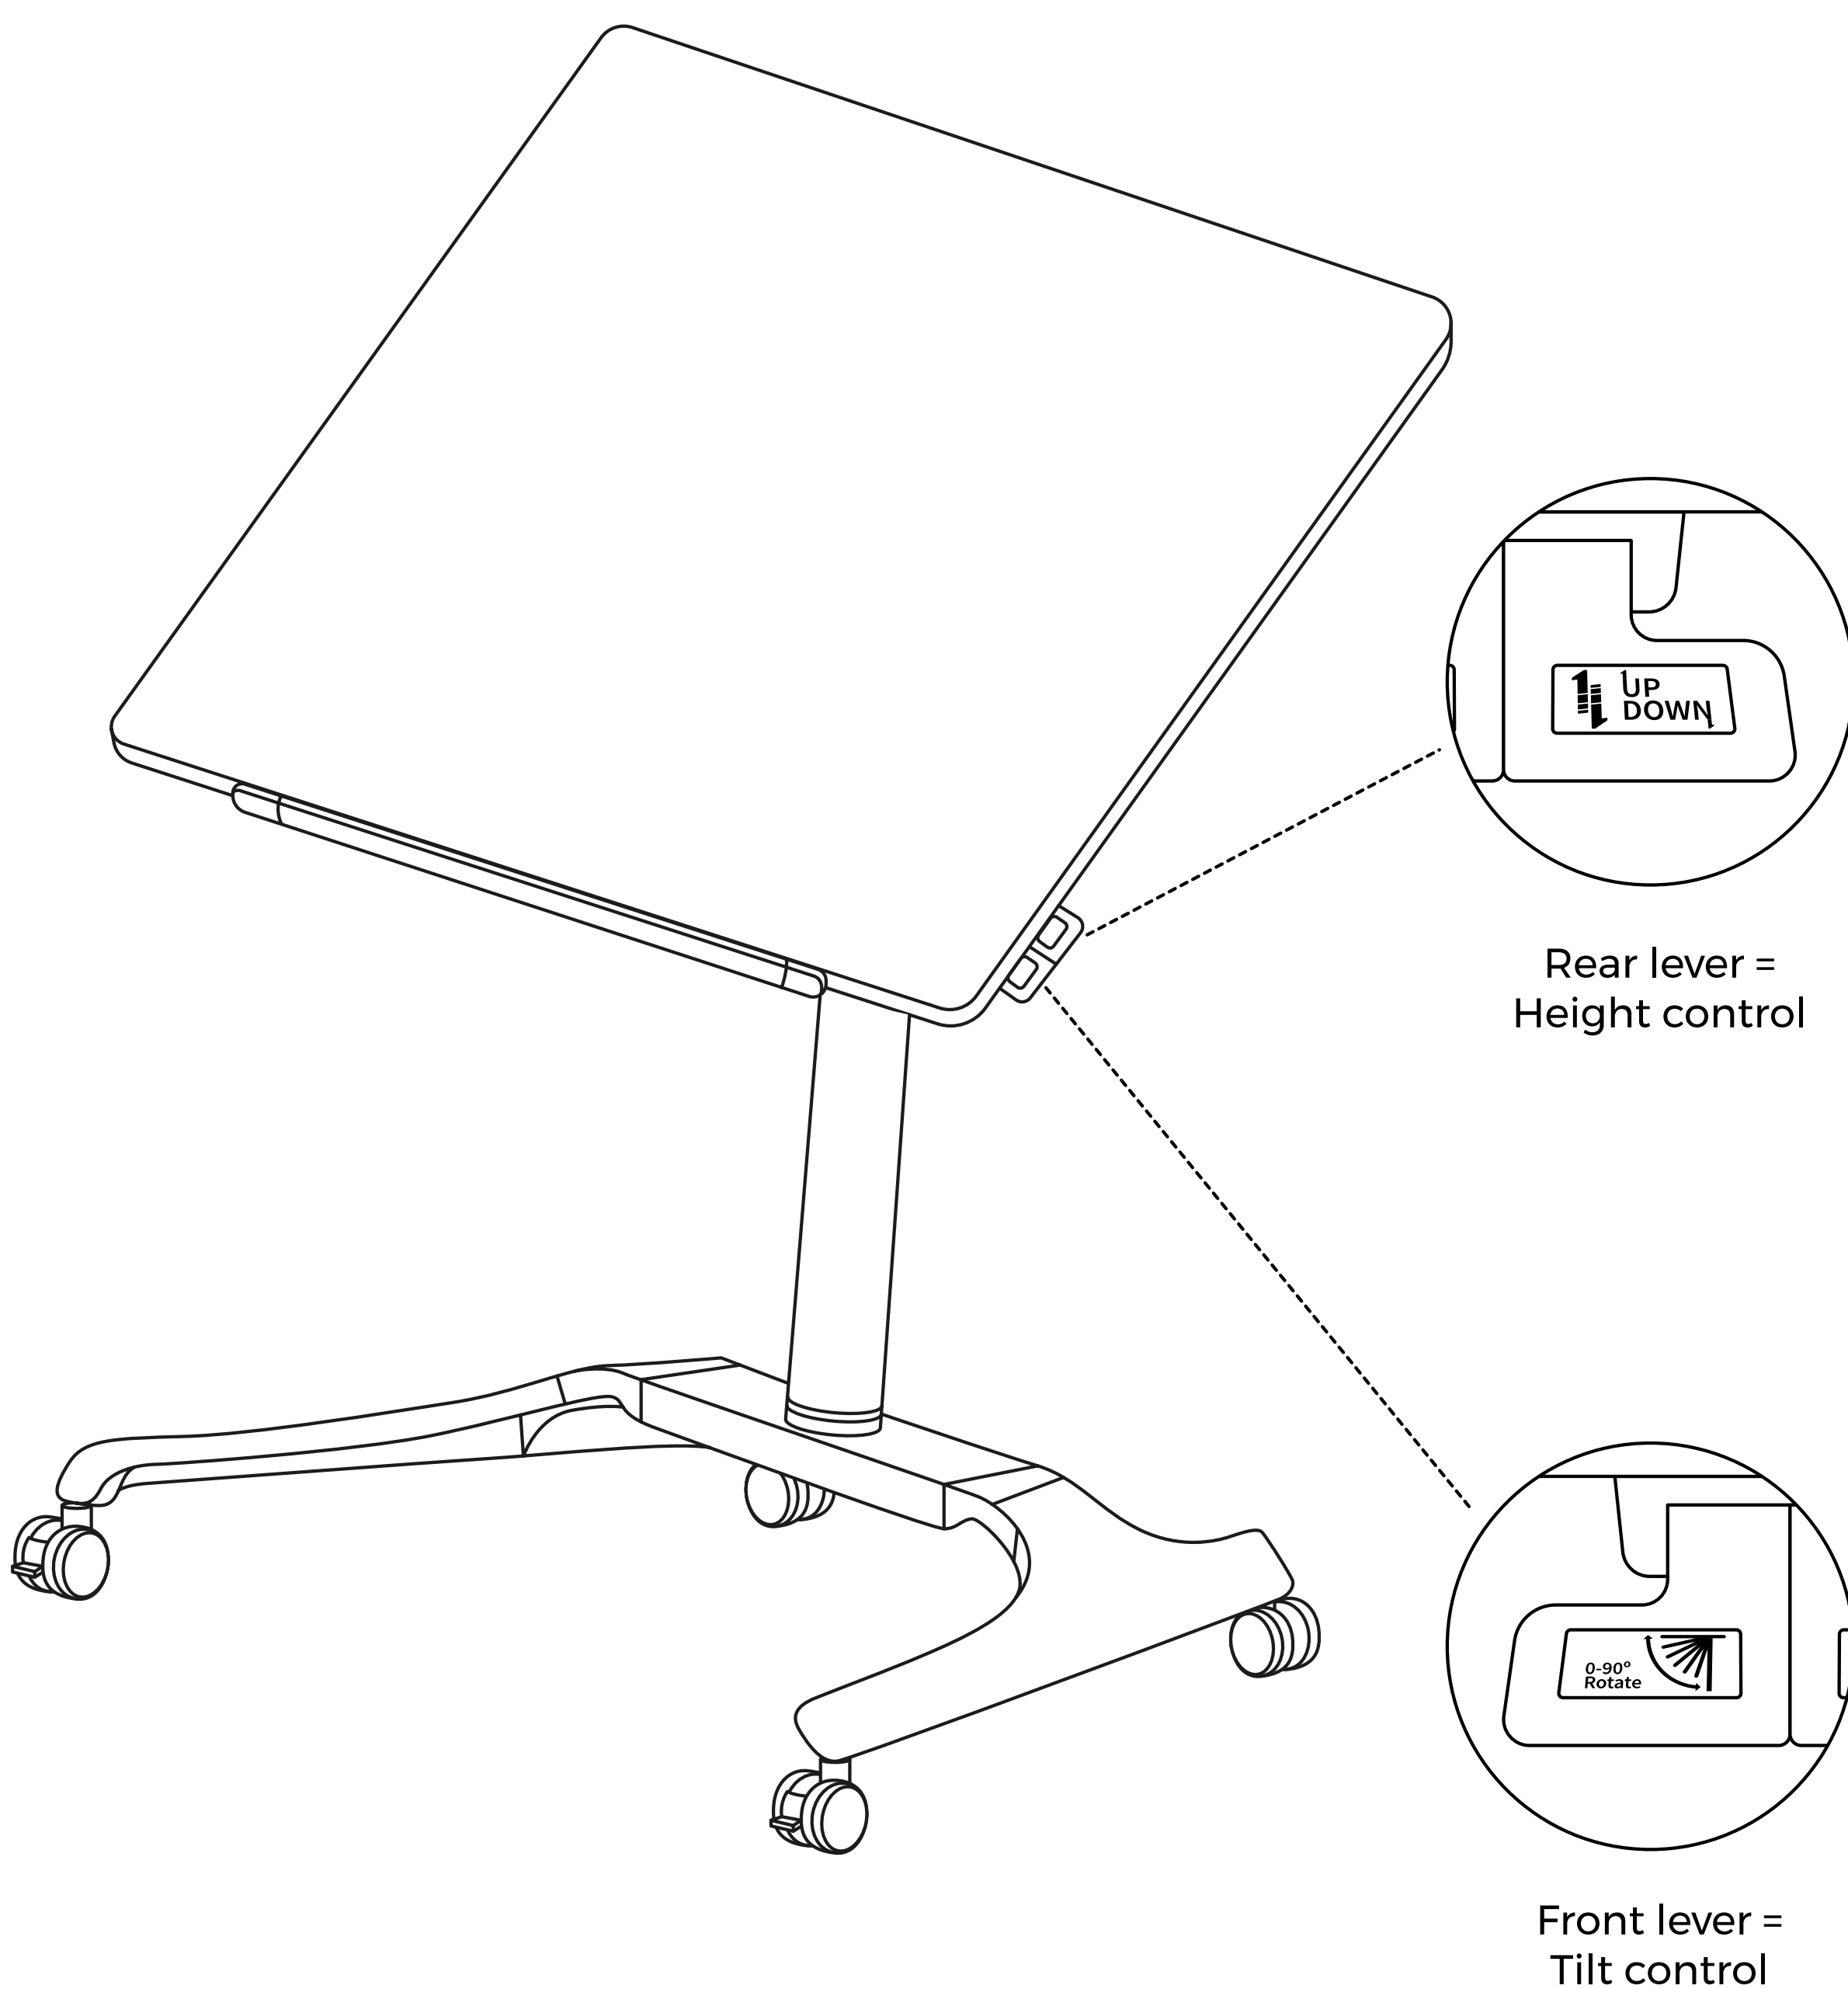



- 1** Secure the column and the lever to the top section.
Do not engage the levers.

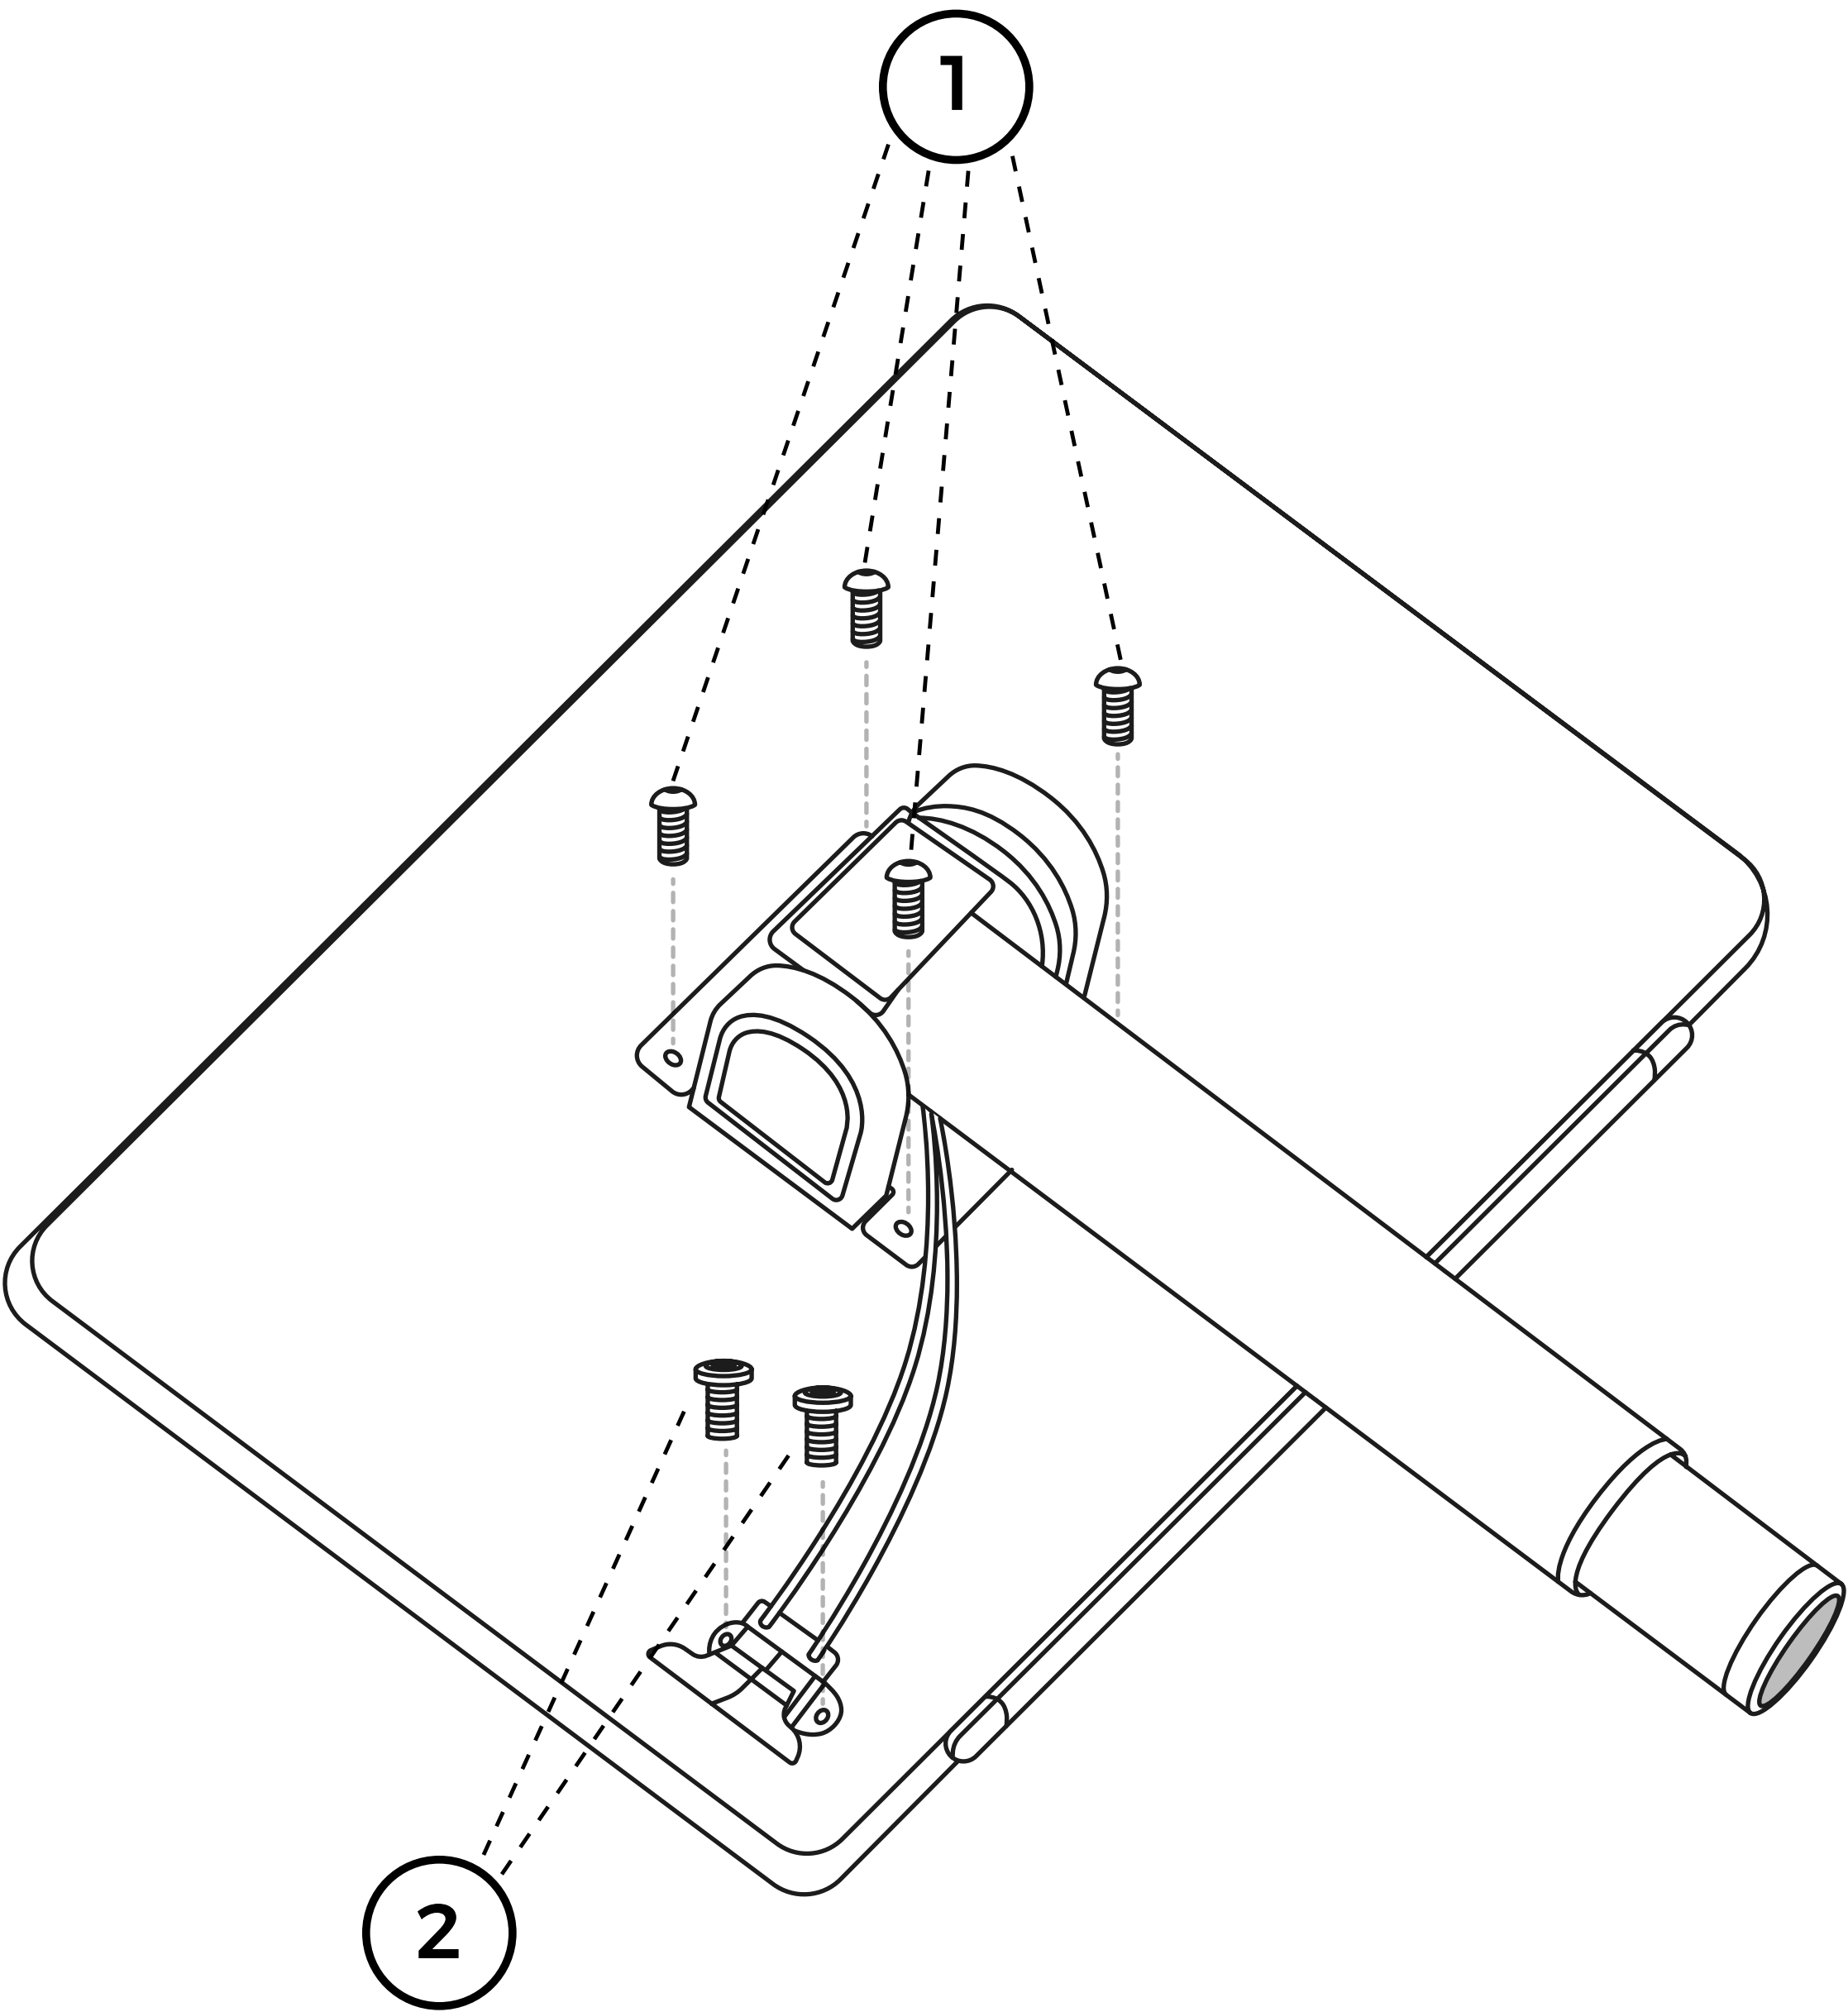


FITTINGS

1		M6x16 4 pcs
2		M6x12 2 pcs

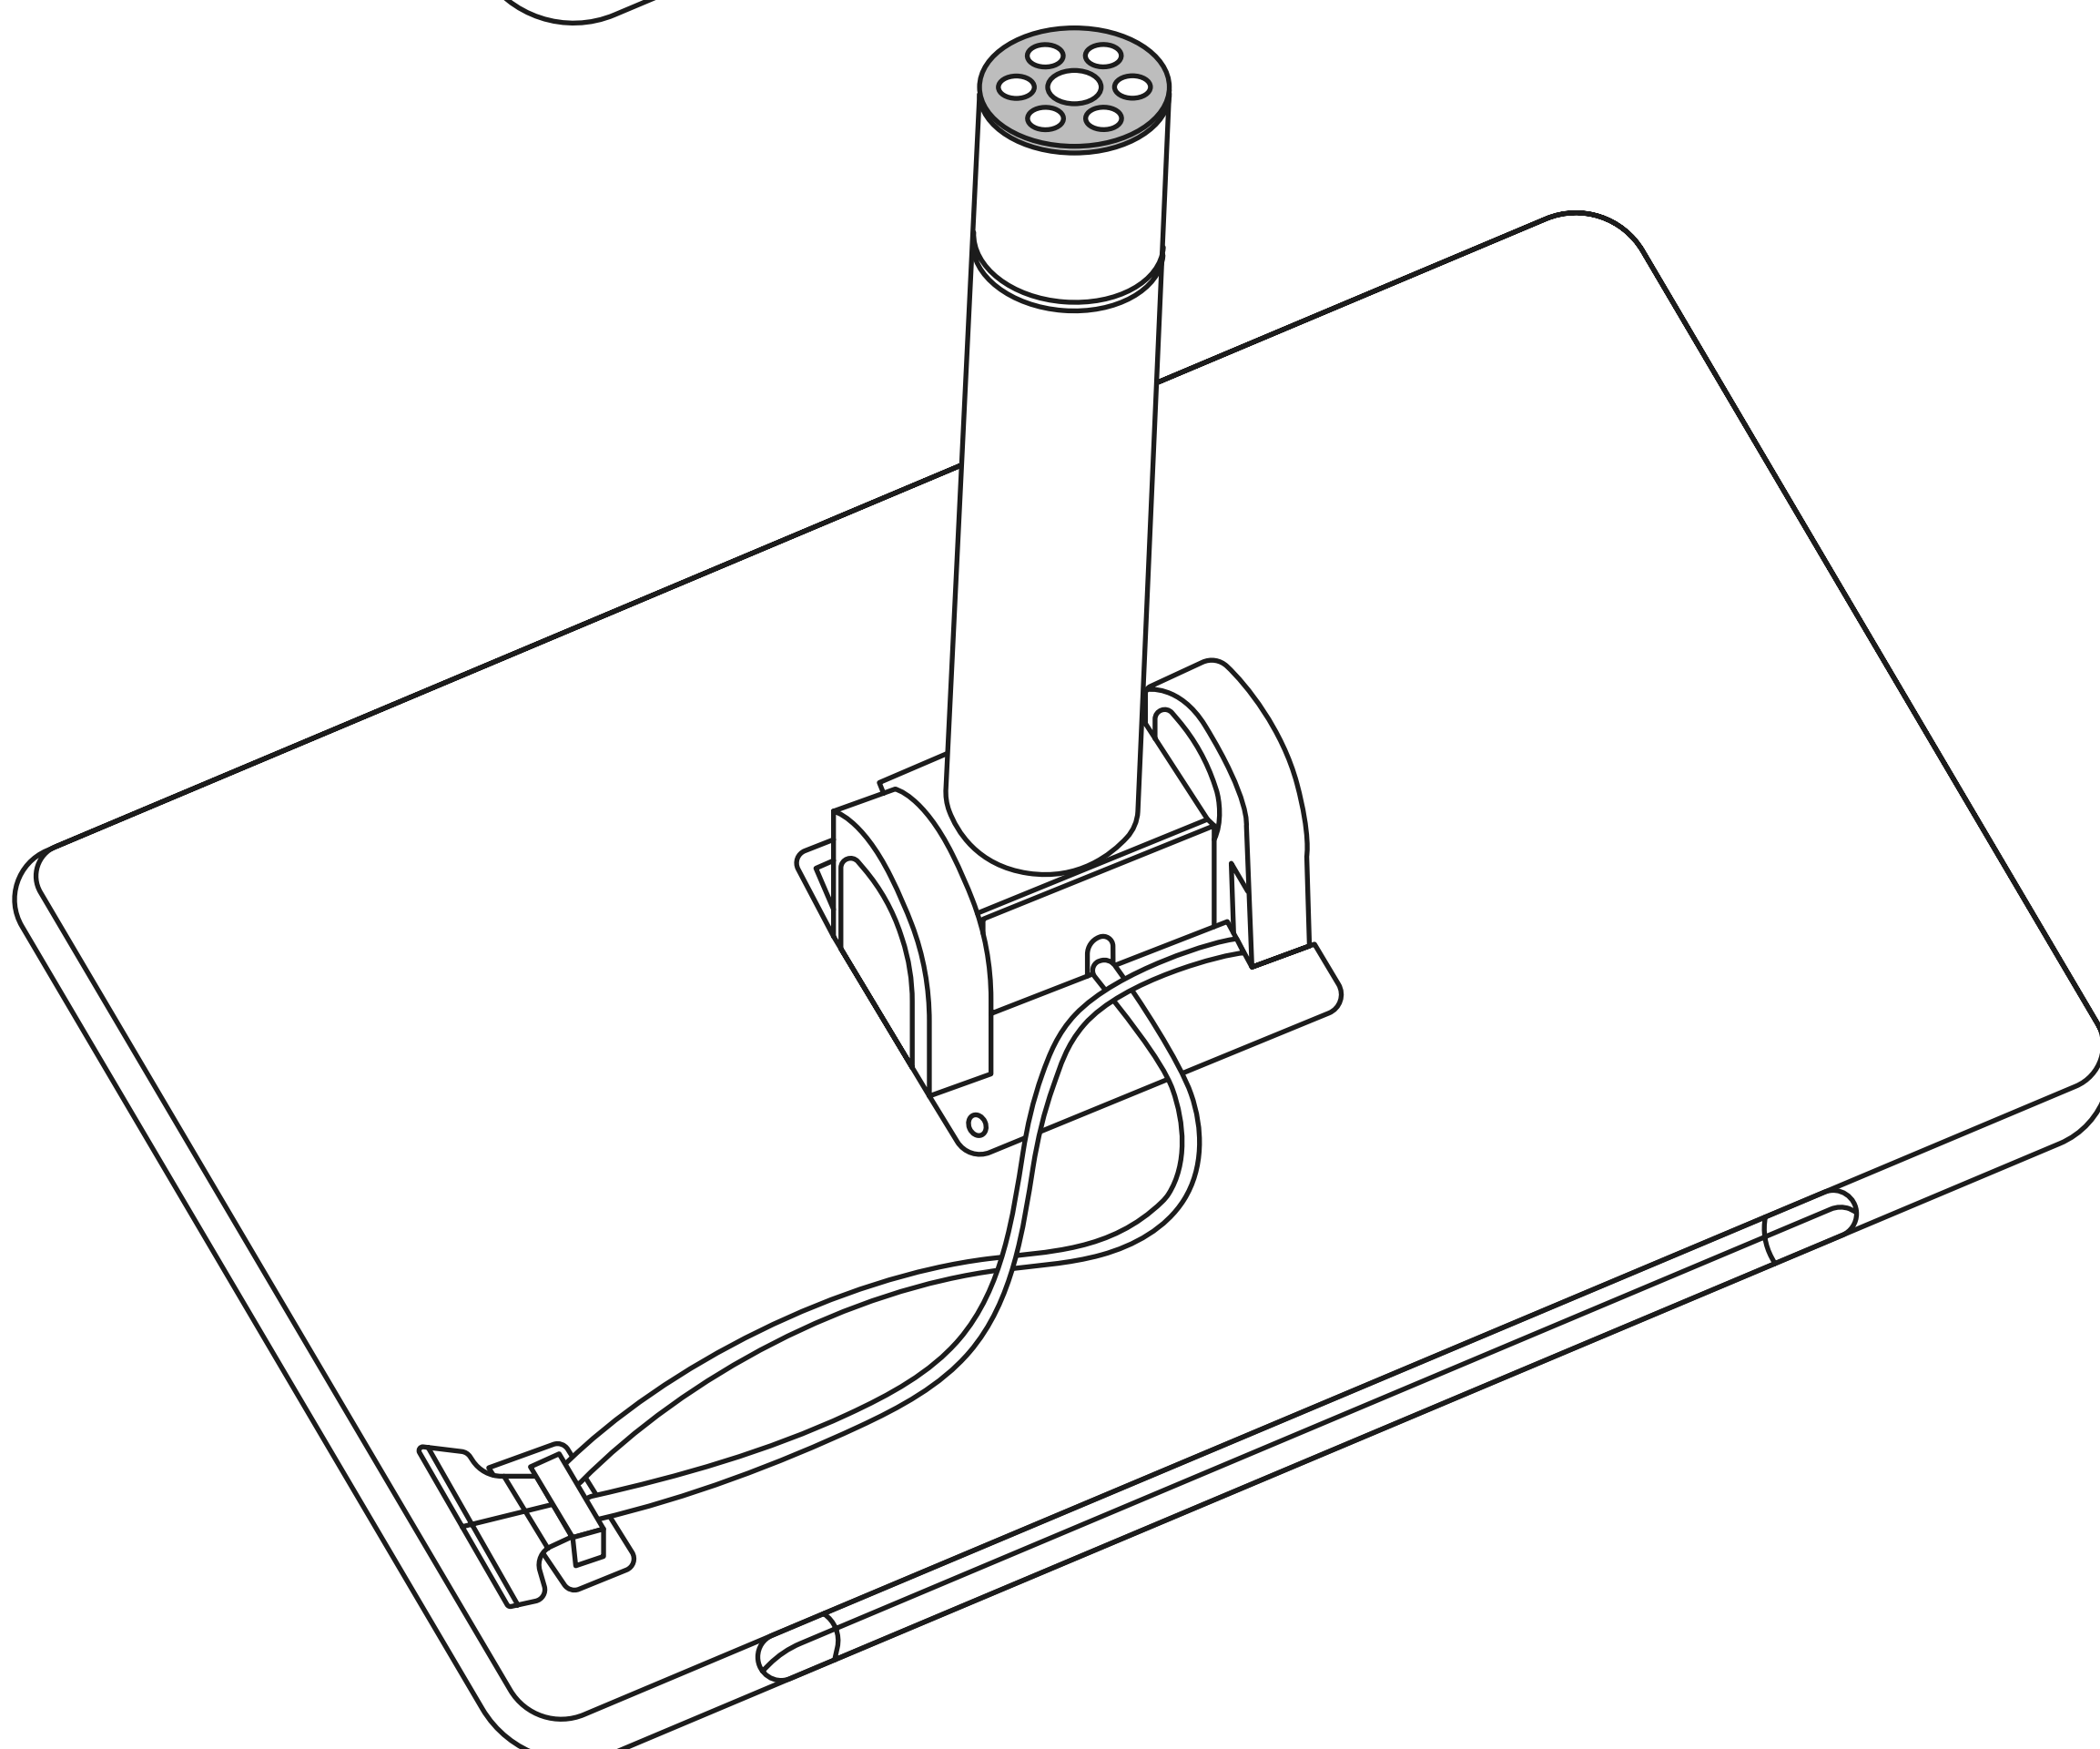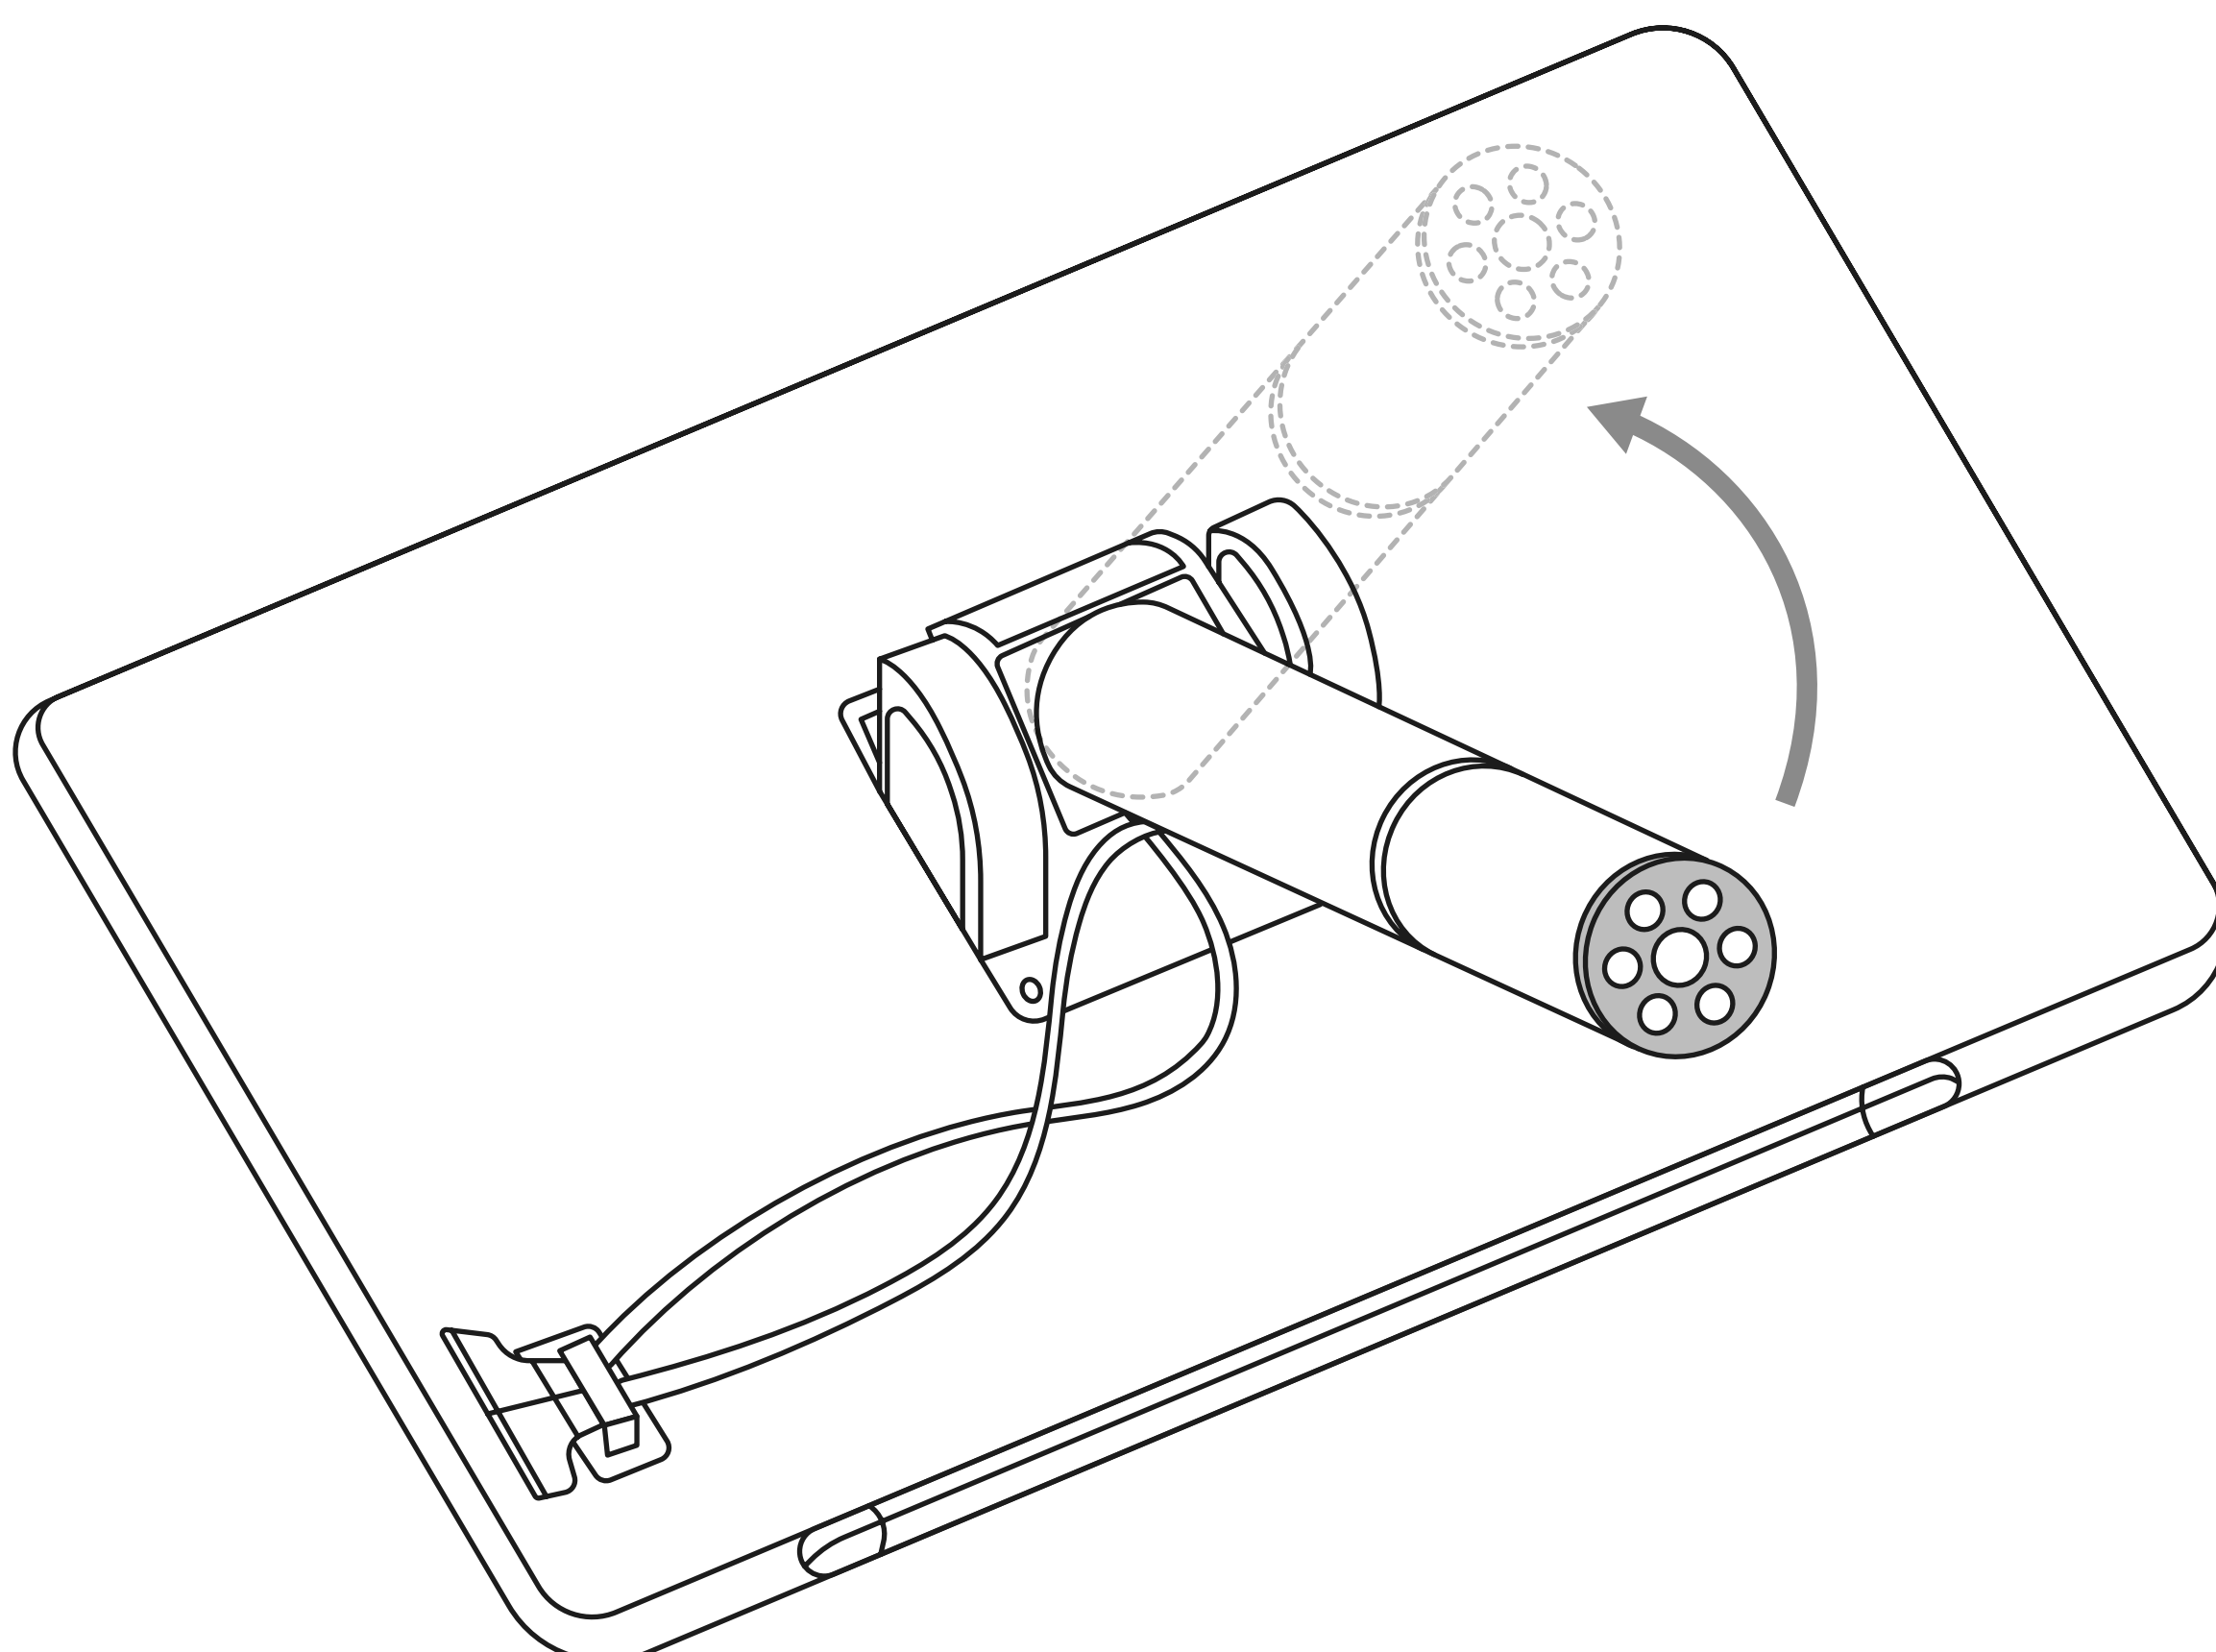




- 2** Press the angle adjustment lever (front lever) and straighten the column.

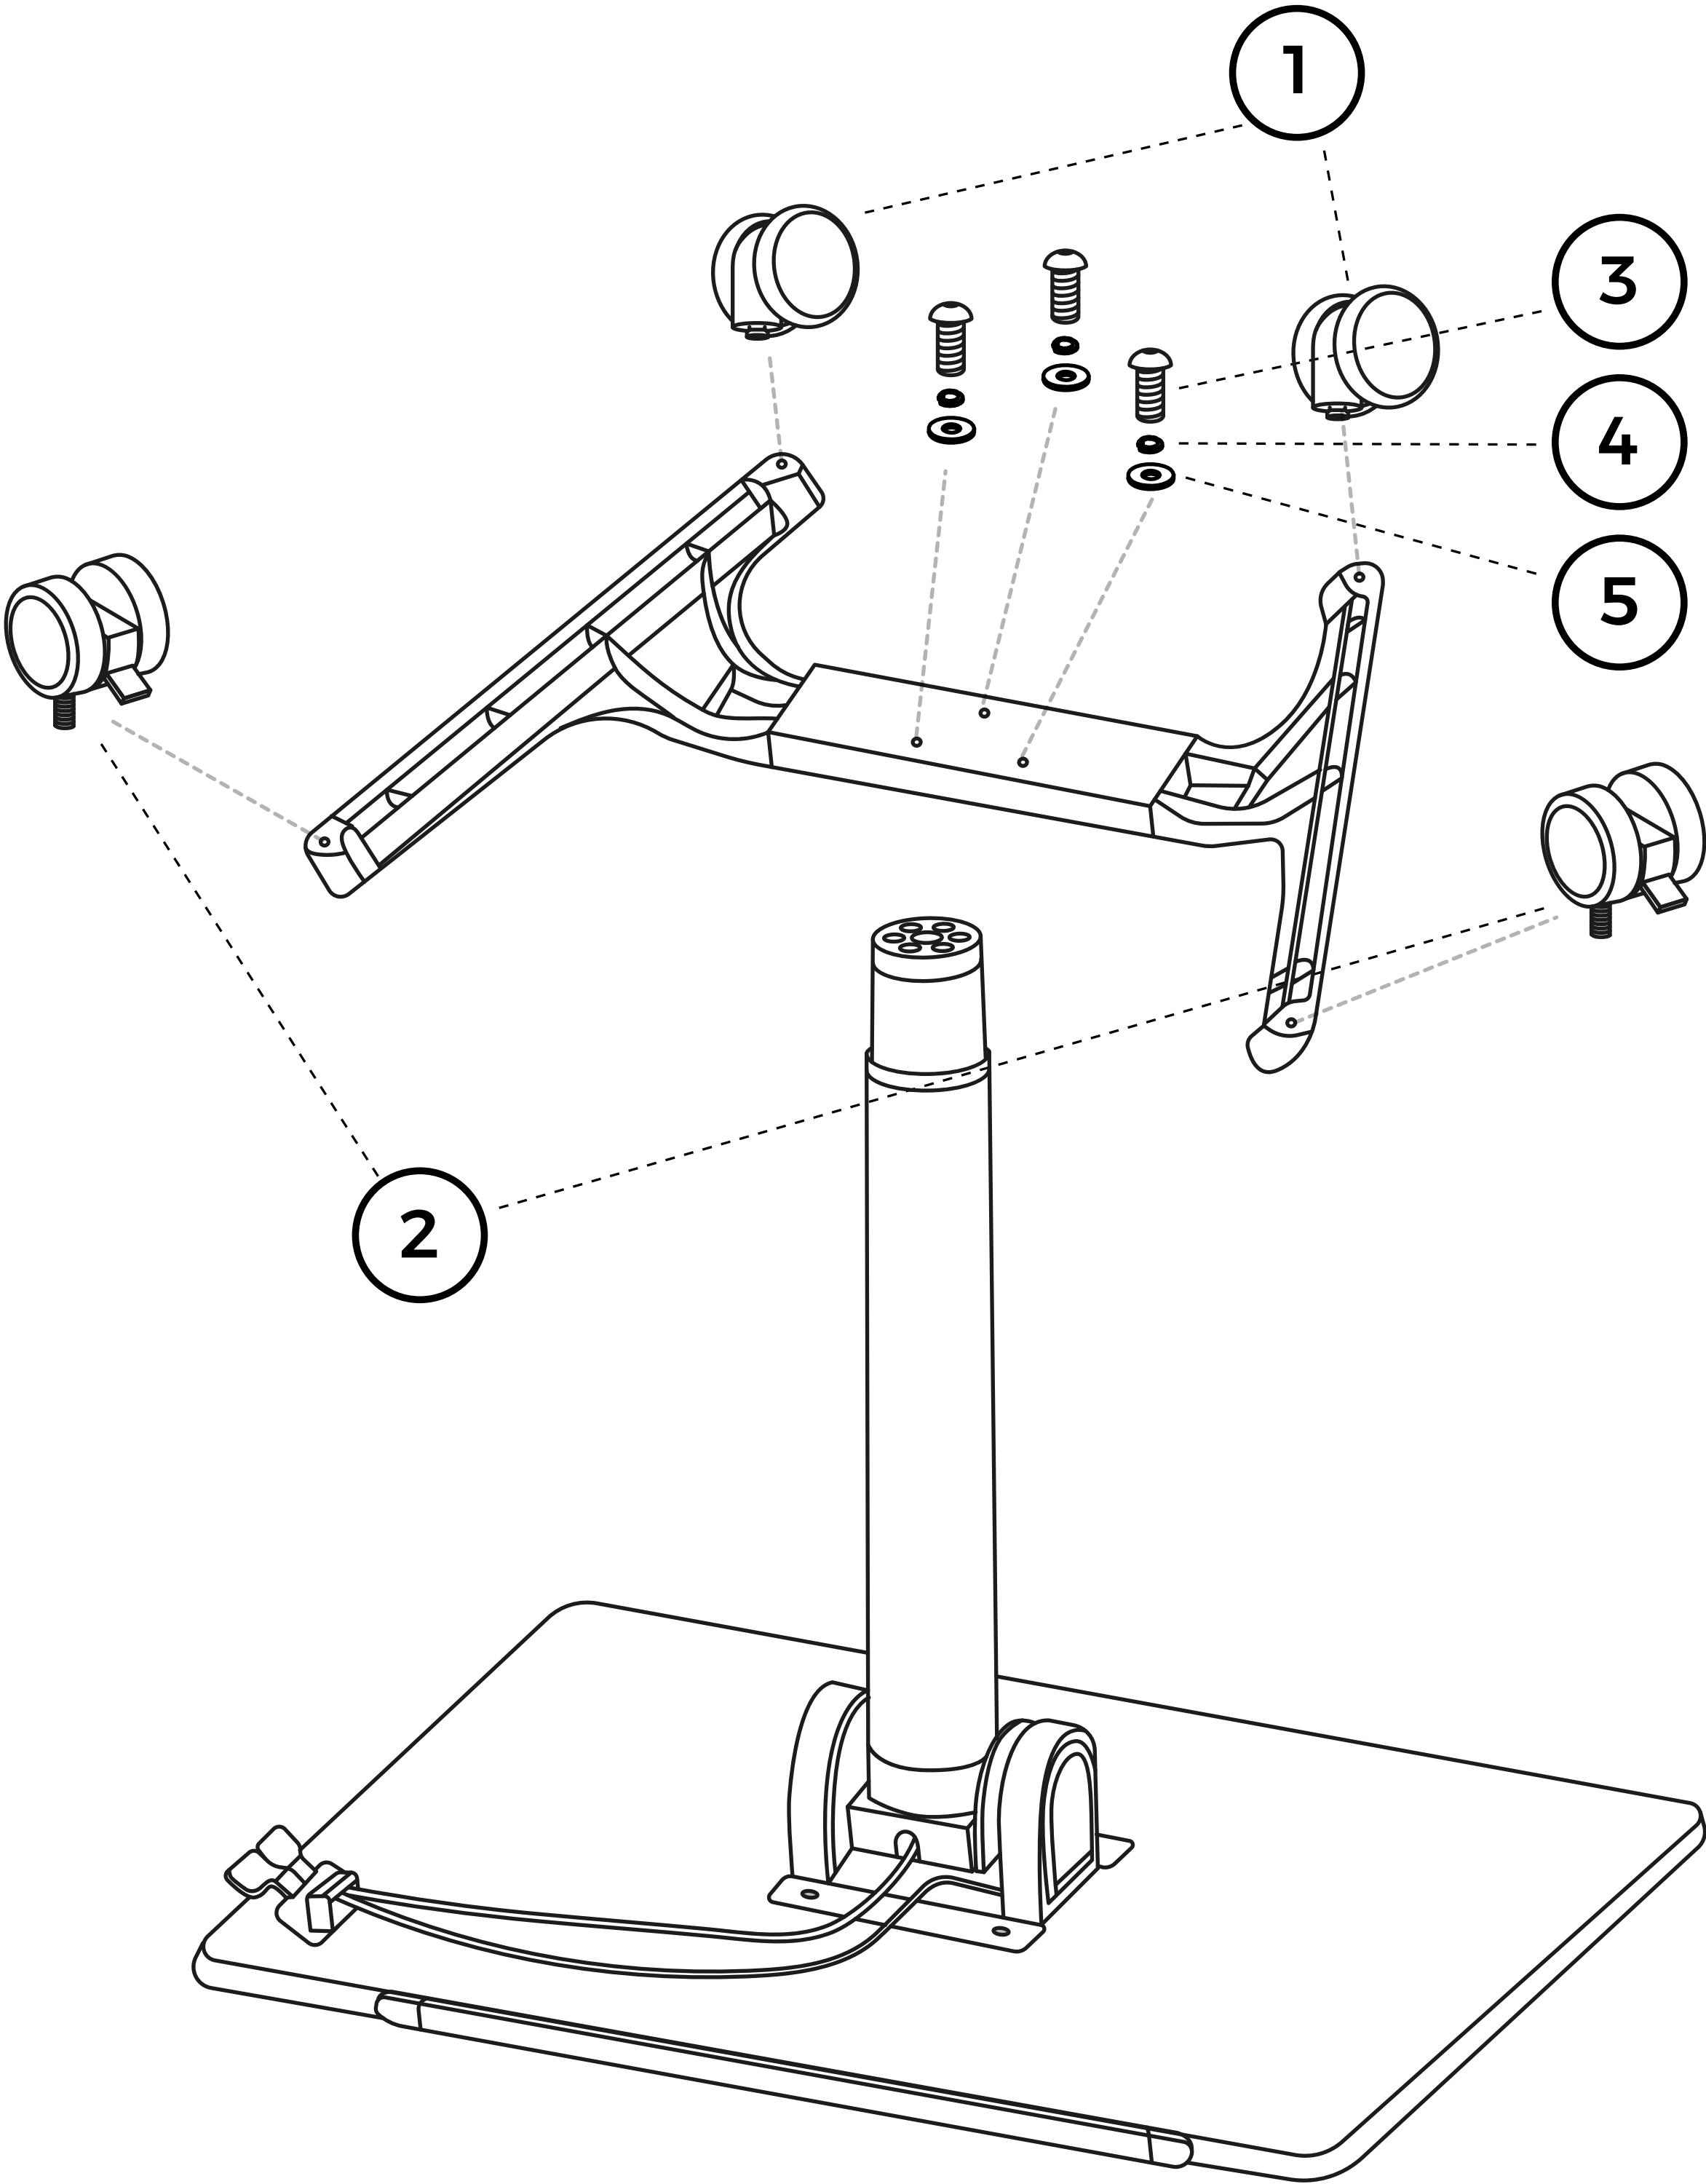

3 Secure the base to the column, making sure the long side of the supports faces the front of the tabletop.
Insert the casters into the supports.
Lift the locking lever before moving the table.



FITTINGS

			<div>1</div> <div></div> <div>2 pcs</div>	<div>2</div> <div></div> <div>2 pcs</div>
<div>3</div> <div></div> <div>M6x16 3 pcs</div>	<div>4</div> <div></div> <div>Ø 6 3 pcs</div>	<div>5</div> <div></div> <div>Ø 6 3 pcs</div>		




MODESTY PANEL




PRIVACY PANEL

MODESTY PANEL ASSEMBLY



1

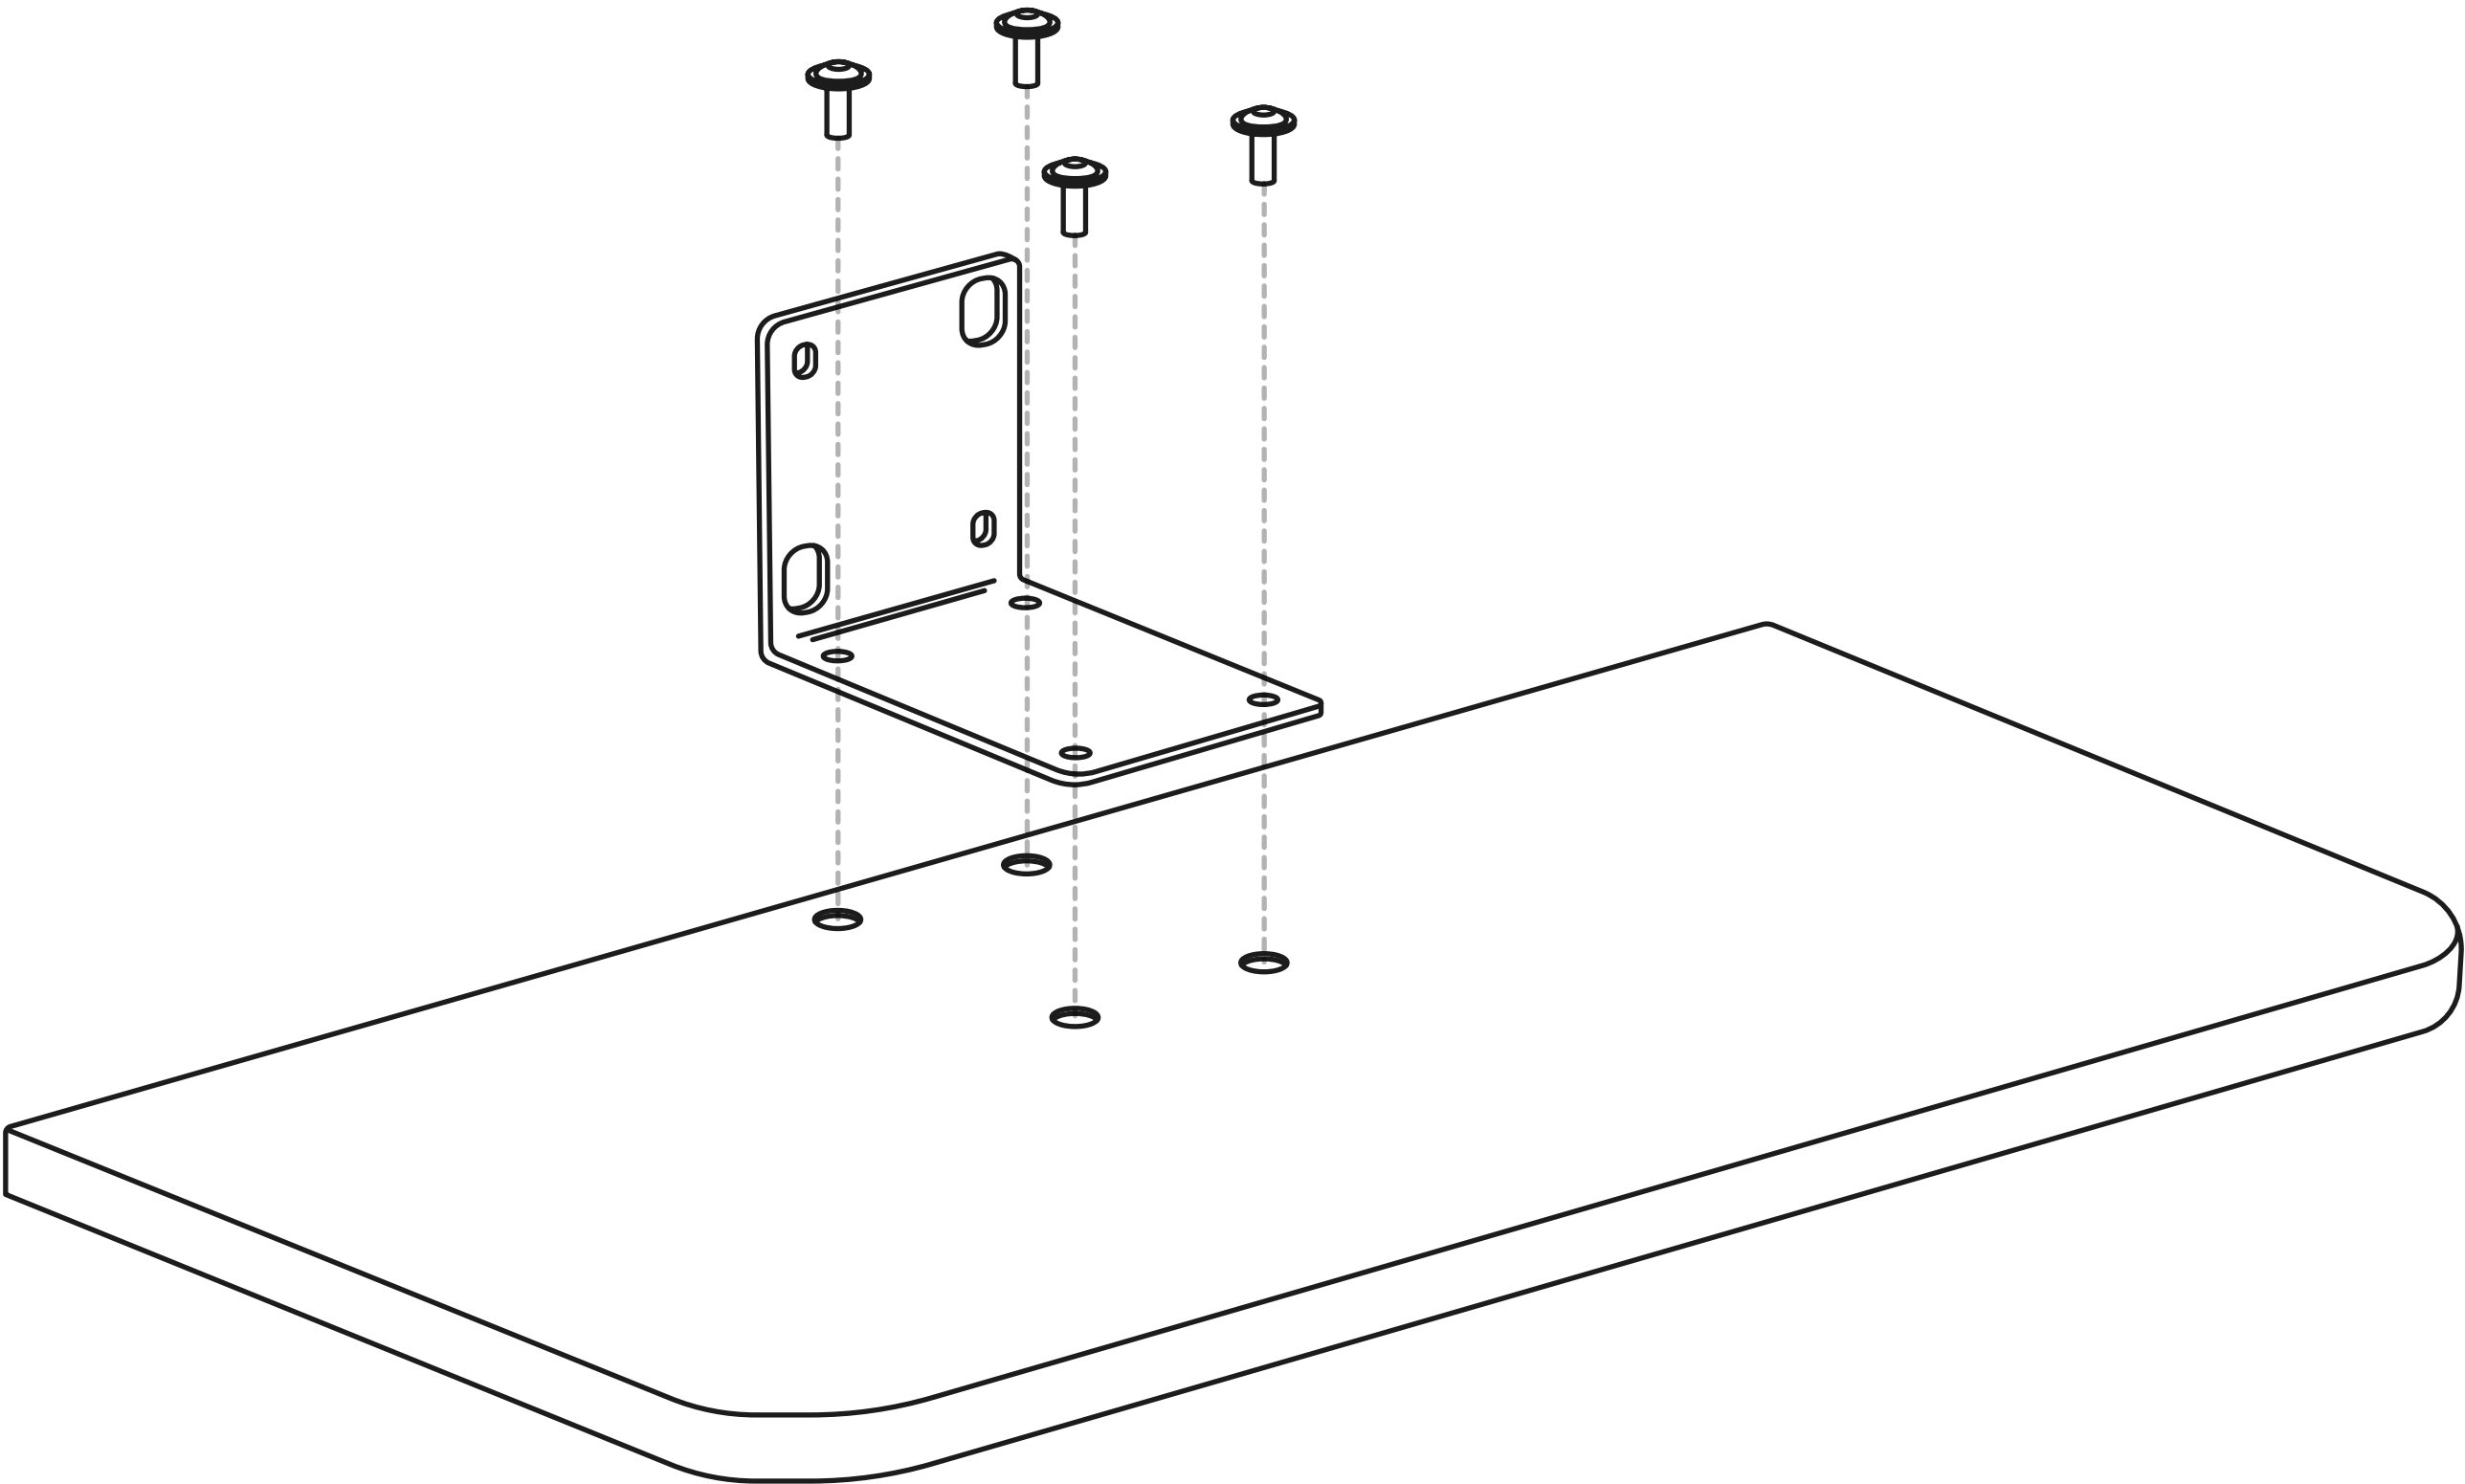

FITTINGS

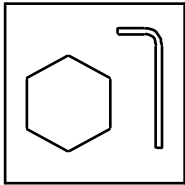


DIN 7380




M6x16
4 pcs

2 Remove and store the 2 screws.

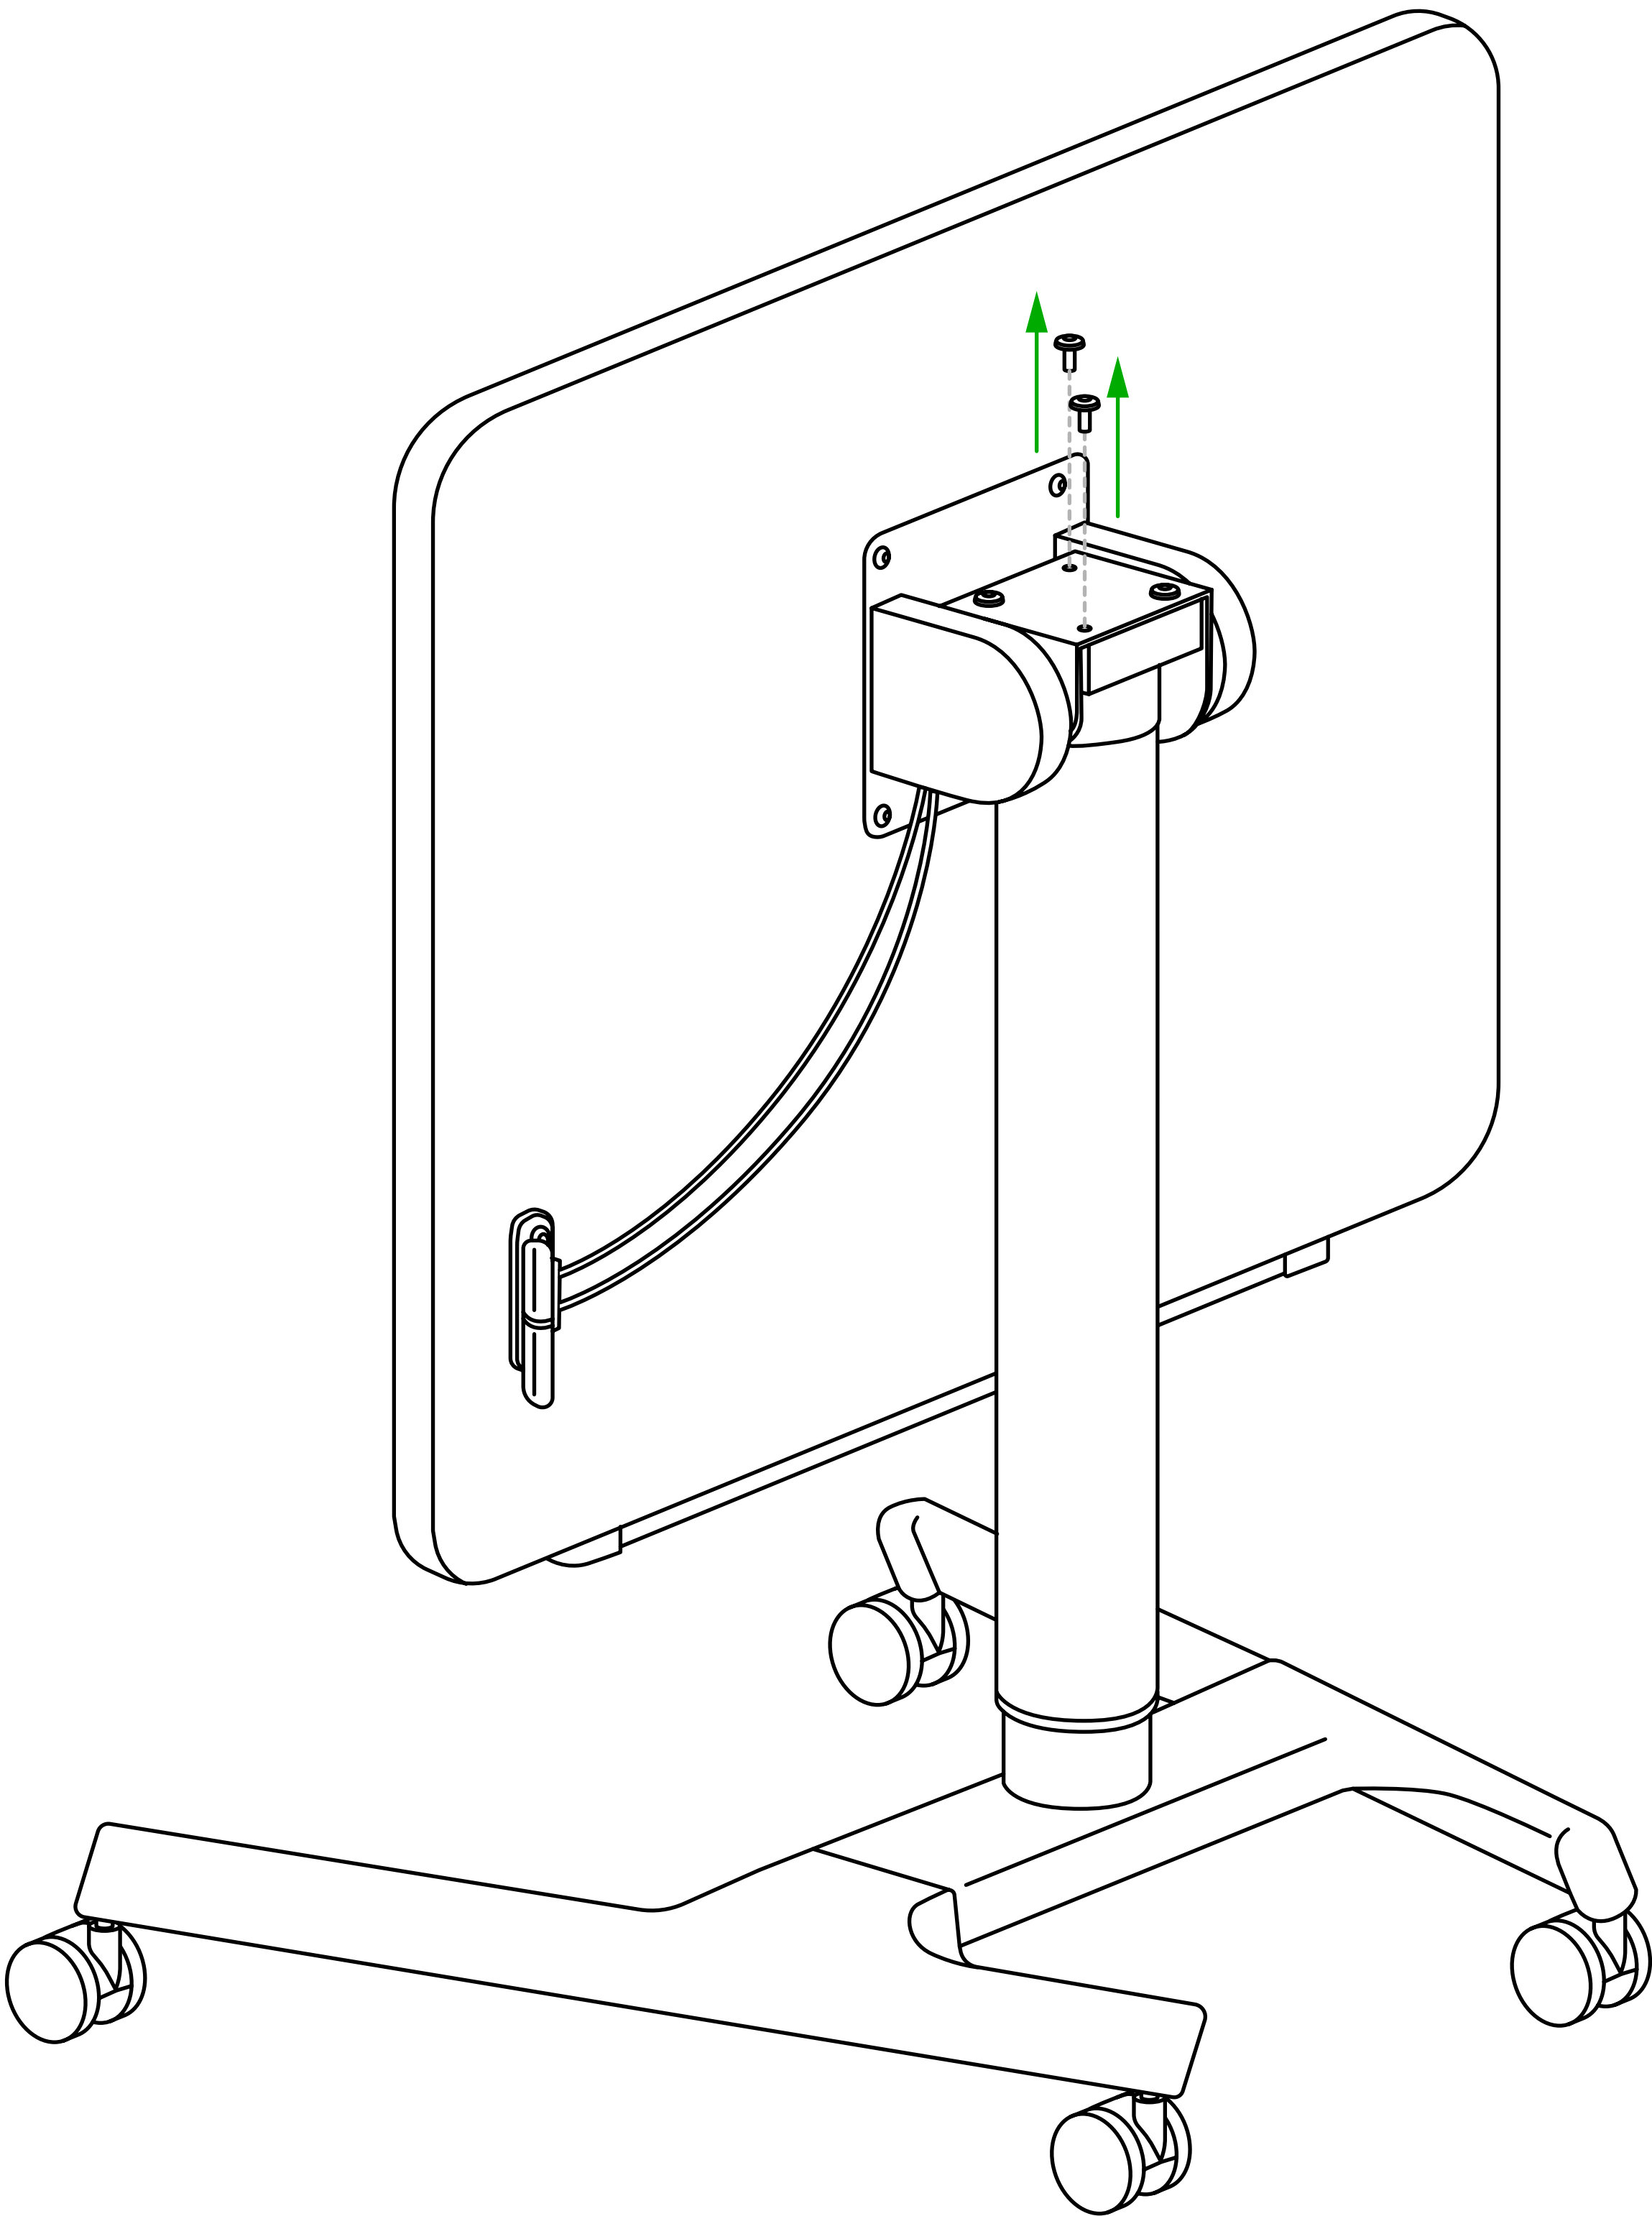


3 Secure the modesty panel with the 2 screws removed in step 2.

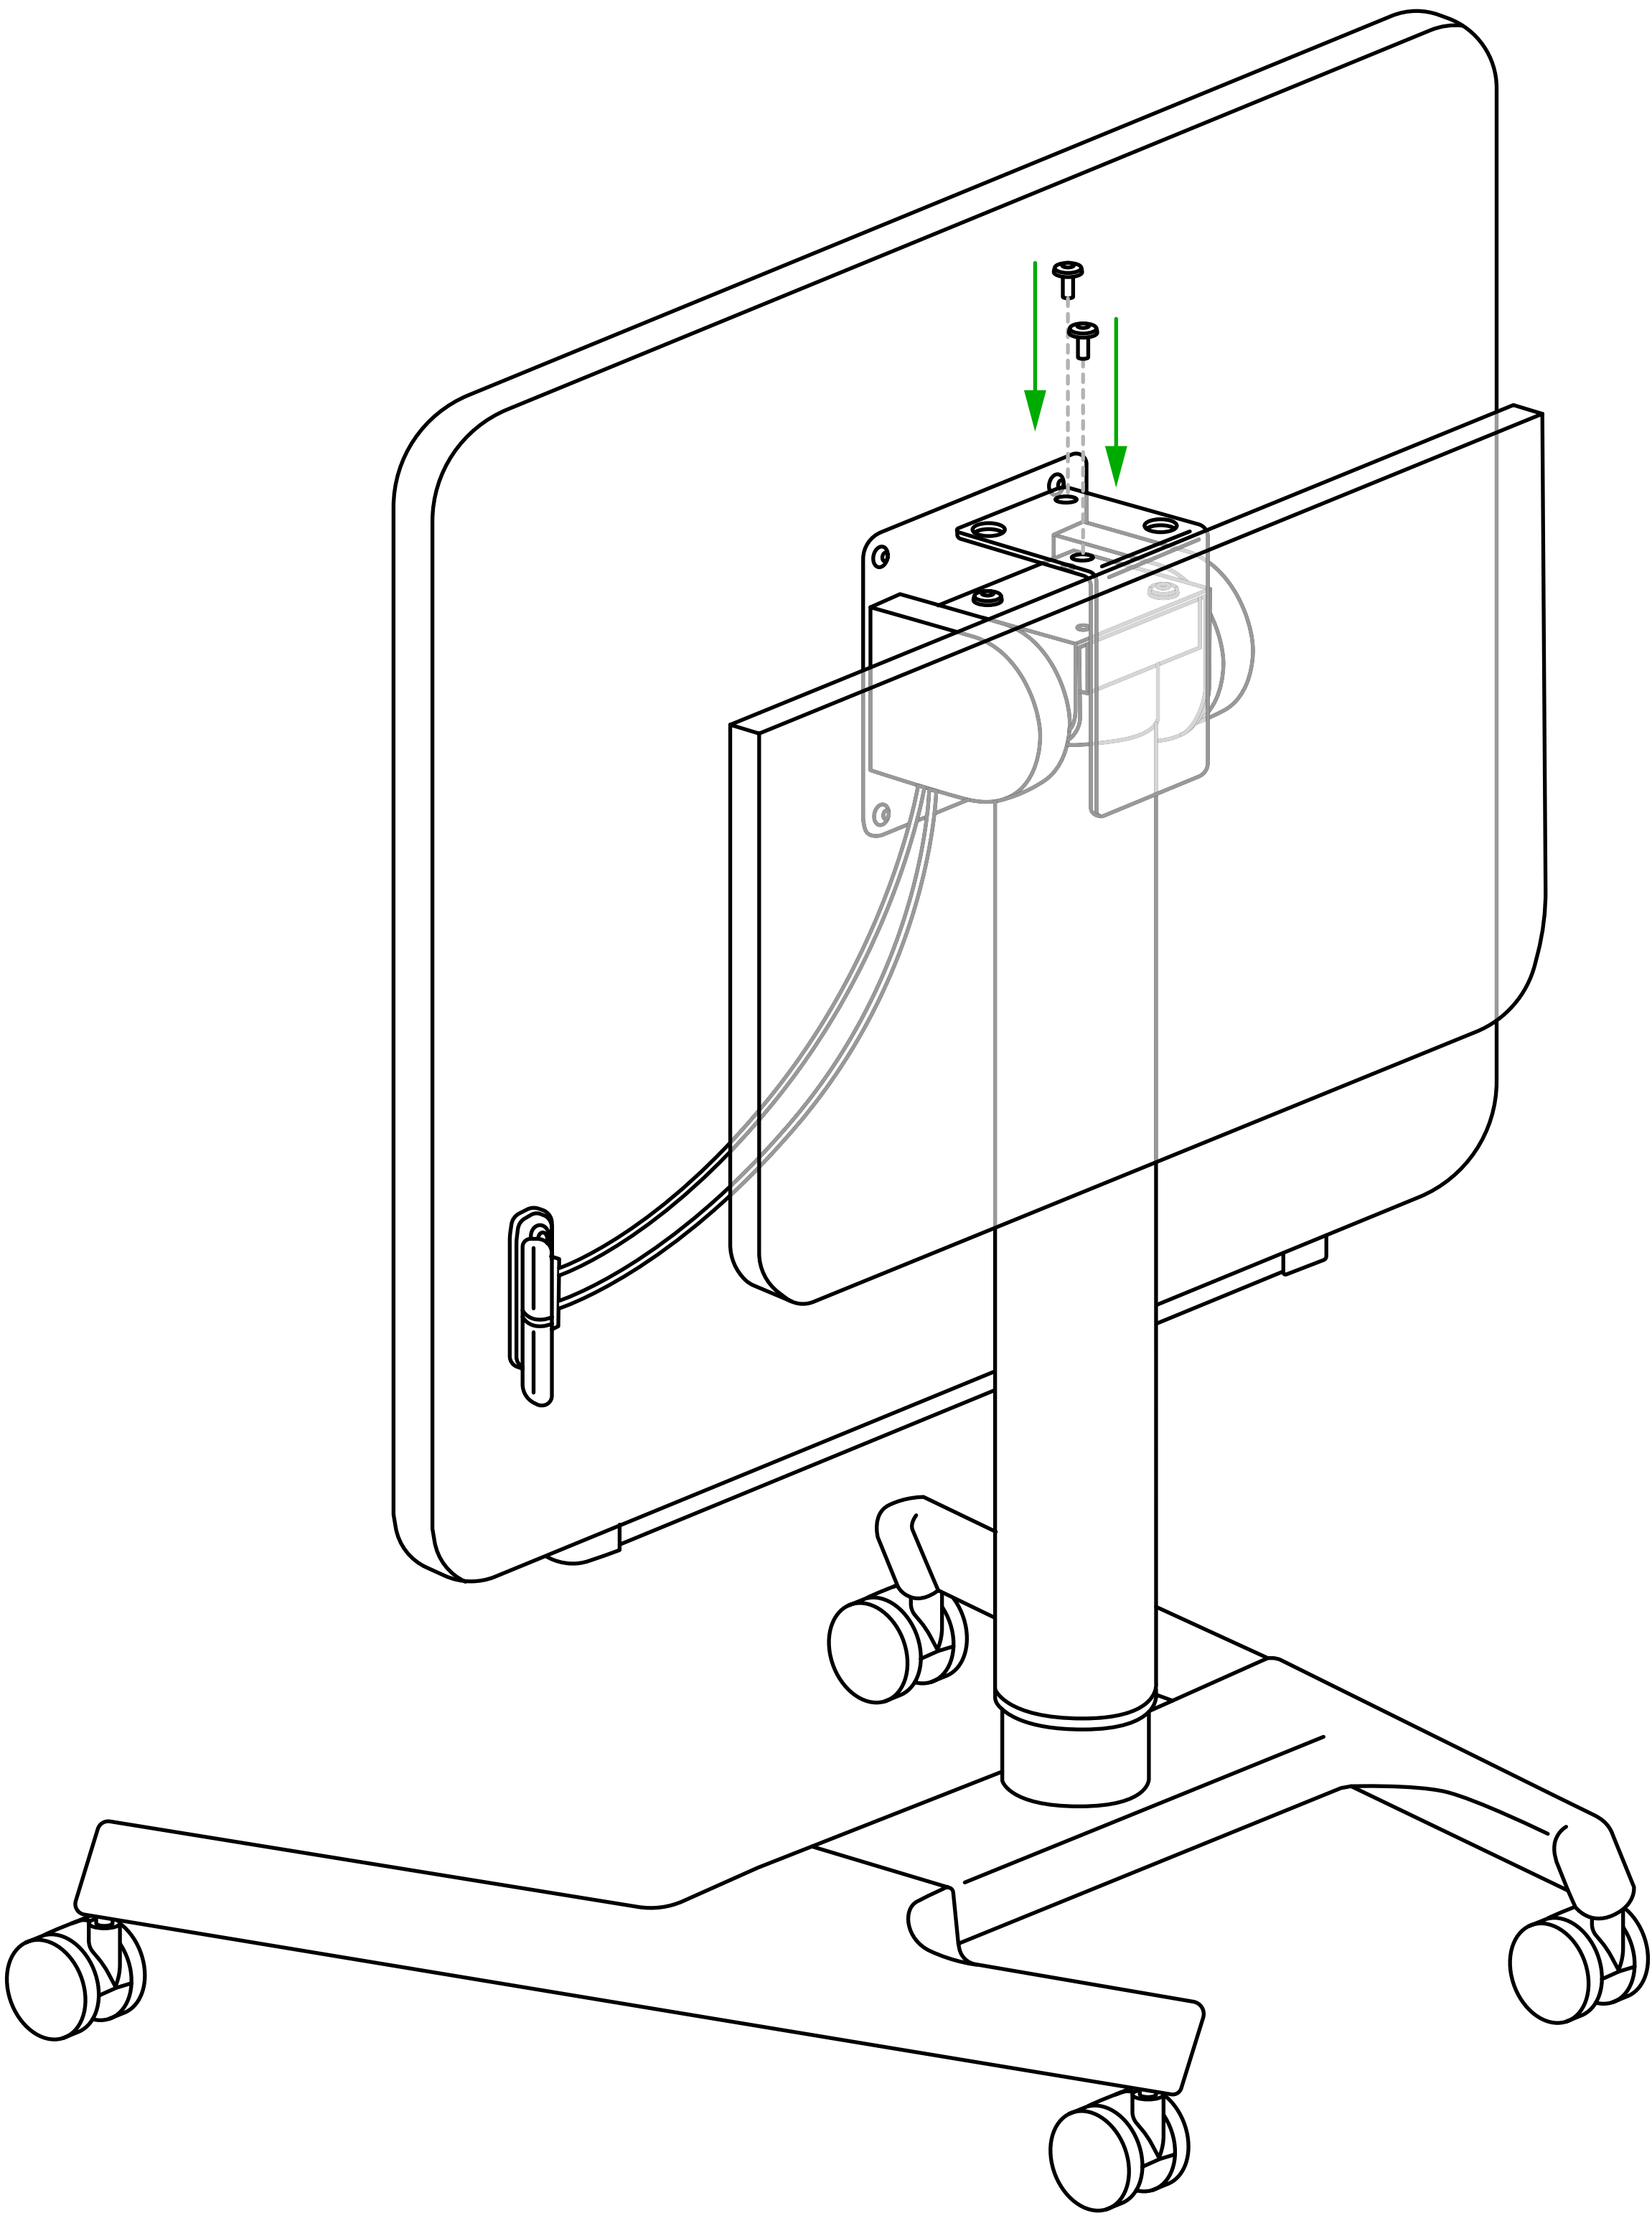




PRIVACY PANEL ASSEMBLY

1

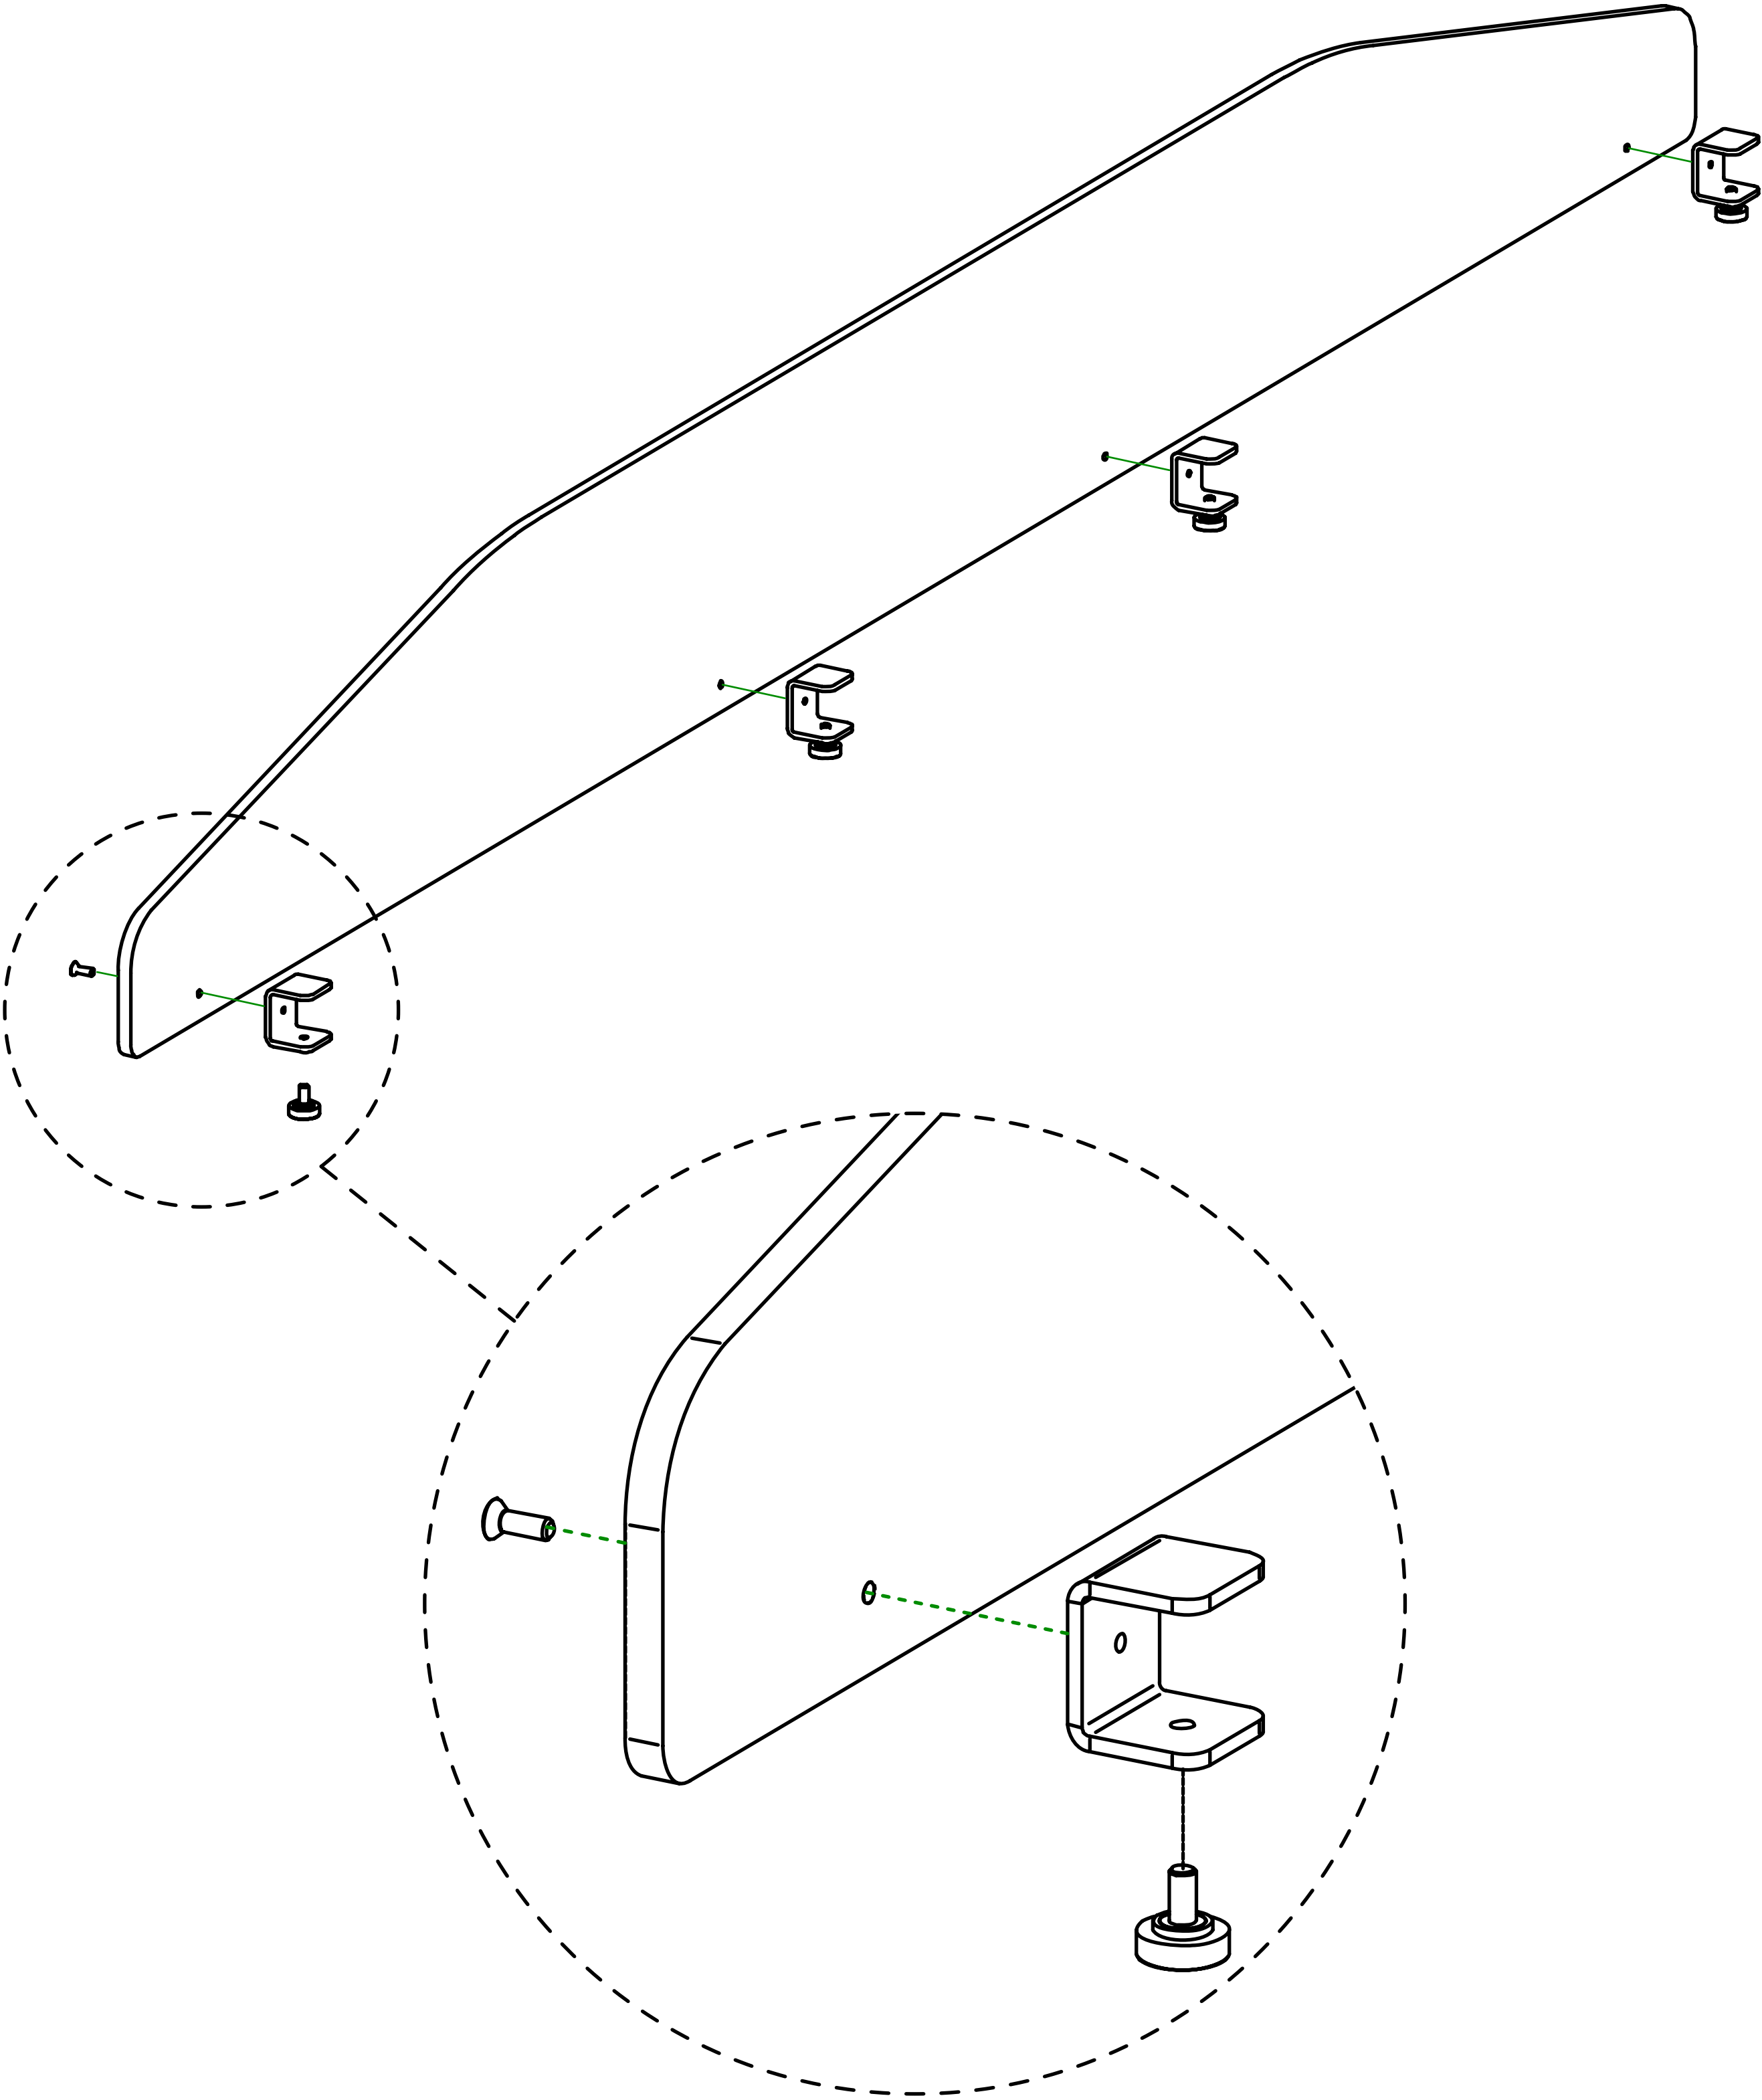


FITTINGS

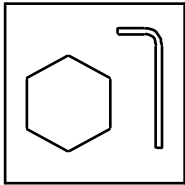

DIN 7991   M4 x 12
4 pcs

2 Tighten the two upper knobs manually.

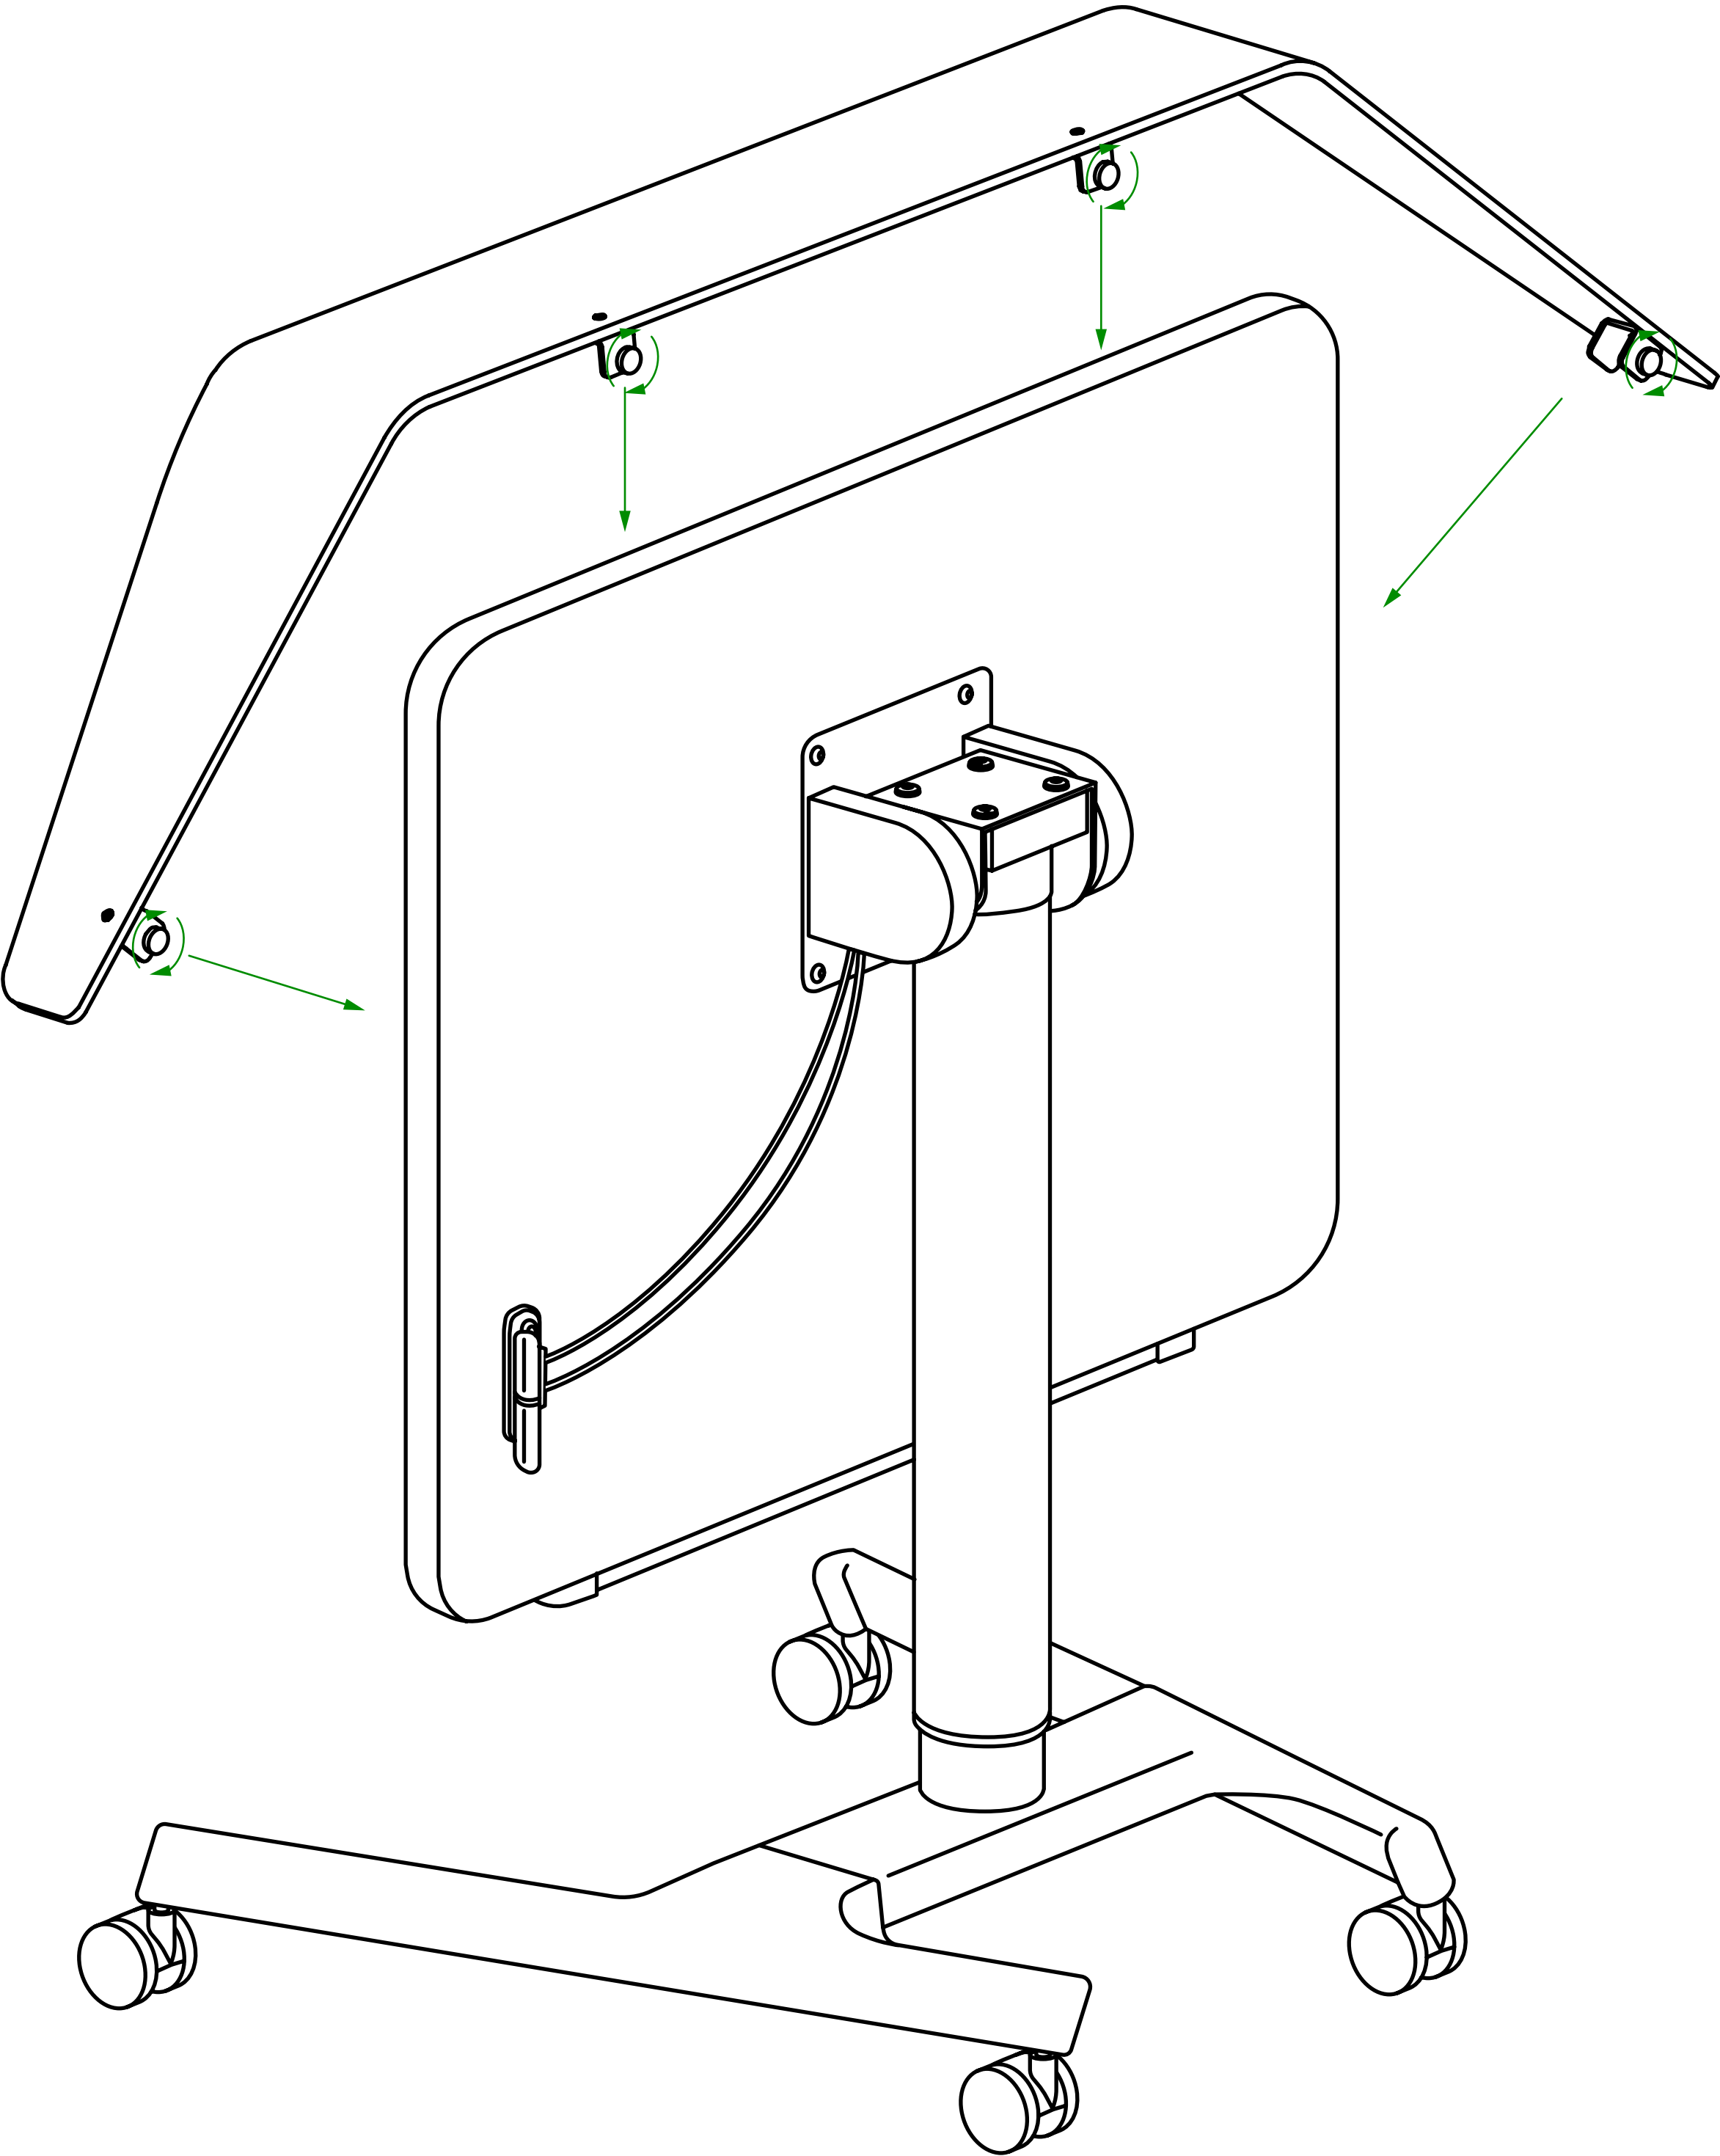

KREA
by mobel linea